3onedata
Make network communication more reliable

IES5328 Series Layer 2 Managed Industrial Ethernet Switch Quick Installation Guide

3onedata Co., Ltd.

Address: 3/B, Zone 1, Baiwangxin High Technology Industrial Park, Xili, Nanshan District, Shenzhen

Website: www.3onedata.com

Tel: +86 0755-26702688

Fax: +86 0755-26703485

【Package Checklist】

Please check the integrity of package and accessories while first using the switch.

1. Industrial Ethernet switch
2. Power line x2 (AC products only)
3. Foot pad x4
4. Rack-mounting lug x2
5. Certification
6. Warranty card

If any of these items are damaged or lost, please contact our company or dealers, we will solve it ASAP.

【Product Overview】

This series are managed layer 2 industrial Ethernet switches.


The models are:

Model I. IES5328-16GT4GS8GC-2HV (16 Gigabit copper ports + 4 Gigabit SFP slots + 8 Gigabit Combo ports, 2*110/220VAC power supplies)

Model II. IES5328-16GT4GS8GC-2LV (16 Gigabit copper ports + 4 Gigabit SFP slots + 8 Gigabit Combo ports + 2*24/48VDC power supplies)

【Panel Design】

➢ **Front panel**



Model I, Model II

➢ **Rear panel**



Model I





Model II

1. Gigabit Combo port (G1-G8)
2. Gigabit Ethernet copper port (G9-G24)
3. Gigabit SFP interface (G25-G28)
4. Ethernet port indicator (G1-G28)
5. Console port
6. Device running state indicator (RUN)
7. Restore default settings (RESET)
8. Alarm indicator (ALM)
9. Power indicator (P1/P2)
10. Lugs
11. Terminal blocks 2 for relay output
12. AC power supply input (PWR2)
13. Grounding screw (M4)
14. AC power supply input (PWR1)
15. Terminal block 1 for relay output
16. DC power supply input (PWR2)
17. DC power supply input (PWR1)


【Mounting Dimension】


Unit: mm



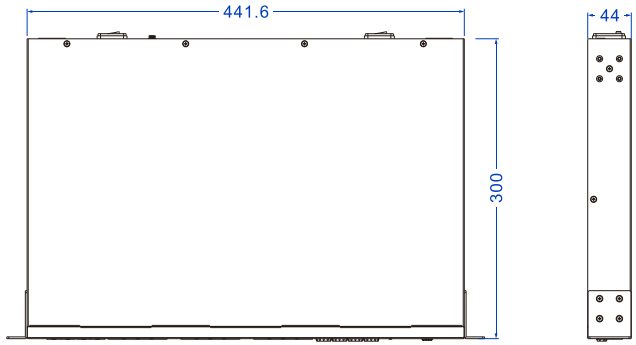

Model I



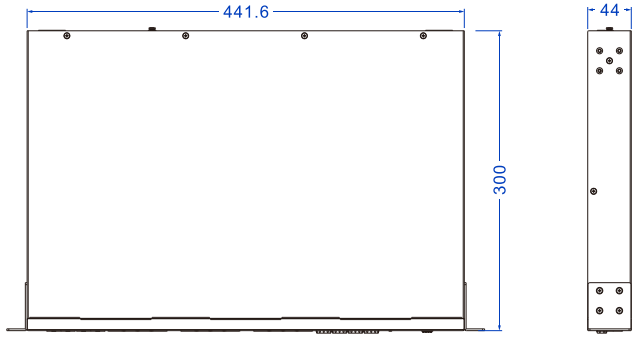

Model II

Notice Before Mounting:


- Don't place or install the device in area near water or moisture, keep the relative humidity of the device surrounding between 5%~95% without condensation.
- Before powering on the device, check the power specifications supported by the device to prevent device damage due to overvoltage.
- The device surface temperature is high after running; please don't directly contact to avoid scalding.

【Install Rack-Mounted Device】


This product adopts rack-mounting, mounting steps as below:

Step 1 Select the device mounting position and ensure enough mounting size is reserved.

Step 2 Adopt 4 bolts to install the mounting lugs in the device position as figure below.

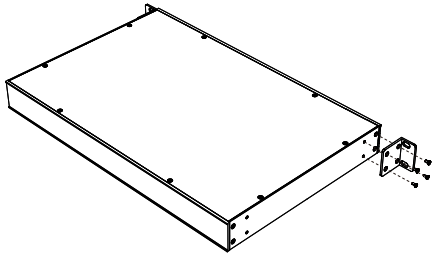

Step 3 Place the device in the rack; adopt 4 bolts to fix two sides mounting lugs in the rack.

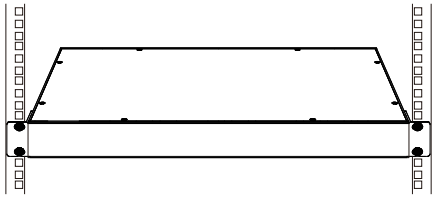

Step 4 Check and confirm the product is mounted firmly on the rack, then mounting ends.

【Disassembling Device】

Step 1 Power off the device.

Step 2 Adopt screw driver to loosen the 4 bolts fixed on the mounting lugs in the rack.

Step 3 Shift out the device from rack, disassembling ends.

Notice Before Powering on:

- Power ON operation: First insert the power supply terminal block into the device power supply interface, and then plug the power supply plug and power on.
- Power switch "—" means power ON, "O" means power OFF.
- Power OFF operation: First, put the powers switch to the "O" side and then disconnect the power supply. Finally disconnect the connector between the device and the power cord. Please notice the operation order above.
- Please be aware of the power input range supported by the device before powering on. Use the recommended voltage of the device to avoid device damage.


【Power Supply Connection】

➢ **AC power supply**



The Model I of this device provides 2 AC power supply access ports which come with a switch.
Voltage range: 110/220VAC (85~264VAC/DC).

➢ **DC power supply**



Model II of this device provides 2 DC power supplies via a 5-pin 5.08mm pitch terminal block. The power supply occupies 3 pins on the left side and supports anti-reverse connection.
Voltage range: 24/48VDC (18~72VDC).


【Restore Default Settings】



RESET is restoring default settings button. Device Restoring default settings steps as follows: press and hold the RESET button, power on the device again, wait for about 3~4 seconds to restore the factory settings.


【Relay Connection】

➢ **DC product**

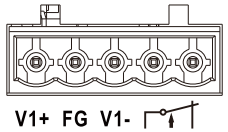


Model II of this device supports 2 relay alarm outputs via a 5-pin 5.08mm pitch terminal block. The two pins on the right are assigned to the relay alarm output. They are open circuit in normal non alarm state, closed when any alarm information occurs. The relay can externally connect to alarm lights or alarm buzzer or other switching value collecting device in order to timely notify operators when the alarm occurs.

➢ **AC product**

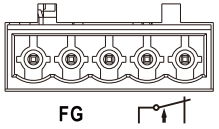

Model I of this device supports 2 relay alarm outputs via a 5-pin 5.08mm pitch terminal block. The two pins on the right are assigned to the relay alarm output. They are open circuit in normal non alarm state, closed when any alarm information occurs. The relay can externally connect to alarm lights or alarm buzzer or other switching value collecting device in order to timely notify operators when the alarm occurs.

【Console Port Connection】



The device provides 1 program debugging port based on RS-232 serial port which can conduct device CLI command management after connecting to PC. The interface adopts RJ45 port, and the RJ45 pin definitions are as follows:

Pin No.	2	3	5
Pin Definition	TXD	RXD	GND

Connect the CONSOLE port through software. The default

configuration is as follows:

Serial Port Connection	Default
Baud rate	115200 bps
Data bit	8 bits
Parity bit	None
Stop bit	1 bit

【Checking LED Indicator】

The series products provide LED indicators to monitor the device working status with a comprehensive simplified troubleshooting; the function of each LED is described in the table as below:


LED	Indicate	Description
P1	ON	Power is connected and running normally
	OFF	Power supply is disconnected or running abnormally
P2	ON	Power is connected and running normally
	OFF	Power supply is disconnected or running abnormally
RUN	Blinking	The system is running normally
	OFF	The system is not running or running abnormally
	ON	System is running abnormally
ALM	ON	Power supply or port link has alarm
	OFF	Power supply, port link without alarm
Link (G1-G28)	ON	Port has established a valid network connection
	Blinking	Port is in a network communication status
	OFF	Port hasn't established valid network connection.

【Logging in to WEB Interface】


This device supports WEB management and configuration. Computer can access the device via Ethernet interface. The way of logging in to device's configuration interface via IE browser is shown as below:

Step 1 Configure the IP addresses of computer and the device to the same network segment, and the network between them can be mutually accessed.

Step 2 Enter device's IP address in the address bar of the computer browser.



Step 3 Enter device's username and password in the login window as shown below.

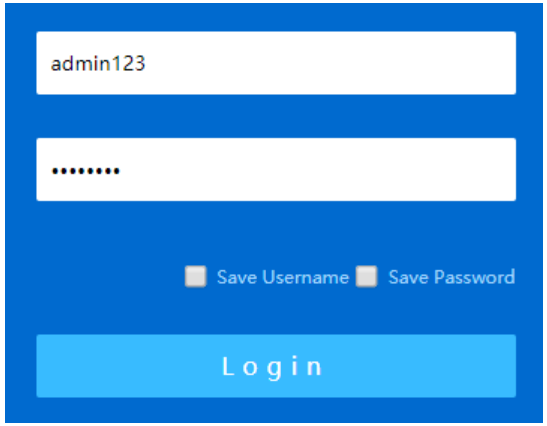

Step 4 Click "Login" button to login to the WEB interface of the device.

Note:

- The default IP address of the device is "192.168.1.254".
- The default username and password of the device are "admin123".
- If the user name or password is lost, user can restore it to factory settings via restoring factory setting button or management software; all modified configurations will be cleared after restoring to factory settings, so please backup configuration file in advance.
- Please refer to user manual for specific configuration method of logging in to WEB interface and other configurations about network management function.

【Specification】

Panel	
Gigabit SFP slot	100/1000Base- X, SFP slots
1000M Combo port	10/100/1000Base-T(X) RJ45 or 100/1000 Base-X SFP interface (optional)
Gigabit copper port	10/100/1000Base-T(X) self-adapting RJ45 port, half/full duplex self-adaption or forced working mode, support MDI/ MDI-X self-adaption
Console port	CLI command management port (RS-232), RJ45
Alarm port	5-pin 5.08mm pitch terminal block, support 2 relay alarm outputs
Indicator	Power indicator, system alarm indicator, device running status indicator, interface connection/running status indicator
Switch Property	
Backplane bandwidth	128Gbps
Buffer size	12Mbit
MAC address table	16K
Power Supply	

Input power supply	● Model I: 110/220VAC (85~264VAC/DC) dual power supply ● Model II: 24/48VDC (18~72VDC) dual power supply
Access terminal block	AC product supports single-phase socket with rocker switch DC product supports 5-pin 5.08mm pitch terminal blocks
Power Consumption	
Model I	● No-load at normal temperature: 9.2W@220VAC ● Full-load at normal temperature: 23.84W@220VAC ● No-load at high temperature: 11.31W@220VAC ● Full-load at high temperature: 25.82W@220VAC
Model II	● No-load at normal temperature: 9.28W@48VDC ● Full-load at normal temperature: 23.54W@48VDC ● No-load at high temperature: 11.21W@48VDC ● Full-load at high temperature: 25.58W@48VDC
Working Environment	
Working temperature	-40~75℃
Storage temperature	-40~85℃
Working humidity	5%~95% (no condensation)
Protection grade	IP30 (metal shell)

【Disposal of Waste Electrical and Electronic Equipment (WEEE 2012/19/EU)】

(Applicable in the EU-member states)



The crossed-out wheeled bin symbol on the equipment or its packaging indicates that the product, at the end of its service life, shall not be mixed with unsorted municipal waste but should be collected separately, in accordance with local laws and regulations.

A proper separate collection of end-of-life equipment for the subsequent recycling, treatment and environmentally compatible disposal, will help prevent potential damage to the environment and human health, facilitating the reuse, recycling and/or recovery of its component materials.

Private users should contact their vendor or municipal waste management service and ask for disposal information.

Professional users should contact their suppliers and check the terms of their selling agreement.

This product must not be disposed of with other commercial waste.

Users' cooperation in the correct disposal of this product will contribute to saving valuable resources and protecting the environment.