3onedata



IEM6200-8T2G-4D2C

Layer 2 Managed Industrial Ethernet Switch

User Manual

Document Version: 01

Issue Date: 08/24/2023

Industrial Ethernet Communication Solution Expert **3onedata Co., Ltd.**

Copyright © 2023 3onedata Co., Ltd. All rights reserved.

No company or individual is allowed to duplicate or transmit this manual in any forms without written permission issued by 3onedata Co., Ltd.

Trademark Statement

3onedata , 3onedata and 3One data are the registered trademarks owned by 3onedata Co., Ltd. And other trademarks mentioned in this manual belong to their corresponding companies.

Notice

Purchased product, service or features should be constrained by 3onedata commercial contracts and clauses. The whole or part product, service or features described in this document may beyond purchasing or using range. 3onedata won't make any statement or warranty for this document content unless any other appointment exists.

Due to product version upgrading or other reason, this document content will be upgraded periodically. Unless other appointment exists, this document is only for usage guide, all statement, information and suggestion in this document won't constitute any warranty.

3onedata

Please scan our QR code for more details



Embedded Industrial Ethernet Switch Modules

Embedded Serial Device Server Modules



Industry-specialized Products
(Rail Transit, Power, Smart City, Pipe Gallery…)

3onedata
Make network communication more reliable

Honor·Quality·Service



Layer 2 (Unmanaged) Managed Industrial Ethernet Switch

Layer 3 Managed Industrial Ethernet Switch

Industrial PoE Switch



BlueEyes pro

BlueEyes Pro Management Software

VSP Virtual Serial Port Management Software

SNMP Management Software



Modbus Gateway

Serial Device Server

Media Converter

CAN Device Server

Interface Converter



Industrial Wireless Products

3onedata Co., Ltd.

Headquarter address:	3/B, Zone 1, Baiwangxin High Technology Industrial park, Nanshan District, Shenzhen, 518108 China
Technology support:	tech-support@3onedata.com
Service hotline:	+86-400-880-4496
E-mail:	sales@3onedata.com
Fax:	+86-0755-26703485
Website:	http://www.3onedata.com

Preface

Managed Industrial Ethernet Switch User Manual has introduced this series of switches:

- Product features
- Product network management configuration
- Overview of related principles of network management

Audience

This manual applies to the following engineers:

- Network administrators responsible for network configuration and maintenance
- On-site technical support and maintenance personnel
- Network engineer

Text Format Convention

Format	Description
" "	Words with “” represent the interface words. Fox example: “Port number”.
>	Multi-level path is separated by ">". Such as opening the local connection path description: Open "Control Panel> Network Connection> Local Area Connection".
Light Blue Font	It represents the words clicked to achieve hyperlink. The font color is as follows: ‘Light Blue’.

Symbols

Format	Description
Notice	Remind the announcements in the operation, improper operation may result in data loss or equipment damage.

Copyright © 3onedata Co., Ltd.

Format	Description
Warning	Pay attention to the notes on the mark, improper operation may cause personal injury.
Note	Conduct necessary supplements and explanations for the description of operation content.
Key	Configuration, operation, or tips for device usage.
Tips	Pay attention to the operation or information to ensure success device configuration or normal working.

Button Operation Convention

Format	Description
Logout	There is a logout button in the upper right corner of the webpage. After clicking it, the webpage returns to the login page.
Reboot	There is a restart button in the upper right corner of the webpage. After clicking, a restart confirmation box pops up. After confirmation, the device will restart.
Save	There is a Save button in the upper right corner of the webpage. Click it to save the current device configuration.
Add	Click the Add button to add a line of configuration. Note that repeated configuration may result in data overwrite.
Delete	Check the line to be deleted, and then click the Delete button to delete the configuration.
Config	Check the line to be configured, and then click the configure button to enter the configuration page.
Enable	Click the right side of the switch to enable the function, as shown in figure:  . Click the left side of the switch to disable the function, as shown in the figure:  .
Apply	Click the Apply button to submit the current configuration.

Copyright © 3onedata Co., Ltd.

Revision Record

Version No.	Revision Date	Revision Note
01	2023-08-24	Product release

3onedata proprietary and confidential
Copyright © 3onedata Co., Ltd.

Contents

PREFACE 1
CONTENTS I
1 LOG IN THE WEB INTERFACE 1
1.1 SYSTEM REQUIREMENTS FOR WEB BROWSING 1
1.2 SET THE IP ADDRESS OF PC 1
1.3 LOGIN TO THE WEB CONFIGURATION INTERFACE 3
2 SYSTEM INFO 4
3 LOGIN CONFIG 6
3.1 IP ADDRESS 6
3.2 USER CONFIG 7
3.3 PROTOCOL AUTHORIZATION 9
4 PORT CONFIG 10
4.1 PORT SETTING 10
4.2 LINK AGGREGATION 11
4.3 PORT RATE LIMIT 13
4.4 STORM CONTROL 14
4.5 PORT MIRRORING 16
4.6 PORT STATISTICS 17
4.6.1 Port Statistics-Overview 17
4.6.2 Port Statistics-Port 18
5 LAYER-2 CONFIG 20
5.1 VLAN CONFIG 20
5.1.1 Global Config 21
5.1.2 VLAN Config 23
5.2 MAC CONFIGURATION 25
5.2.1 MAC Address Table 25
5.2.2 Static MAC 26
5.3 SPANNING-TREE CONFIGURATION 27
5.3.1 Global Configuration 28
5.3.2 Port Config 29
5.3.3 Spanning Tree State Information 30
5.4 RING 32
5.4.1 Instance: create single ring 35
5.5 IGMP-SNOOPING CONFIG 37

3onedata proprietary and confidential
Copyright © 3onedata Co., Ltd.

5.5.1 Global Configuration 37
5.5.2 Static Multicast MAC 39
5.6 PORT LOOPBACK DETECTION 40
6 NETWORK CONFIG 42
6.1 SNMP CONFIG 42
6.1.1 View 42
6.1.2 Community 43
6.1.3 SNMP Group 44
6.1.4 V3 User 45
6.1.5 Trap Alarm 48
6.2 LLDP CONFIGURATION 49
6.2.1 Current configuration 49
6.2.2 Port Config 50
6.2.3 Neighbor Info 51
6.3 DHCP-SERVER CONFIG 52
6.3.1 DHCP Switch 52
6.3.2 Lease and Gateway Configuration 53
6.3.3 DNS Server 53
6.3.4 Port Binding 54
6.4 ACCESS CONTROL 55
6.4.1 Port Authentication 55
6.4.2 Authentication Database 57
6.5 QOS 58
6.5.1 QoS Classification 58
6.5.2 CoS Mapping 61
6.5.3 ToS Mapping 62
6.6 MODBUS_TCP 63
7 CAN SERVER 69
7.1 CAN SETTINGS 69
7.2 CAN MODE 71
7.2.1 TCP Server Mode 72
7.2.2 TCP Client Mode 74
7.2.3 UDP Server Mode 76
7.2.4 UDP Client Mode 78
7.2.5 UDP Rang Mode 79
7.3 CAN STATISTICS 81
7.4 NETWORK CONNECTION STATE 82
8 SERIAL SERVER 84
8.1 SERIAL SETTINGS 84
8.2 SERIAL PORT MODE 85
8.2.1 RealCom Mode 86
8.2.2 Reverse RealCom Mode 89
8.2.3 TCP Server Mode 93

Copyright © 3onedata Co., Ltd.

8.2.4 TCP Client Mode 97
8.2.5 UDP Server Mode 103
8.2.6 UDP Client Mode 106
8.2.7 UDP Rang Mode 109
8.2.8 Pair Slave Mode 112
8.2.9 Pair Master Mode 113
8.2.10 Telnet Mode 115
8.2.11 Reverse Telnet Mode 117
8.2.12 Disable Mode 118
8.3 SERIAL PORT COUNT 119
8.4 NETWORK CONNECTION STATE 120
9 SYSTEM CONFIG 122
9.1 NETWORK DIAGNOSIS 122
9.1.1 Ping 122
9.2 TIME 123
9.2.1 NTP Config 123
9.2.2 Time Zone Configuration 124
9.3 ALARM CONFIGURATION 124
9.3.1 Relay Setting 125
9.3.2 Port Alarm 125
9.3.3 Power Alarm 127
9.3.4 Utilization Alarm 128
9.3.5 E-mail Alarm 129
9.4 CONFIG FILE MANAGEMENT 130
9.4.1 Config File Upgrade 130
9.4.2 Restore Factory Settings 131
9.5 UPGRADE 132
9.6 LOG INFORMATION 133
9.6.1 Log Information 133
9.6.2 Syslog Server 134
10 FAQ 135
10.1 SIGN IN PROBLEMS 135
10.2 CONFIGURATION PROBLEM 135
10.3 ALARM PROBLEM 136
10.4 INDICATOR PROBLEM 136
11 MAINTENANCE AND SERVICE 139
11.1 INTERNET SERVICE 139
11.2 SERVICE HOTLINE 139
11.3 PRODUCT REPAIR OR REPLACEMENT 140

3onedata proprietary and confidential
Copyright © 3onedata Co., Ltd.

1 Log in the Web Interface

1.1 System Requirements for WEB Browsing

Using the industrial Ethernet switch, the system should meet the following conditions.

Hardware and Software	System Requirements
CPU	Above Pentium 586
Memory	Above 128MB
Resolution	Above 1024x768
Color	256 Colors or above
Browser	Internet Explorer 6.0 or above
Operating System	Windows XP Windows 7

1.2 Set the IP Address of PC

The switch default management is as follows:

IP Settings	Default Value
IP Address	192.168.1.254
Subnet mask	255.255.255.0

While configuring the switch via Web:

- Before remote configuration, please make sure the route between computer and switch is reachable.
- Before local configuration, please make sure the IP address of the computer is on

Copyright © 3onedata Co., Ltd.

the same subnet to the one of switch.

Note:
While first configuring the switch, if it is a local configuration mode, please make sure that the network segment of current PC is 1.


Eg: Assume that the IP address of the current PC is 192.168.5.60, change the network segment "5" of the IP address to "1".

Operation Steps

Amendment steps are as follows:

Step 1 Open "Control Panel> Network Connection> Local Area Connection> Properties> Internet Protocol Version 4 (TCP / IPv4)> Properties".

Step 2 Change the "5" selected by the red frame in the figure to "1".

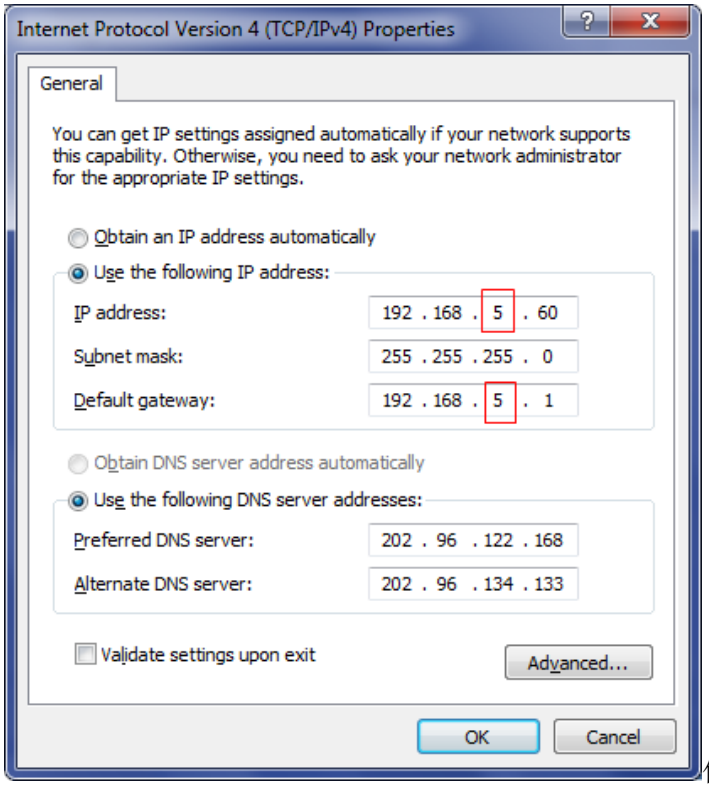

你

Step 3 Click "OK", modification is successful.

Step 4 End.

Copyright © 3onedata Co., Ltd.

1.3 Login to the WEB Configuration Interface

Operation Steps


Login to the web configuration interface as follows:

Step 1 Run the computer browser.

Step 2 Enter the address of the switch "http://192.168.1.254" in the address bar of the browser.

Step 3 Click the Enter key.

Step 4 Pop-up dialog box as shown below, enter the user name and password in the login window.

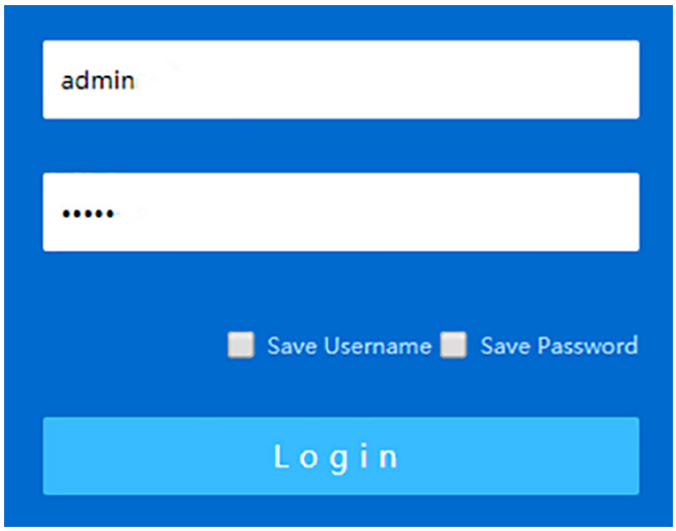

Note:

- The default username and password for the switch are "admin", which is strictly case-sensitive when typing.
- The default user password is with administrator privileges.
- WebServer will provide 3 opportunities to enter username and password. If you enter the error 3 times in succession, the browser will display "Access denied" to deny access to the information. Please refresh the page and try again.

Step 5 Click “Login”.

Step 6 End.

After successful login, you can configure the relevant parameters and information of the WEB interface as needed.

Note:

After logging in to the device, you can modify the IP address of the switch for ease of use.

3onedata proprietary and confidential
Copyright © 3onedata Co., Ltd.

2 System Info

Function Description

View port status such as port type and connection status.


Check device information such as product model, software and hardware version, etc.

Operation Path

Open in the navigation bar: “System Information”.

Interface Description

System information interface screenshot:

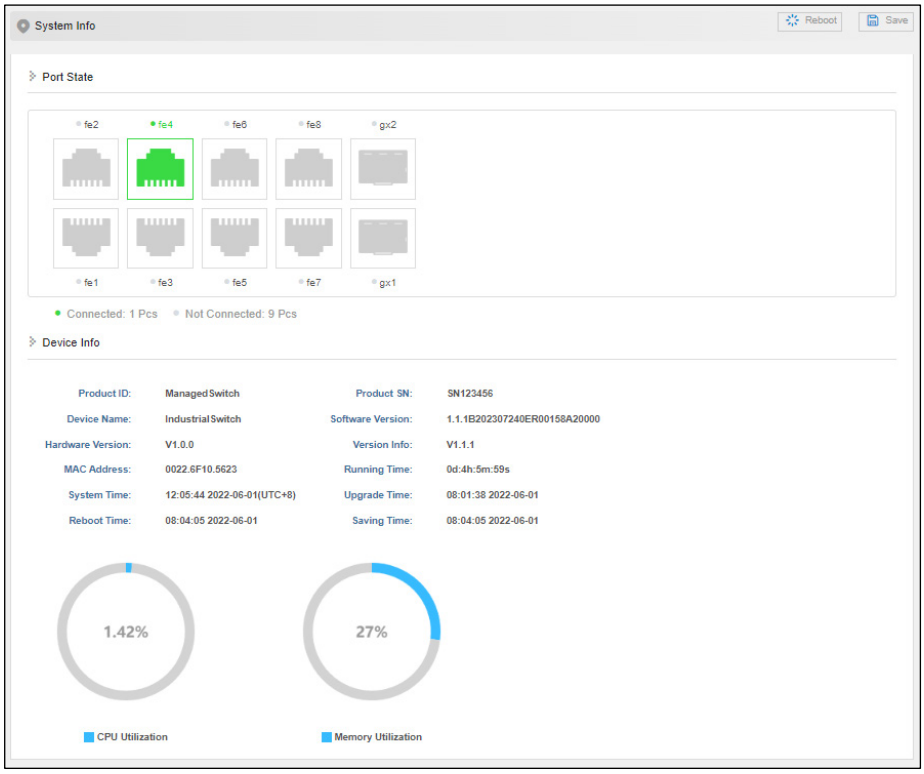

Copyright © 3onedata Co., Ltd.

The main element configuration description of system information interface:

Interface Element	Description
Port State	Display port icon and port connection status of the device: • Copper port icon, grayed out indicates that the device is not connected. •  Copper port icon, highlighting indicates that the device is connected. • Light port icon, grayed out indicates that the device is not connected. •  Fiber port icon, highlighting indicates that the device is connected.
Device Info	Basic information of software, hardware and operation of the device. • Product ID • Device Name • Hardware Version • MAC address • System Time • Reboot Time • Product SN • Software Version • Version Info • Running Time • Upgrade Time • Saving Time • CPU Utilization • Memory Utilization

Copyright © 3onedata Co., Ltd.

3 Login Config

3.1 IP Address

Function Description


Configure the static or dynamic IP address.

Operation Path

Open on the navigation bar: "Login Config > IP Address".

Interface Description

Interface screenshot of IP address configuration:

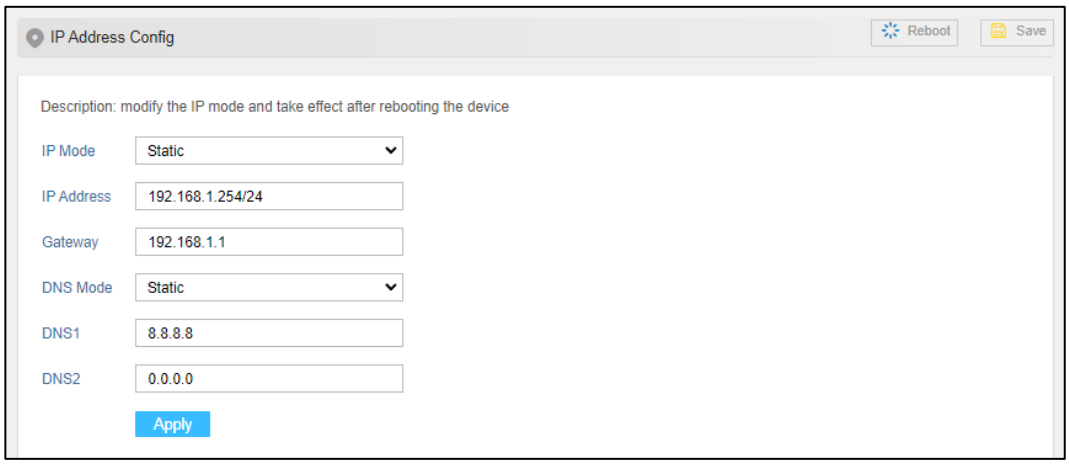

The main elements configuration description of IP address configuration interface:

Interface Element	Description
IP Mode	Set the IP address acquisition mode, which can be set to: • Static: System IP address configured by default or

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	manually. • Dynamic: system automatically acquired IP address of the device. Note • Default configured IP address is 192.168.1.254/24. • After modifying the IP mode, the device needs to be restarted to take effect.
IP Address	Display the IP address of the device.
Gateway	Display the gateway address of the device.
DNS Mode	Set the DNS acquisition mode, which can be set to: • Static: DNS that is either system default configuration or manually set. • Dynamic: system automatically acquired DNS of the device. Note The default DNS1/DNS2 configuration is 8.8.8.8/0.0.0.0.
DNS1	Display device DNS1.
DNS2	Display device DNS2.

3.2 User Config

Function Description

Add/delete users accessing the network management system.


Operation Path

Open in the navigation bar: “Login Config” > “User Config”.

Interface Description

The screenshot of user configuration interface:

Copyright © 3onedata Co., Ltd.

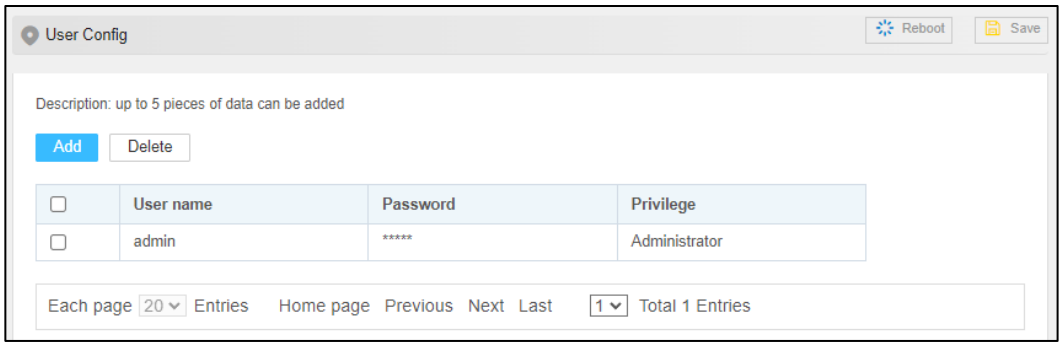

The main element configuration description of system information interface:

Interface Element	Description
User name	User name for accessing the network management system. Note: • The user name is a combination of letters, numbers and symbols not more than 20 bytes. Please be case-sensitive. • Up to 5 groups of users are supported.
Password	User name for accessing the network management system. Note: The password is a combination of letters, numbers and symbols not more than 20 bytes. Please be case-sensitive.
Privilege	• Observer: The configuration information of the device can be viewed, but the configuration of the device cannot be modified. • Administrator: User has all privileges of the device, including downloading, uploading, rebooting, modifying device information and other other operations. Notice: • Users can view, delete, or add other users whose priority does not exceed their own. • If the added user name already exists, the original user information will be overwritten.

Notice

Please keep the modified login name and password in mind. If you forget it, you can restore it to factory setting via DIP switch. Default login name and password of logging in to the WEB configuration interface are “admin”.

Copyright © 3onedata Co., Ltd.

3.3 Protocol Authorization

Function Description

Open the access security protocols Telnet and SSH for the remote login service.

The full English name of SSH is Secure Shell. SSH is the security protocol based on the application layer and transport layer. SSH is a reliable protocol which provides security for remote login sessions and other network services. Using SSH protocol can effectively prevent information leakage in the process of remote management, and can also prevent DNS and IP spoofing. In addition, the transmitted data is compressed so that the transmission speed can be increased. After SSH function is enabled, users can enter the command line configuration interface to manage devices.


Telnet is the standard protocol and main mode of Internet remote login service. It provides users with the ability to complete the remote host work on the local computer. After the TELNET function is enabled, users can enter the command line configuration interface to manage devices.

Operation Path

Open in the navigation bar: “Login Config > Protocol Authorization”.

Interface Description

Screenshot of protocol authorization interface:

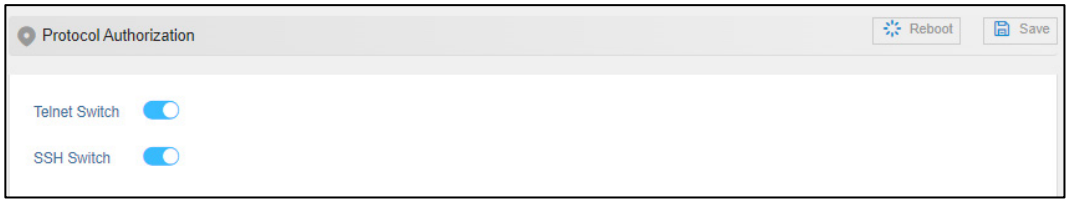

Configuration description of main elements of the protocol interface:

Interface Element	Description
Telnet Switch	After opening, users can access the command line configuration interface through Ethernet port.
SSH Switch	After opening, users can access the command line configuration interface through the Console port.

Copyright © 3onedata Co., Ltd.

4 Port Config

4.1 Port Setting

Function Description


Set port parameters individually or in batches.

Operation Path

Open in order: "Main Menu > Port Config > Port Setting".

Interface Description

Port setting interface is as follows:

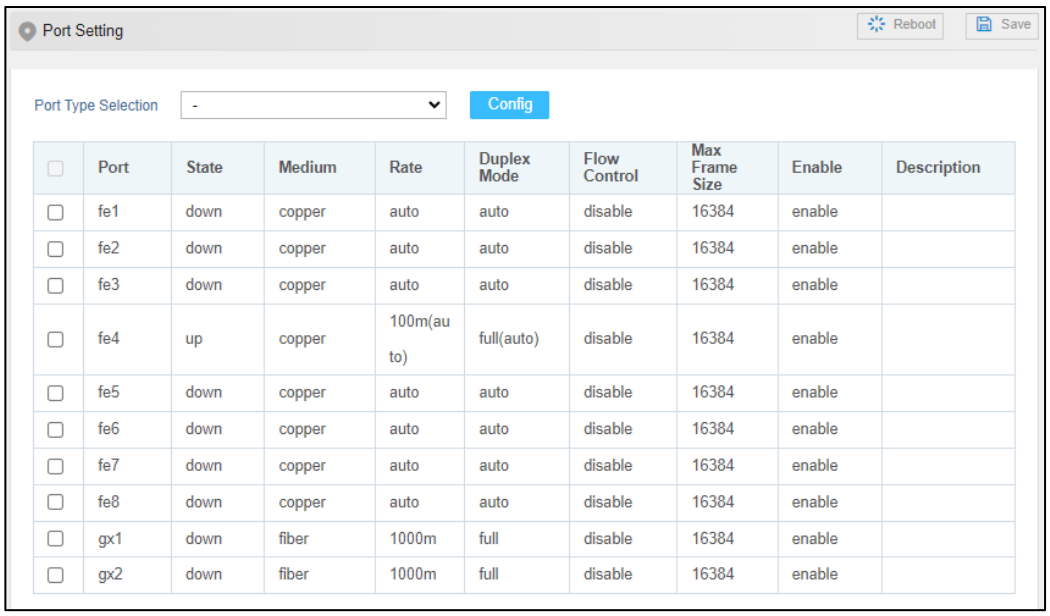

Port	State	Medium	Rate	Duplex Mode	Flow Control	Max Frame Size	Enable	Description
fe1	down	copper	auto	auto	disable	16384	enable	
fe2	down	copper	auto	auto	disable	16384	enable	
fe3	down	copper	auto	auto	disable	16384	enable	
fe4	up	copper	100m(auto)	full(auto)	disable	16384	enable	
fe5	down	copper	auto	auto	disable	16384	enable	
fe6	down	copper	auto	auto	disable	16384	enable	
fe7	down	copper	auto	auto	disable	16384	enable	
fe8	down	copper	auto	auto	disable	16384	enable	
gx1	down	fiber	1000m	full	disable	16384	enable	
gx2	down	fiber	1000m	full	disable	16384	enable	

3onedata proprietary and confidential
Copyright © 3onedata Co., Ltd.

Main elements configuration description of port settings interface:

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
State	Ethernet port connection status, display status as follows: • down: represent the port is disconnected; • up: represent the port is connected.
Medium	Ethernet port connection type, display medium as follows: • copper: copper port • fiber: fiber port
Rate	Ethernet port working speed, optional speed as follows: • auto • 10m • 100m
Duplex Mode	Under current Ethernet working mode, optional mode as follows: • Auto: Auto-negotiation • Full: full duplex • Half: half-duplex
Flow Control	Port flow control status, options as follows: • disable • enable
Max Frame Size	Display the maximum data frame length that the Ethernet port transmitted.
Enable	Enable Ethernet port. Notice: If “disable” is selected, the port won't be connected to use.
Description	Support entering port description of no more than 40 characters.

4.2 Link Aggregation

The link aggregation technology can increase link bandwidth by bundling multiple physical interfaces into one logical interface without hardware upgrade. While increasing the bandwidth, link aggregation adopts the mechanism of backup link, which can effectively improve the reliability of link between devices.

Link aggregation technology has the following three advantages:

- Increase bandwidth

Copyright © 3onedata Co., Ltd.

The maximum bandwidth of link aggregation interface can reach the sum of the bandwidth of each member interface.

- Improve the reliability

  When an active link fails, traffic can be switched to other available member links, thus improving the reliability of link aggregation interface.

- Load sharing

  Within a link aggregation group, load sharing can be achieved on the active links of each member.

Function Description


Binding multiple physical ports into one logical channel.

Operation Path

Open in order: “Main Menu > Port Config > Link Aggregation".

Interface Description

Screenshot of Link Aggregation interface:

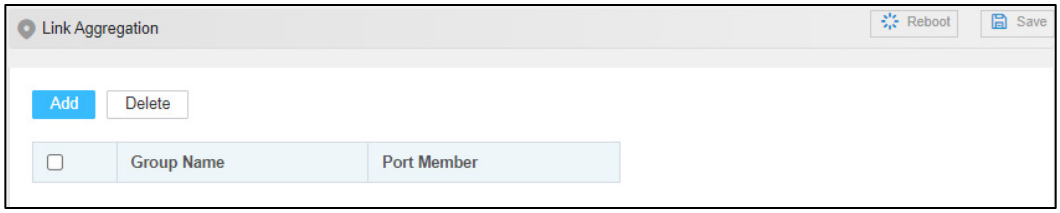

The main element configuration description of static trunking interface:

Interface Element	Description
Group Name	Aggregation group number, support two groups of ports of the same type.
Port Member	Ports that join the trunking group.

Note

- The attributes of all member ports in trunking group should be the same, including medium, rate and duplex mode, etc.
- Setting one port as both ring network port and trunking port is not supported.
- One port can only join a trunking group.

Copyright © 3onedata Co., Ltd.

4.3 Port Rate Limit

Function Description


Single or batch limit the ingress bandwidth and egress bandwidth of broadcast, multicast and unicast received by the port.

Operation Path

Open in order: "Main menu > Port Config > Port Speed Limit".

Interface Description

Port Speed Limit interface is as follows.

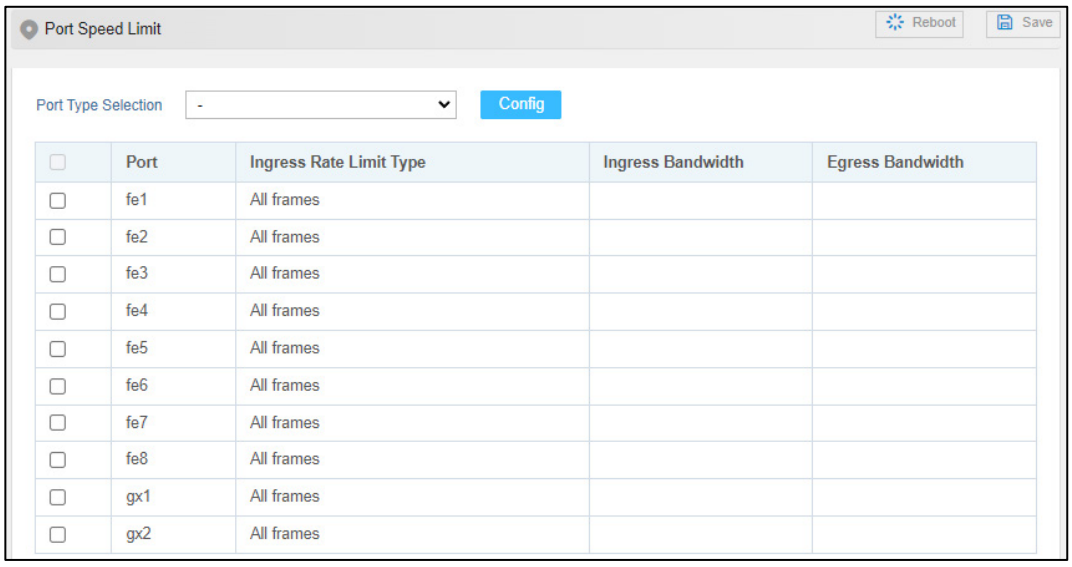

Main elements configuration description of bandwidth management interface:

Interface Element	Description
Port Type Selection	Select the port type, and check the ports of the same type in batches: • 100M copper port (fe) • Gigabit fiber port (gx)
☐	Check box, you can check multiple ports for simultaneous configuration.
Port	Port number of the device.
Ingress Rate Limit Type	The data packets type of receiving bandwidth needs to be limited, options of drop-down list as follows: • All frames: all kinds of data packets; • Broadcast, Multicast and flood unicast frames

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	• Broadcast and Multicast only; • Broadcast only.
Ingress Bandwidth	Limit the transmission rate of all ingress data, and select the rate range: • 100M copper port: 128/256/512Kbps/1/2/4/8/16/64Mbps • Gigabit fiber port: 128/256/512Kbps/1/2/4/8/16/64Mbps/128Mbps/256 Mbps/512Mbps
Egress Bandwidth	Limit the transmission rate of all egress data, and select the rate range: • 100M copper port: 128/256/512Kbps/1/2/4/8/16/64Mbps • Gigabit fiber port: 128/256/512Kbps/1/2/4/8/16/64Mbps/128Mbps/256 Mbps/512Mbps

Note

Port speed limit has high requirements on network cable quality. If the cable quality is not up to the standard, lots of conflict packets and broken packet would appear.

4.4 Storm Control

Function Description

Configure the maximum broadcast, multicast or unknown unicast packet flow the port allows. When the sum of each port broadcast, unknown multicast or unknown unicast flow achieves the value user sets, the system will discard the packets beyond the broadcast, unknown multicast or unknown unicast flow limit, so that the proportion of overall broadcast, unknown multicast or unknown unicast flow can be reduced to limited range, ensuring the normal operation of network business.


Copyright © 3onedata Co., Ltd.

Operation Path

Open in order: "Port Config > Storm Control".

Interface Description

Storm control interface is as follows:

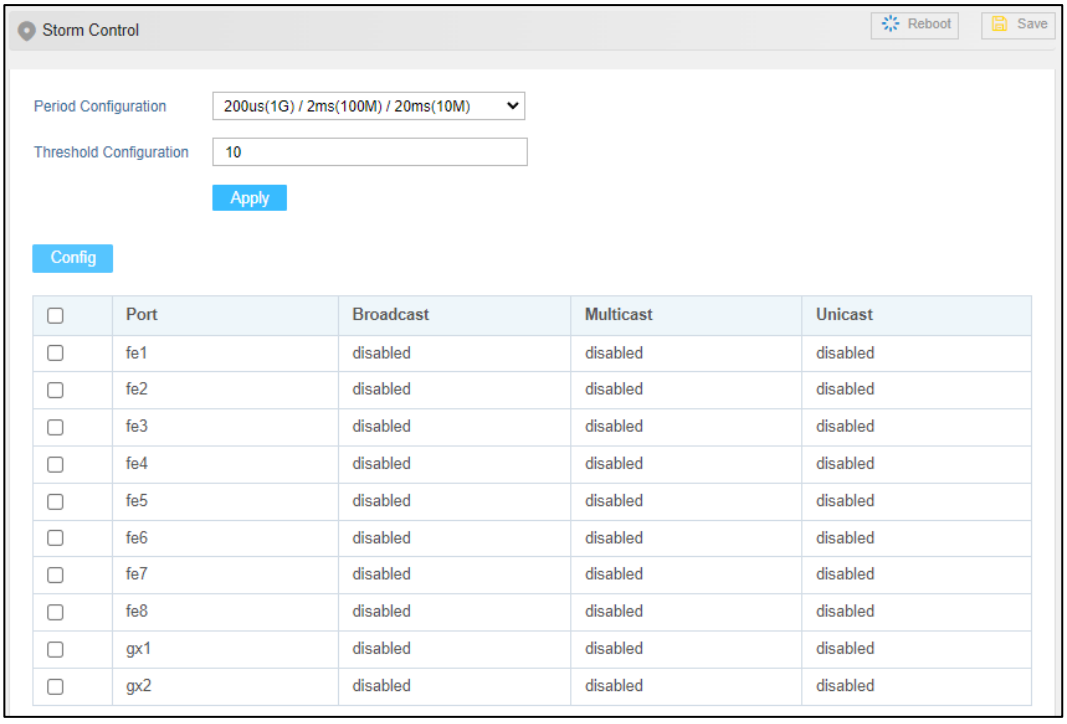

Main elements configuration description of storm suppression interface:

Interface Element	Description
Period Configuration	The detection period of different bandwidth ports for broadcasting, unknown multicast or unknown unicast can be selected as follows: • 200us (1G) / 2ms (100M) / 20ms (10M) • 1ms (1G) / 10ms (100M) / 100ms (10M) • 10ms (1G) / 10ms (100M) / 10ms (10M) • 100ms (1G) / 100ms (100M) / 100ms (10M)
Threshold Configuration	The limit number of detected broadcasts, unknown multicasts or unknown unicasts in a specified period, with a value range of 1-255; When the storm suppression threshold is exceeded, the exceeded message will be discarded.
Port	Port number.

Copyright © 3onedata Co., Ltd.

Interface Element	Description
Broadcast	Enabled state of broadcast suppression. • enable • disabled
Multicast	Enabled state of unknown multicast suppression. • enable • disabled
Unicast	Enabled state of unknown unicast suppression. • enable • disabled

4.5 Port Mirroring

Function Description


Copy the data from the source port to the appointed port for analysis and monitoring.

Operation Path

Open in order: "Port Config> Port Mirroring".

Interface Description

Port mirror interface as follows:

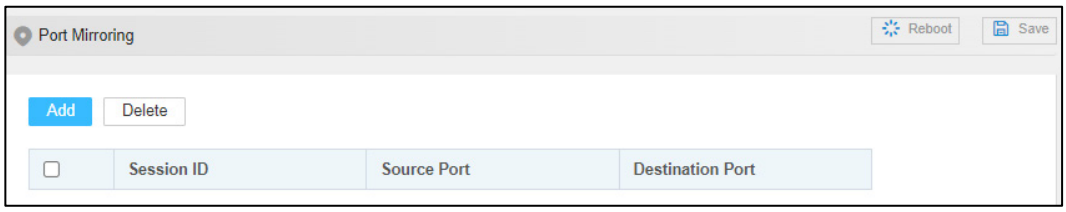

The main element configuration description of port mirror interface:

Interface Element	Description
Session ID	Device mirror ID number, value is 1. Note: Support only 1 mirror session. If mirroring is configured multiple times, only the data of the last configuration will be retained.
Source Port	Monitored ports, from which the device will collect input or output messages. There can be one or more mirror ports.

Copyright © 3onedata Co., Ltd.

Interface Element	Description
Destination Port	Monitoring port, used to copy and analyze messages from source port.
Add	Click “Add” to reconfigure the mirror and configure the data direction of the mirror. Data direction options are as follows: • transmit:egress data, the message sent by the source port will be mirrored to the destination port; • receive: ingress data, the message received by the source port will be mirrored to the destination port; • Both: all data, mirror the source port receiving and sending packets at the same time.

4.6 Port Statistics

4.6.1 Port Statistics-Overview

Function Description

Check the data information of each port:

- Number of messages sent and received and number of message bytes
- Number of dropped and error messages


Operation Path

Open in order: "Port Config > Port statistics > Port Statistics-Overview".

Interface Description

Port Statistics-Overview interface is as follows:

Copyright © 3onedata Co., Ltd.

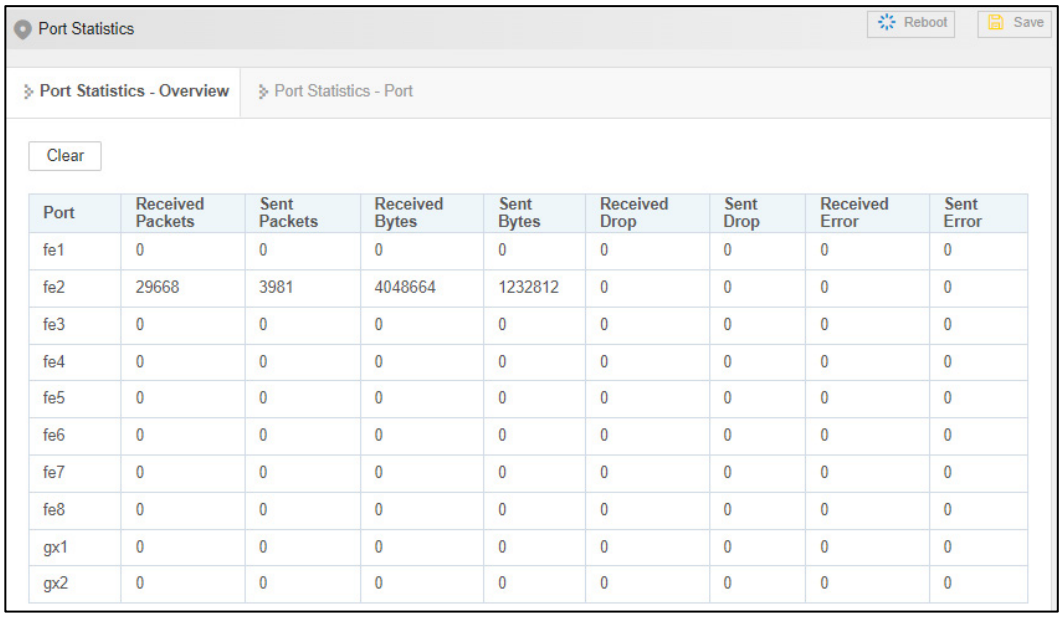

Port	Received Packets	Sent Packets	Received Bytes	Sent Bytes	Received Drop	Sent Drop	Received Error	Sent Error
fe1	0	0	0	0	0	0	0	0
fe2	29668	3981	4048664	1232812	0	0	0	0
fe3	0	0	0	0	0	0	0	0
fe4	0	0	0	0	0	0	0	0
fe5	0	0	0	0	0	0	0	0
fe6	0	0	0	0	0	0	0	0
fe7	0	0	0	0	0	0	0	0
fe8	0	0	0	0	0	0	0	0
gx1	0	0	0	0	0	0	0	0
gx2	0	0	0	0	0	0	0	0

4.6.2 Port Statistics-Port

Function Description

Check the classification statistics of the total number of messages sent and received by the designated port and the number of bytes of messages.


Operation Path

Open in order: "Port Config > Port statistics > Port Statistics-Port".

Interface Description

Port Statistics-Port interface is as follows:

Copyright © 3onedata Co., Ltd.

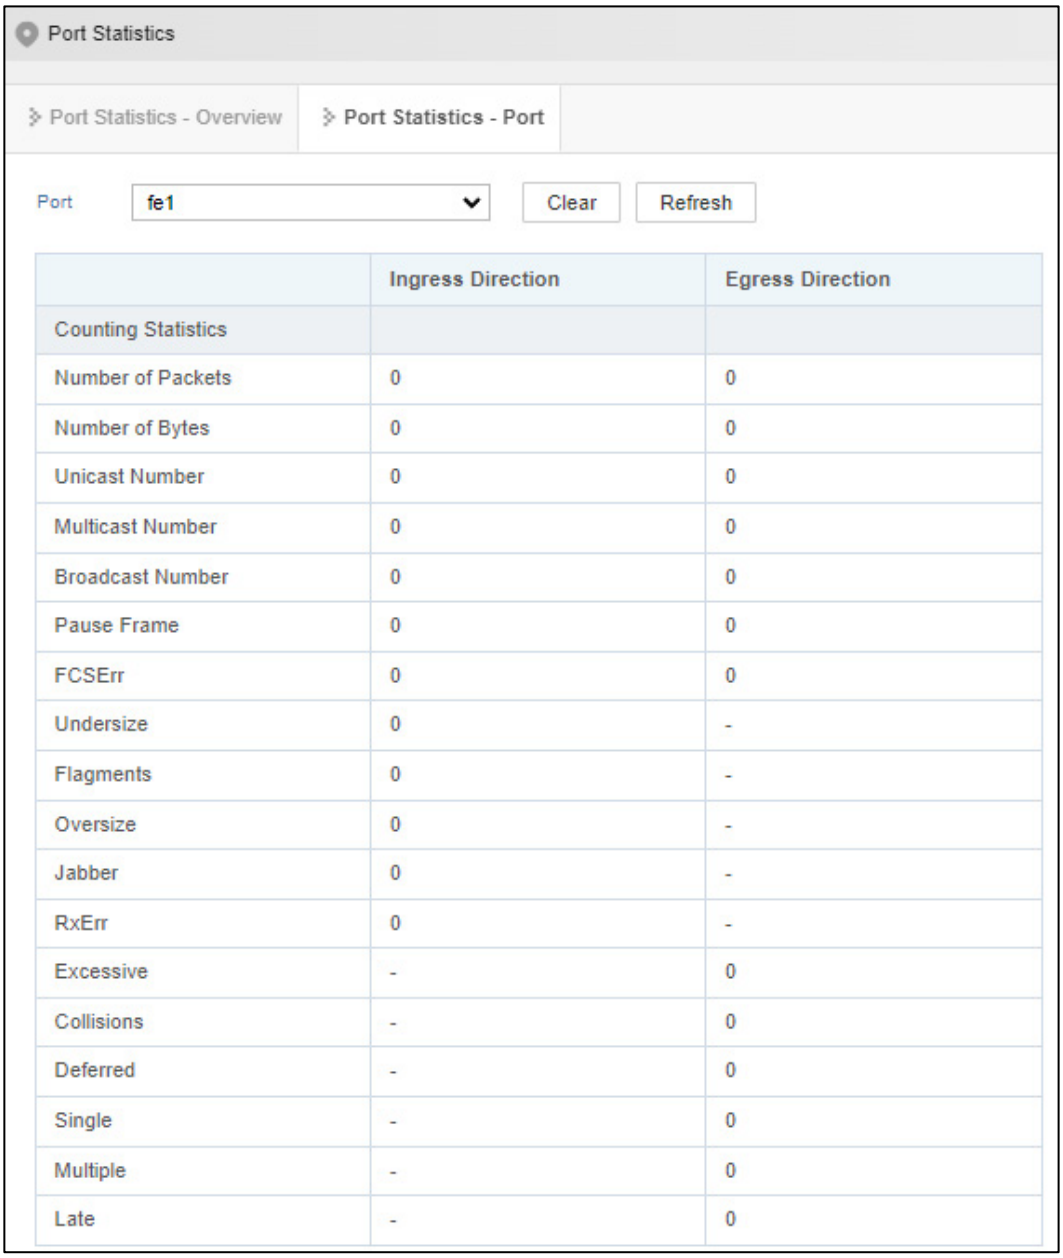

	Ingress Direction	Egress Direction
Counting Statistics		
Number of Packets	0	0
Number of Bytes	0	0
Unicast Number	0	0
Multicast Number	0	0
Broadcast Number	0	0
Pause Frame	0	0
FCSErr	0	0
Undersize	0	-
Flagments	0	-
Oversize	0	-
Jabber	0	-
RxErr	0	-
Excessive	-	0
Collisions	-	0
Deferred	-	0
Single	-	0
Multiple	-	0
Late	-	0

3onedata proprietary and confidential
Copyright © 3onedata Co., Ltd.

5 Layer-2 Config

5.1 VLAN Config

VLAN (Virtual Local Area Network) is a communication technology that logically divides a physical LAN into multiple broadcast domains. Hosts in VLAN can directly communicate with each other, but two VLAN can't directly communicate with each other, which can limit the broadcast message in a VLAN. Using VLAN can bring following benefits to users.


- Limit the broadcast domain;
- Increase the security of LAN;
- Improve the network stability;
- Flexiblely construct virtual working team.

Port VLAN

Port VLAN adopts different identifications to distinguish different VLAN. Adopting the same ID identification will cause internal member groups being replaced, new ID identification will establish new forwarding rules, and all ports must belong to one or more VLAN.

IEEE802.1Q VLAN

Under the provisions of IEEE 802.1Q protocol, the device can add 4 bytes VLAN tag (Tag for short) between Source address and Length/Type fields of Ethernet data frame, identifying the VLAN information. As the picture below.

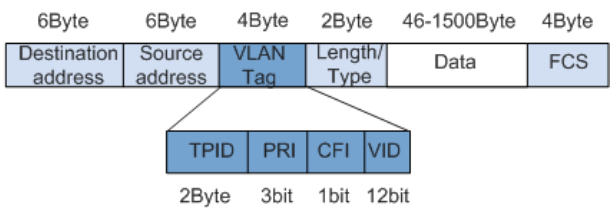

3onedata proprietary and confidential
Copyright © 3onedata Co., Ltd.

- TPID: Tag Protocol Identifier represents the data frame type, when the value is 0x8100, it represents the VLAN data frame of IEEE 802.1Q.
- PRI: Priority represents the 802.1p priority of data frame. The value ranges from 0 to 7. A larger value indicates a higher priority. During network congestion, the switch will preferentially send data frame with higher priority.
- CFI: Canonical Format Indicator represents whether MAC address is packaged in standard format in different transmission media. 0 represents that MAC address is packaged in standard format.
- VID: VLAN ID represents the VLAN number of the data frame. The value range of VLAN ID is 0-4095. 0 and 4095 are reserved values of the protocol, so the valid value range of VLAN ID is 1-4094.

5.1.1 Global Config

Function Description

Global Configuration could realize:


- Set VLAN type
- Set the PVID of CUP
- Set the default PVID of the port
- Set port type

Operation Path

Open in order: "Layer-2 Config > VLAN Config > Global Config".

Interface Description 1: Port-based VLAN


Port-based VLAN interface is as follows:

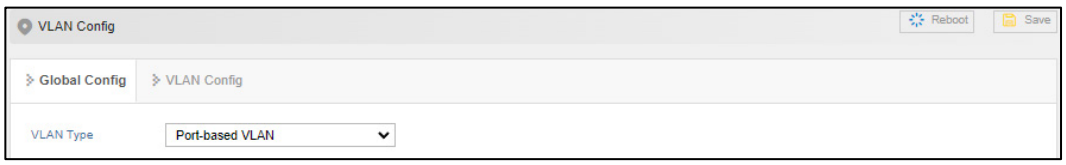

Interface Description: 802.1Q VLAN

Interface screenshot of 802.1Q VLAN:

Copyright © 3onedata Co., Ltd.

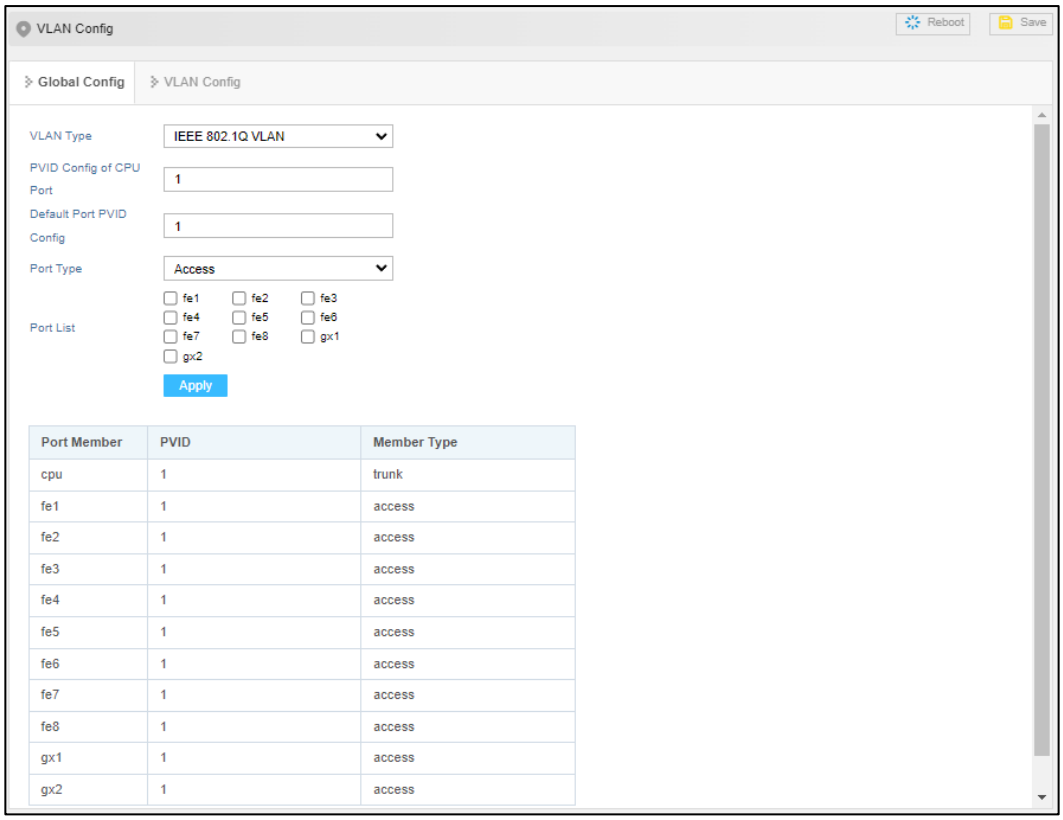

The main element configuration description of global configuration interface:

Interface Element	Description
VLAN Type	VLAN can be configured in two types: • Port-based VLAN • 802.1Q VLAN
PVID config of CPU Port	The default configuration is 1, and the optional range is 1-4094.
Default Port PVID Config	The default configuration is 1, and the optional range is 1-4094.
Port Type	Configure the link type of port, there are two types as follows: • Access: The message entering the switch from the Access port, which is forced to use the PVID of the port as the VLAN ID. • Trunk: the message entering the switch from Trunk port. If there is already a VLAN TAG, use the VLAN ID in the VLAN TAG of the message; otherwise, use the PVID of this port as VLAN ID.
Port List	Device port number check box to configure the port

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	type of the selected port in batch.

5.1.2 VLAN Config

Function Description

Add VLAN based on port or 802.1Q.

Operation Path


Open in order: "Layer-2 Config > VLAN Config > VLAN Config".

Interface Description: View VLAN Configuration

View port-based VLAN interface screenshot:




Interface Description: Add Port-based VLAN

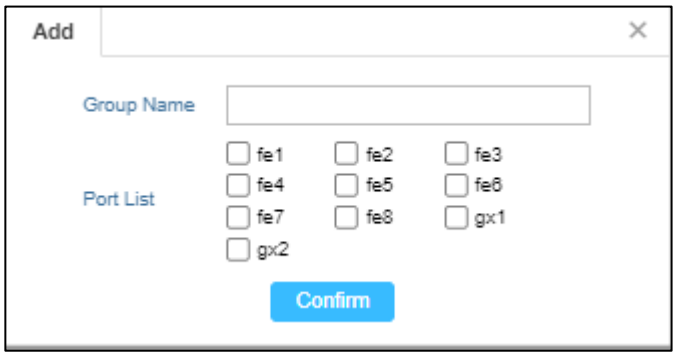

Copyright © 3onedata Co., Ltd.

Interface Description: Add 802.1Q-based VLAN

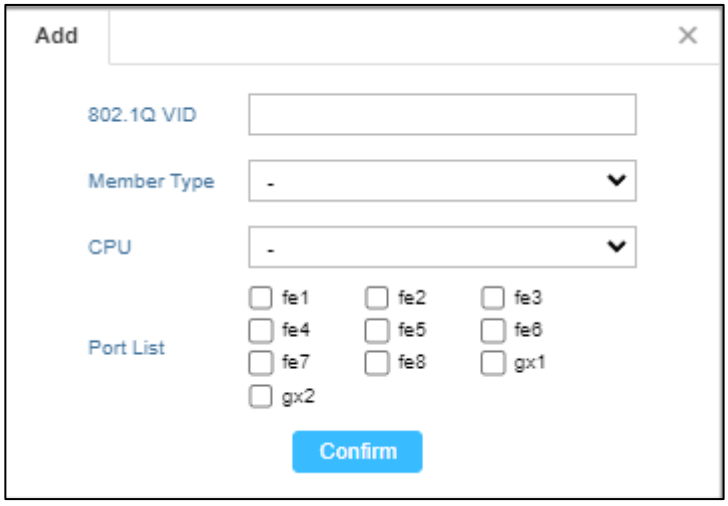

The main element configuration description of Add 802.1Q-based VLAN interface:

Interface Element	Description
802.1Q VLAN	Enter the ID to add the VALN. Note: If the VLAN ID already exists, the original VLAN ID configuration will be overwritten after saving.
Member Type	There are three types of “VLAN ID” for data frames sent out by the port: • Unmodified: when the data frame is sent out from the port, it will recover the “VLAN ID” of accessing to the switch. • Untagged: remove the “VLAN ID” fields when the data frame is sent out from the port, • Tagged: reserve “VLAN ID” fields when the data frame is sent out from the port.
CPU	There are three types of “VLAN ID” for data frames sent out by CPU: • Unmodified: when the data frame is sent to CPU, it will recover the “VLAN ID” of accessing to the switch. • Untagged: remove the “VLAN ID” fields when the data frame is sent to CPU, • Tagged: reserve “VLAN ID” fields when the data frame is sent to CPU.
Port List	The device port number check box can be used to configure the port type of the selected port in batch.

3onedata proprietary and confidential
Copyright © 3onedata Co., Ltd.

5.2 MAC Configuration

MAC (Media Access Control) address is the hardware identity of network device; the switch forwards the message according to MAC address. MAC address has uniqueness, which has guaranteed the correct retransmission of message. Each switch is maintaining a MAC address table. In the table, MAC address is corresponding to the switch port. When the switch receives data frames, it decides whether to filter them or forward them to the corresponding port according to the MAC address table. MAC address is the foundation and premise that switch achieves fast forwarding.

5.2.1 MAC Address Table

Each port in the switch is equipped with automatic address learning function, it stores the frame source address (source MAC address, switch port number) that port sends and receives in the address table. Ageing time is a parameter influencing the switch learning process; the default value is 300 seconds. When the timekeeping starts after an address record is added to the address table, if each port doesn't receive the frame whose source address is the MAC address within the ageing time, then these addresses will be deleted from dynamic forwarding address table (source MAC address, destination MAC address and their corresponding switch port number).

Function Description

View the MAC address, including:

- The data source MAC of the access device learned by the device
- Static unicast MAC


Operation Path

Open in order: "Layer-2 Configuration > MAC Config > MAC Address Table".

Interface Description

MAC address table interface is as follows:

Copyright © 3onedata Co., Ltd.

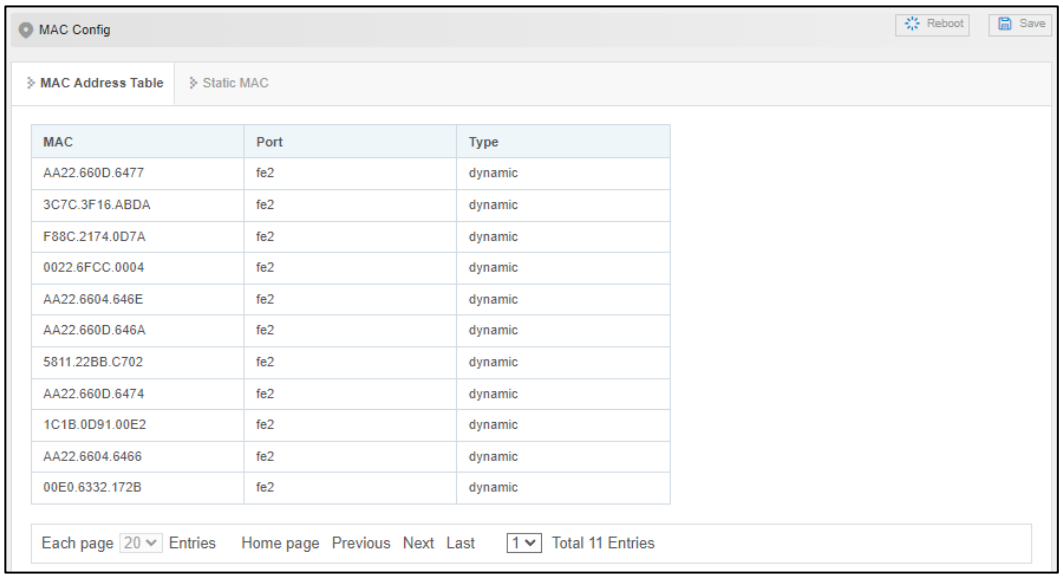

Main elements configuration description of MAC address table interface:

Interface Element	Description
MAC	The dynamic MAC that the device have learned or the static unicast or multicast MAC that user has configured.
Port	Access the port number of the source data of the corresponding MAC address.
Type	The type of MAC address, it displays as follows: • Dynamic: dynamic MAC address; • Static: static MAC address.

5.2.2 Static MAC

Function Description

Support manual binding of unicast MAC addresses. The unicast address after binding is static MAC, which will not age.


Operation Path

Open in order: "Layer-2 Config > MAC Config > Static Mac".

Interface Description

Static MAC interface is as follows:

Copyright © 3onedata Co., Ltd.

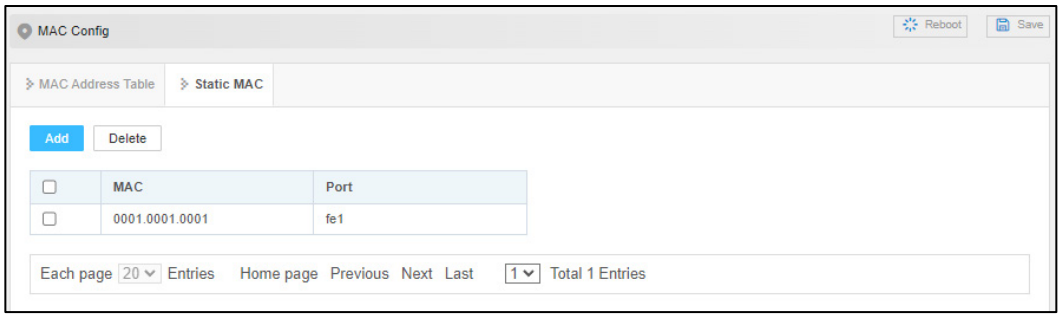

The main element configuration description of static MAC interface:

Interface Element	Description
MAC	Fill in the unicast MAC address that needs to bind the interface, such as 0001.0001.0001.
Port	The Binding Port Number.

Note

- The function is a sort of security mechanism, please carefully confirm the setting, otherwise, part of the devices won't be able to communicate;
- Please don't adopt multicast address as the entering address;
- Please don't enter reserved MAC address, such as the local MAC address.

5.3 Spanning-tree Configuration

Notice

Spanning tree and Ring cannot be enabled at the same time. Please disable the enable switch of the Ring before setting the spanning tree.

Spanning-tree protocol is a sort of layer 2 management protocol; it can eliminate the network layer 2 circuit via selectively obstructing the network redundant links. At the same time, it has link backup function. Here are three kinds of spanning-tree protocols:

- STP (Spanning Tree Protocol)
- RSTP (Rapid Spanning Tree Protocol);

Copyright © 3onedata Co., Ltd.

Spanning-tree protocol has two main functions:

- First function is utilizing spanning-tree algorithm to establish a spanning-tree that takes a port of a switch as the root to avoid ring circuit in Ethernet.
- Second function is achieving the convergence protection purpose via spanning-tree protocol when Ethernet topology changes.

5.3.1 Global Configuration

Function Description


On the "Global Configuration" page, user can configure relative parameters of spanning-tree.

Operation Path

Open in order: "Layer-2 Config > Spanning-tree Config > Global Config".

Interface Description

Global configuration interface is as follows:

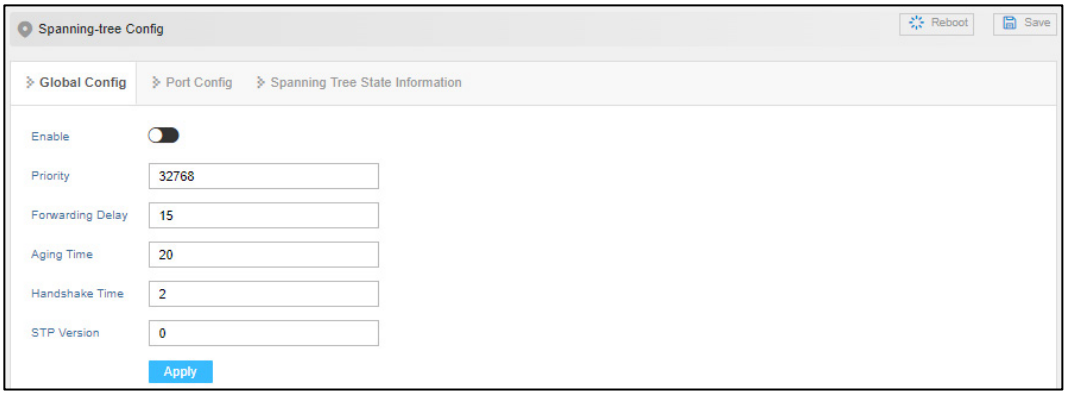

The main element configuration description of global configuration interface:

Interface Element	Description
Enable	Spanning-tree enable switch. Disable by default
Priority	Bridge priority level, defaults to 32768, value range is 0-61440. Note: Smaller the priority level value is, higher the priority level is.
Forwarding Delay	Port state transition delay, defaults to 15S, the value range

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	is 4-30.
Aging time	The maximum lifetime of the message in the device, defaults to 20S, the value range is 6-40. It's used to determine whether the configuration message times out.
Handshake Time	Message sending cycle, defaults to 2S, the value range is 1-10. Note: The spanning tree protocol sends configuration information every Hello time to check whether the link is faulty.
STP Version	STP revision level, defaults to 0, the value range is 0-1. • 0 means STP Spanning Tree Protocol. • 1 means RSTP (Rapid Spanning Tree Protocol)

5.3.2 Port Config

Function Description

On the "Port Config" page, users can enable ports to participate in spanning tree and configure port connection type, path cost, priority and other attributes.


Operation Path

Open in order: "Layer-2 Config> Spanning-tree Config > Port Config".

Interface Description

Check port configuration interface as below:

Copyright © 3onedata Co., Ltd.

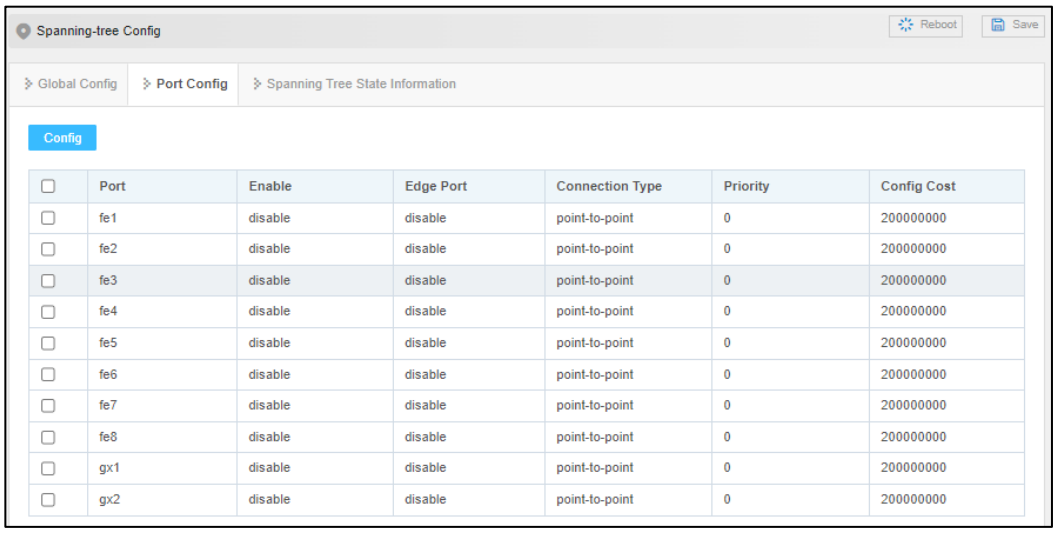

The main element configuration description of port configuration interface:

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
Enable	Status of participating in spanning tree enable switch.
Edge Port	Remote port enable switch: • Enable: participate in spanning-tree; • Disable: not participate in spanning-tree.
Connection Type	Select port link type: • Auto: Automatic system detection • Point-to-point: Point-to-point link is the connection between switches. • Shared: Non-point-to-point link is the connection between switch and hub.
Priority	Port priority, optional values are: 0/16/32/48/64/80/96/112/128/144/160/176/192/208/224/240. Note: Port priority level in bridge, port priority level is higher when the value is smaller. The higher the priority of the port, the more likely it is to be a root port.
Config Cost	The path cost from network bridge to root bridge, defaults to 200000000. Value range: 1-200000000.

5.3.3 Spanning Tree State Information

Function Description

Display information about the root switch and this switch in the spanning tree.


Copyright © 3onedata Co., Ltd.

Operation Path

Open in order: "Layer-2 Config > Spanning-tree Config > Spanning Tree State Information".

Interface Description

The Spanning Tree State Information interface is as follows:

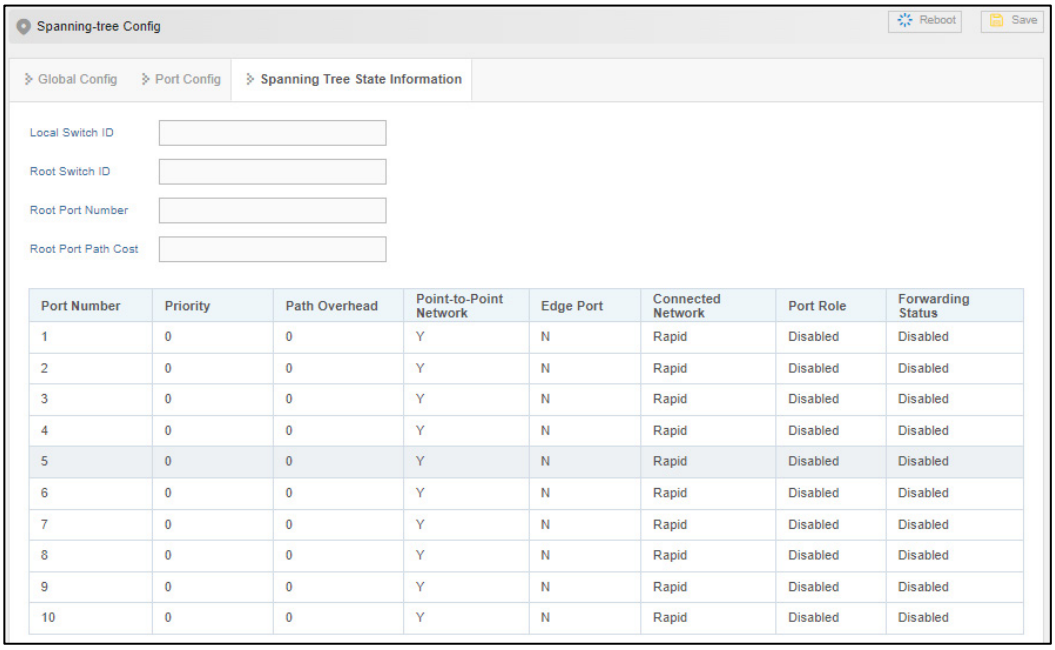

The main element configuration description of RSTP status interface:

Interface Element	Description
Local Switch ID	It displays the priority of this switch and MAC address information ID.
Root Switch ID	It displays the priority of the root switch and MAC address information ID.
Root Port Number	The port of the switch, which is not in the root bridge but nearest to it, is in charge of communicating with the root bridge. The path cost from this port to the root bridge is the lowest. When the path costs of multiple ports are the same, the one with the highest priority would be the root port.
Root Port Path Cost	The root cost of a switch is the sum of root port cost and the root cost that data packet goes through all switches. The root cost of root bridge is zero.
Port Number	Display the device port number.

Copyright © 3onedata Co., Ltd.

Priority	The priority of ports in network bridge. The values range from 0 to 240. The smaller the value, the higher the port priority. The higher the priority, the more likely it is to be a root port.
Path Overhead	The path cost from network bridge to root bridge.
Point-to-Point Network	The directly connected switch port.
Edge Port	The port that directly connects to terminal instead of other switches.
Connected Network	It displays the network protocol of devices with connected ports.
Port Role	Root port, specified port, Alternate port and Backup port.
Forwarding Status	It is divided by whether the port forwards user flow and learns MAC address. • Discarding: neither forward user flow nor learn MAC address; • Learning: doesn't forward user flow but learn MAC address; • Forwarding: forward user flow and learn MAC address; • Listening: neither forward user flow nor learn MAC address; but can receive and send configuration message; • Blocking: port only receives and processes BPDU, doesn't forward user flow; • Disabled: blocked or physically disconnected.

5.4 Ring

Notice

Spanning tree and Ring cannot be enabled at the same time. Please disable the enable switch of spanning tree before setting the Ring.

Ring is an Ethernet Ring network algorithm developed and designed by the company for highly reliable industrial control network applications that require link redundancy

Copyright © 3onedata Co., Ltd.

backup. Features in Ethernet link redundancy, fast automatic recovery. Ring adopts no master station design. In a multi-ring network of up to 250 switches, the network self-recovery time is less than 20 milliseconds. Each port in this series of switches can be used as a ring port and connected with other switches. When an interruption occurs in the network connection, the SW-Ring redundant mechanism enables the backup link to quickly recover the network communication.

Function Description


Quickly configure Ring network.

Operation Path

Open in order: "Layer-2 Config > Ring Config".

Interface Description

Ring network interface is as follows:

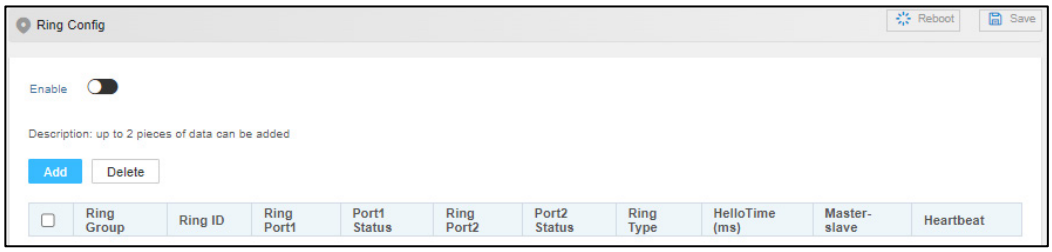

The main element configuration description of Ring network interface:

Interface Element	Description
Enable	Enable switch, slide to the right to enable the Ring ring network function.
Ring Group	Support ring group 1/2, it can create 2 ring networks at the same time.
Ring ID	When multiple switches form a ring, the current ring ID would be network ID. Different ring network has different ID. Value range is 1-255. Note: The ring network identification must remain the same in one ring network.
Ring Port 1	The network port 1 on the switch device used to form the ring network. Note:

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	When the ring network type is "Couple", port 1 is the "Coupled Port". Coupling port is the port that connects different network identities.
Port1 Status	The current state of Port 1. • block • forward
Ring Port2	Port 2 can be used for the formation of ring network in switch. Note: • When the ring network type is “Couple”, port 2 is the “console port”. Console port is the port in the chain where two rings intersect. • “Port 1” and “Port 2” cannot be set to the same port, and the port number it sets must be the same as it actually connects without sequential order;
Port2 Status	The current state of Port 2. • block • forward
Ring Type	According to the requirement in the scene, user can choose different ring type. • Single: single ring, using a continuous ring to connect all device together. • Couple: couple ring is a redundant structure used for connecting two independent networks. • Chain: chain can enhance user’s flexibility in constructing all types of redundant network topology via an advanced software technology. • Dual: Two adjacent rings share a switch; users can carry the same switch on two different networks or two different switching devices on the same network.
Hello Time (ms)	Hello_time is the sending time interval of Hello packet; via the ring port, CPU sends query packet to adjacent device for confirming the connection is normal or not. Input range is 0~100. Note: When the Hello Time value is 0, it means that no inquiry packet is sent.
Master-slave	Single loop network supports no-master station structure and one-master multi-slave structure. • When all the single-loop devices are slave stations, the single-loop structure is no-master station. • When a single ring device is a master and multiple slave

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	station, one device can be designated as the master device and the other devices as the slave device. One end of the main device of the ring network is the backup link. When the ring network fails, the backup link is enabled from the master station to ensure the normal operation of the network.
Heartbeat	Heartbeat detection mechanism. When this configuration is enabled, the network association will periodically send heartbeat messages to detect whether the corresponding devices are in live state, thus enhancing the reliability of the network. Configurable: • Enable • Disable


Notice

- The port that has been set to port trunking could not be set as rapid ring port. One port can't belong to multiple ring networks.
- The ID in the same single ring must be the same; otherwise it cannot form a ring and achieve normal communication.
- To ensure the communication of ring network, it's recommended to set the "Type" of ports that have already been set as ring network to "Trunk" and "member relationship" to "Tagged".
- When forming complicated ring networks like tangent ring, please make sure the ID conforms to the unity of single ring network ID. Network ID of different single ring must be different.

5.4.1 Instance: create single ring

For example: create the following single ring:

Copyright © 3onedata Co., Ltd.

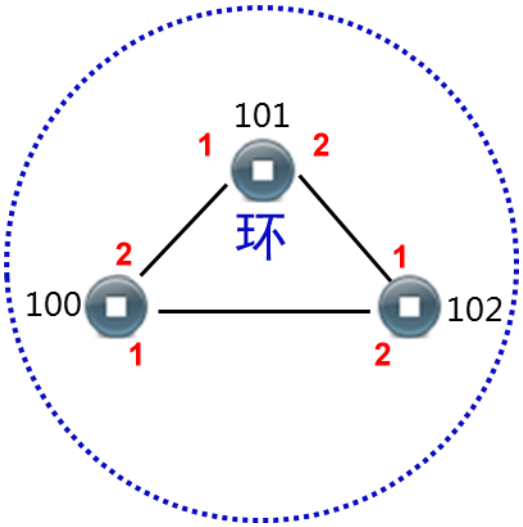

Instance Analysis

The ring ports of Device 100, 101, and 102 are port 1 and port 2. Therefore, creating single ring is viable. Port 1 and port 2 are set as the ring ports of each device.


Operation Steps

Configuring Device 100, 101 and 102 in the following steps:

Step 1 Select “Layer-2 Config > Ring Config”.

Step 2 Turn on the “Enable”.

Step 3 Enter “1” into the “ID” textbox of “Group 1”.

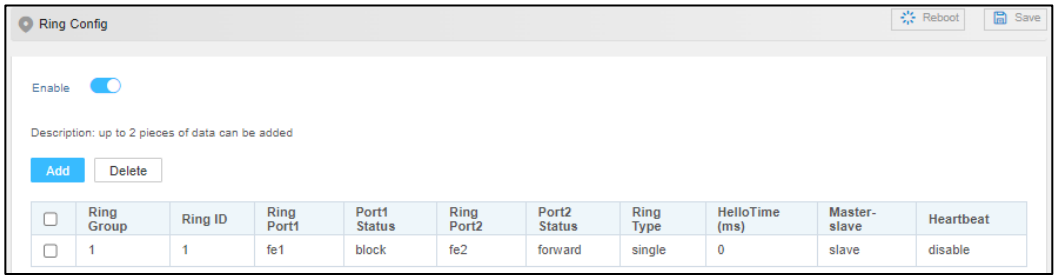

Step 4 Set “Port 1” as “fe1” and “Port 2” as “fe2” separately.

Note:

“Port 1” and “Port 2” cannot be set to the same port.

Step 5 Choose “Single” in the drop-down list of “Type” of “Group 1”.

Step 6 Enter “0” into the “HelloTime” textbox of “Group 1”.

Copyright © 3onedata Co., Ltd.

Step 7 (For Device 100 and 101) Choose “slave” in the drop-down list of “Master-slave” of “Group 1”.

Step 8 (For Device 102) Choose “master” in the drop-down list of “Master-slave” of “Group 1”.

Step 9 Click “Confirm”.

Step 10 End.

5.5 IGMP-Snooping Config

IGMP Snooping (Internet Group Management Protocol Snooping) is a kind of IPv4 layer-2 multicast protocol. It maintains the outgoing information of multicast messages by snooping the multicast protocol messages transmitted between layer 3 multicast device and user host, so as to manage and control the forwarding of multicast data messages in data link layer.

After configuring IGMP Snooping, layer 2 multicast device can snoop and analyze the IGMP message between multicast user and upstream router, and create layer 2 multicast forwarding entries based on these information to control multicast data message forwarding. This prevents multicast data from being broadcast in the layer 2 network.

The ways of IGMP Snooping processing different messages:

- IGMP universal group query message: IGMP universal group query message is sent periodically to all hosts and routers in the local network segment to query which multicast group members are in the network segment.
- IGMP report message: the member receives the IGMP universal group query message and responds by the IGMP report message. The member actively sends an IGMP report message to the IGMP query to declare joining the multicast group.
- IGMP leave message: a member running IGMPv2 sends an IGMP leave message to notify the IGMP query that it has left a multicast group.

5.5.1 Global Configuration

Function Description

Enable/disable IGMP Snooping.

Copyright © 3onedata Co., Ltd.

Operation Path

Open in order: "Layer-2 Config > IGMP-Snooping Config > Global Config".

Interface Description

Global configuration interface is as follows:



The main element configuration description of IGMP Snooping interface:

Interface Element	Description
IGMP Snooping	The switch of IGMP snooping function, options are: • Enable; • Disable. Note: IGMP snooping means snooping the messages between user host and router, as well as tracking multicast information and the ports that have been applied for.
IGMP Query	The switch of IGMP query, options are: • Enable; • Disable. Note: IGMP query means that router inquiring all hosts in subnet if they join some multicast groups.
IGMP Query Interval	IGMP query interval, unit: second. Note: The time range that can be entered is 60~300s.
Group Member Survival Time	The maximum time that multicast members in device can survive from existence to not receiving any response. Unit: second. Note: • IGMP snooping needs to be enabled before using this function. • The time range of group survival that can be set is

Copyright © 3onedata Co., Ltd.

	140-8960s.

Note

- You need to set multicast source and port in one VLAN first to enable IGMP Snooping function.
- Multiple IGMP inquirers should be avoided in network lest cause waste of resources. Please choose all ports if the forwarding relationship of unknown multicast group is uncertain.

5.5.2 Static Multicast MAC

Function Description


Display the dynamic multicast information received by the device interface.

Operation Path

Open in order: "IGMP-Snooping Config > Dynamic Multicast MAC".

Interface Description

The Dynamic Multicast MAC interface is as follows:

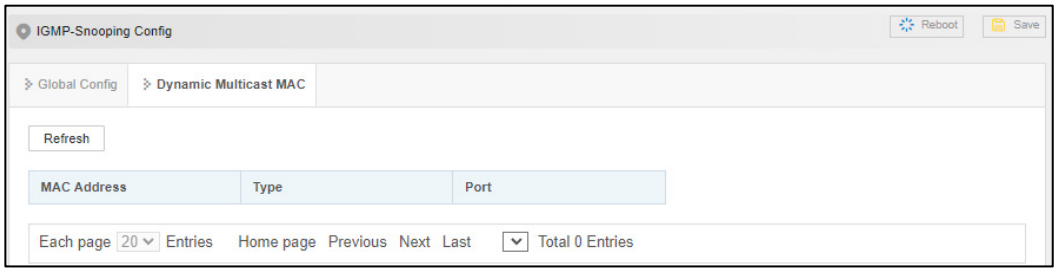

Main element configuration description of multicast group information interface:

Interface Element	Description
MAC Address	The multicast address received by the interface.
Type	Multicast type: • dynamic • static

Copyright © 3onedata Co., Ltd.

Interface Element	Description
Port	Ethernet port.

5.6 Port Loopback Detection

Function Description


Loop protection can be configured to avoid ring network storm.

Operation Path

Open in order: "Layer-2 Config > Port Loop Detection".

Interface Description

Screenshot of Port Loopback Detection interface:

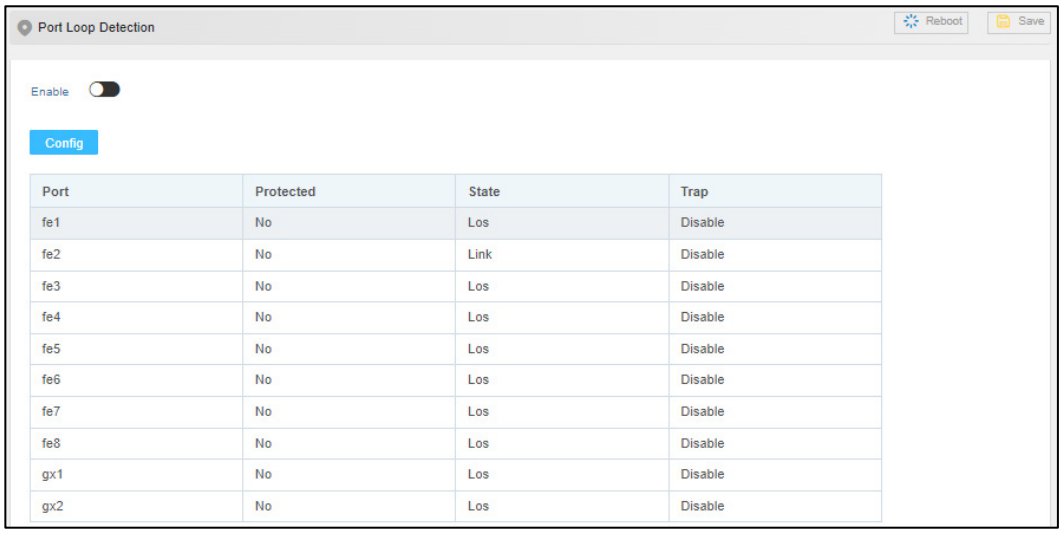

Main elements configuration descriptions of Loop Protection interface:

Interface Element	Description
Enable	Enable or disable port loop detection.
Port	Displays the port number of the device.
Protected	The state of the port protected by a loop. After enabled, when there is a port self-loop or a port loop, the loop can be quickly disconnected, and the port status can be set to blocking or forwarding to avoid network storms. Notice:

Copyright © 3onedata Co., Ltd.

	The loop port cannot be set as a loop detection port.
State	The connection status of this port, values are: • Los: the port is physically disconnected • Link: The port is not looped and the port is connected. • Block: The port is enabled with loop protection function, and the loop has been detected, so it has entered the protection state. • Forward: The port is connected, loop protection is enabled and no loop is detected.
Trap	The Trap switch is used to send or not send Trap information when the port loop is detected. The options are: • Enable • Disable

Copyright © 3onedata Co., Ltd.

6 Network Config

6.1 SNMP Config

Now, the broadest network management protocol in network is SNMP (Simple Network Management Protocol). SNMP is the industrial standard that is widely accepted and comes into use, it's used for guaranteeing the management information transmission between two points in network, and is convenient for network manager search information, modify information, locate faults, complete fault diagnosis, conduct capacity plan and generate a report. SNMP adopts polling mechanism and only provides the most basic function library, especially suit for using in minitype, rapid and low price environment. SNMP implementation is based on connectionless transmission layer protocol UDP, therefore, it can achieve barrier - free connection to many other products.

6.1.1 View

Function Description

Add/delete SNMP view.


Operation Path

Open in order: “Network Config > SNMP Config > View”.

Interface Description

View interface is as follows:

Copyright © 3onedata Co., Ltd.

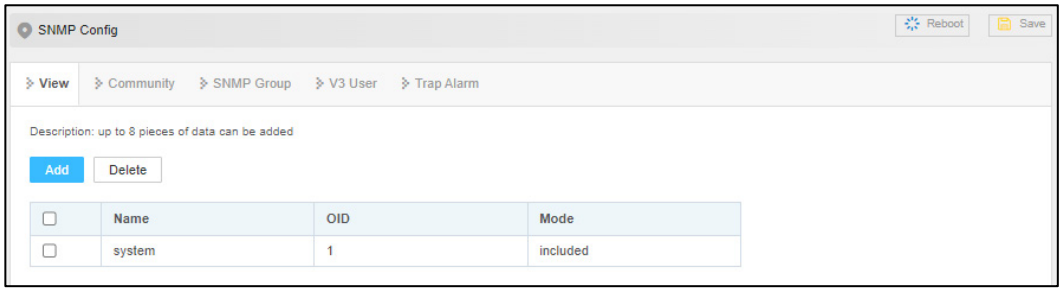

The main element configuration description of view interface:

Interface Element	Description
Name	SNMP view name definition, support 32 characters input including a-z and 0-9.
OID	Node location information of MIB tree where the device resides. Note: • OID object identifier, a component node of MIB, uniquely identified by a string of numbers that represent the path. • The information of OID could be viewed via the third-party software MG-SOFT MIB Browser.
Mode	Node OID dealing method, options as below: • Included: It contains all objects under the node subtree; • Excluded: Eliminate all objects beyond the node subtree.

6.1.2 Community

Function Description

Add SNMP community, and define MIB view that community can access, set MIB object access privilege of community as write privilege or read privilege.


Operation Path

Open in order: “Network Config > SNMP Config > Community”.

Interface Description

Community interface is as below:

Copyright © 3onedata Co., Ltd.

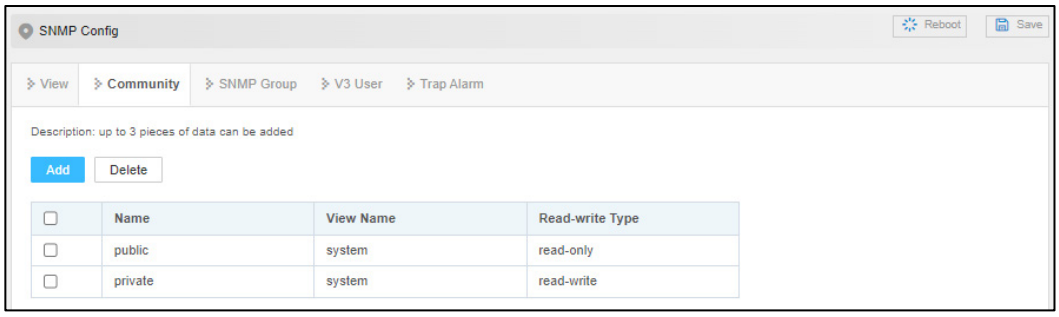

The main element configuration description of community interface:

Interface Element	Description
Name	Group name, including numbers or letters, with a length of no more than 32 characters.
View Name	SNMP view name definition, which has been configured in the View page.
Read-write Type	Read-write privilege view name selection, options: • Read-only • Read-write

6.1.3 SNMP Group

Function Description


Configure a new SNMP group and set the secure mode and corresponding SNMP view of the SNMP group.

Operation Path

Open in order: “Network Config > SNMP Config > SNMP Group”.

Interface Description

SNMP Group interface is as follows:

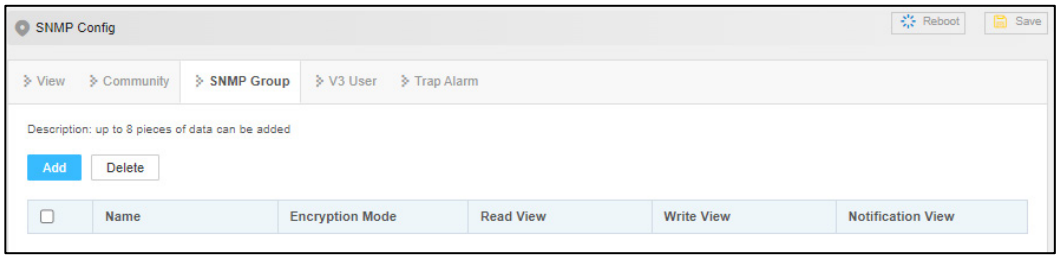

Copyright © 3onedata Co., Ltd.

Main elements configuration description of SNMP Group interface:

Interface Element	Description
Name	SNMP group name, ranging from 1 to 32 bytes.
Encryption Mode	Whether to authenticate and encrypt the message, values: • noauth: indicates that the message is neither authenticated nor encrypted; • auth: indicates that the message is authenticated but not encrypted; • priv: indicates that the message is authenticated and encrypted.
Read View	Specify the read view of the group. Note: The view must be configured in the View interface.
Write View	Specify the write and read view of the group Note: The view can be matched or not. To configure, the view must be configured by the View interface.
Notification View	Specify the notification view of the group. Note: The view can be matched or not. To configure, the view must be the view configured in the View interface.

6.1.4 V3 User

Function Description

SNMPv3 adopts User-Based Security Model (USM) authentication mechanism. Network manager can configure authentication and encryption function. Authentication is used to verify the validity of the packet sender and prevent unauthorized users from accessing it. Encryption encrypts the transmission packet between NMS and Agent to prevent eavesdropping. It adopts authentication and encryption function to provide higher security for the communication between NMS and Agent.


Operation Path

Open in order: "Network Config > SNMP Config > V3 User".

Interface Description

V3 user interface is as follows:

Copyright © 3onedata Co., Ltd.

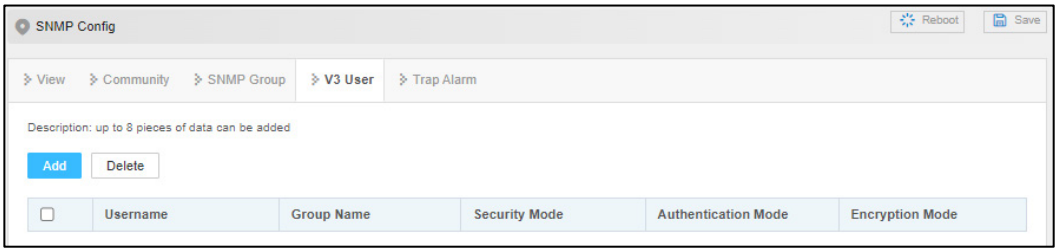


The main element configuration description of V3 user interface:

Interface Element	Description
Username	SNMP v3 user name definition, can only contain numbers, letters, or @_! , no longer than 32 characters.
Group Name	Group name, ranging from 1 to 32 bytes. Note: Group name must be created snmp group, and only created group can create SNMP v3 users.
Security Mode	Whether to authenticate and encrypt the message, values: • auth: indicates that the message is authenticated but not encrypted; • noauth: indicates that the message is neither authenticated nor encrypted; • priv: indicates that the message is authenticated and encrypted.
Authentication Mode	Authentication mode type, acceptable value: • Md5: Information abstract algorithm 5; • Sha: Secure hash algorithm.
Encryption Mode	V3 user data encryption algorithm, options as follows: • Des: Adopt data encryption algorithm; • Aes: Adopt advanced encryption standard.

3onedata proprietary and confidential
Copyright © 3onedata Co., Ltd.

V3 User: “Add” Interface Description

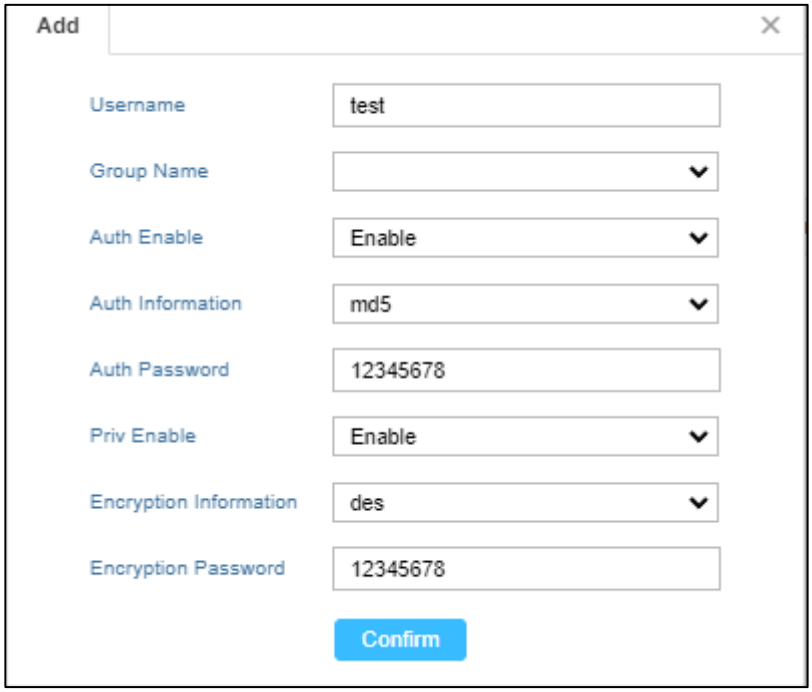

The main element configuration description of V3 user “add” interface:

Interface Element	Description
Username	SNMP v3 user name definition, can only contain numbers, letters, or @_! , no longer than 32 characters.
Group Name	The drop-down list of SNMP group name.
Enable	Indicate that security mode requires authentication. If “disable” is selected, the default is no authentication, no encryption mode.
Auth Information	Authentication information type, acceptable values: • Md5: Information abstract algorithm 5; • Sha: Secure hash algorithm.
Auth Password	Authentication password, character string, length greater than or equal to 8 bytes.
Priv Enable	Indicate that security mode requires encryption.
Encryption Information	V3 user data encryption algorithm, options as follows: • Des: Adopt data encryption algorithm; • Aes: Adopt advanced encryption standard.
Encryption Password	Encrypted password, character string, length greater than or equal to 8 bytes.

3onedata proprietary and confidential
Copyright © 3onedata Co., Ltd.

6.1.5 Trap Alarm

Function Description


Base on TCP/IP protocol, SNMP usually adopts UDP port 161 (SNMP) and 162 (SNMP-traps), SNMP protocol agent exists in the network device and adopts information specific to the device (MIBs) as the device interface; these network devices can be monitored or controlled via Agent. When a trap event occurs, the message is transmitted by SNMP Trap. At this point, an available trap receiver can receive the trap message.

Operation Path

Open in order:"Network Config > SNMP Config > Trap Alarm".

Interface Description

Trap alarm interface is as follows:

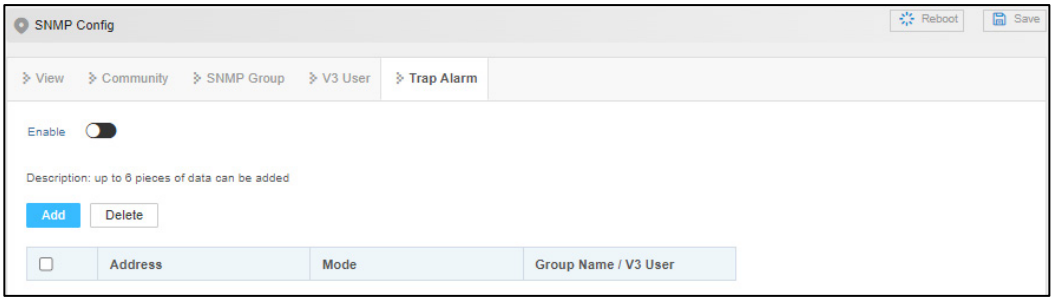

The main element configuration description of Trap alarm interface:

Interface Element	Description
Address	IP address of SNMP management device, used for receiving alarm information, such as PC.
Mode	Managed device that sends an active alert to the NMS. After the inform alarm is sent out, it will wait for the confirmation message from NMS, and if no confirmation message is received, it will resend the Inform message; Trap message has no confirmation process. The types of alarm messages include: • trapV1: send snmpV1 trap • trapV2c: send snmpV2c trap • trapV3: send snmpV3 trap • informV2c: send snmpv2 inform

3onedata proprietary and confidential
Copyright © 3onedata Co., Ltd.

Interface Element	Description
	• informV3: send snmpV3 inform
Group Name/V3 username	Community name or snmpv3 user name.

6.2 LLDP Configuration

LLDP is a layer 2 topology discovery protocol, its basic principle is: Devices in network send the status information message to adjacent device, and each port in the device stores its own information, if there is change in the status of local device, it can also send updated information to the adjacent device directly connected to it. Adjacent devices will store the information in standard SNMP MIB bank. The network management system could inquiry the connection status of current layer 2 from SNMP MIB bank. It should be noted that LLDP is only a remote device status information discovery protocol, which cannot complete the network device configuration, port control and other functions.

6.2.1 Current configuration

Function Description

Enable LLDP and configuration.

Operation Path

Open in order: "Network Config > LLDP Config > Global Config".

Interface Description

The current configuration interface is as follows:



Main elements configuration description of the current configuration interface:

Copyright © 3onedata Co., Ltd.

Interface Element	Description
Enable	The radio box of LLDP function status, check to enable.
Send Period	LLDP transmission period, range 5-300, unit: second, default: 30 Note: When no device status changes, the device periodically sends LLDP packets to its adjacent nodes. The interval is called the period for sending LLDP packets.
Apply	Click "Apply" button to operate.

6.2.2 Port Config

Function Description


Configure the LLDP work mode of the port.

Operation Path

Open in order: "Network Config > LLDP Config > Port Config".

Interface Description

Check port configuration interface as below:

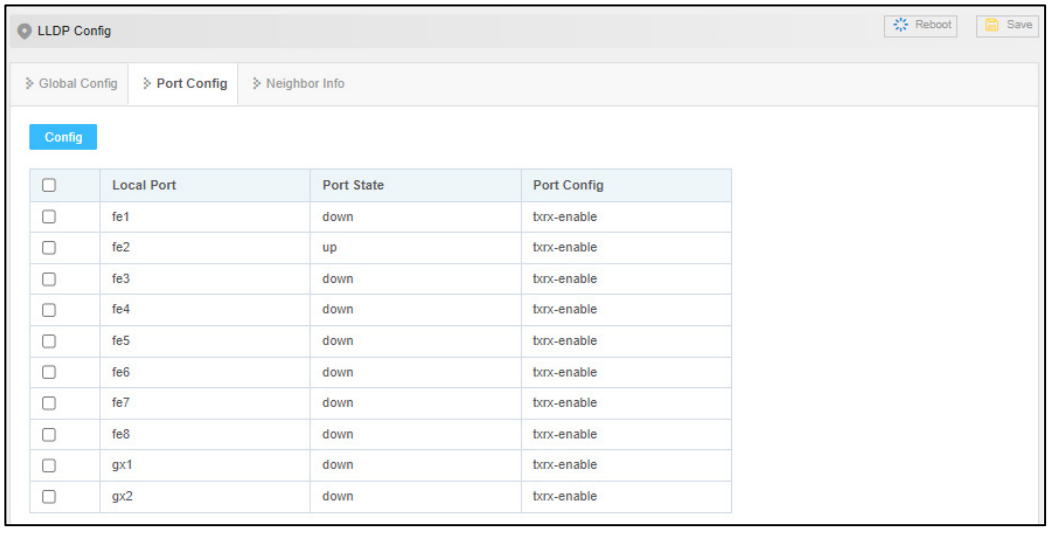

The main element configuration description of port configuration interface:

Interface Element	Description
Local Port	The corresponding port name of the device Ethernet port.

Copyright © 3onedata Co., Ltd.

Interface Element	Description
Port state	Port connection status: • UP • down
Port Config	The options of LLDP working modes of device port are as follows: • tx-enable: working mode is Tx, only sending and not receiving LLDP message. • rx-enable: working mode Rx, only receiving and not sending LLDP message. • txrx-enable: working mode is TxRx, both sending and receiving LLDP message. • disable: working mode is Disable, neither receiving nor sending LLDP message. Note: By default, the working mode of LLDP is TxRx when global LLDP is enabled.

6.2.3 Neighbor Info

Function Description


On the "Neighbors Info" page, user can look over the relative information of neighbors.

Operation Path

Open in order: " Network Config > LLDP Config > Neighbor Info".

Interface Description

Neighbor information interface is as follows:

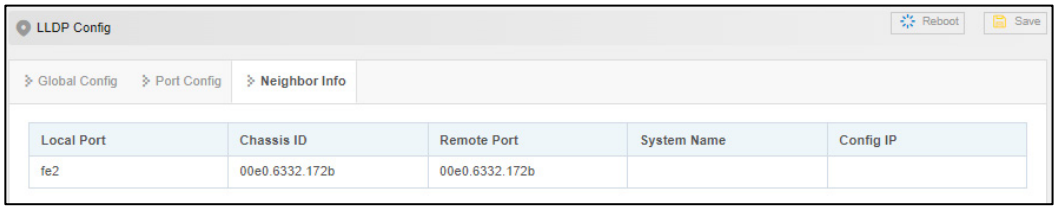

Main elements configuration description of neighbor information interface:

Copyright © 3onedata Co., Ltd.

Interface Element	Description
Local Port	Local port number of local switch connected to adjacent devices.
Chassis ID	Bridge MAC address of neighbor device or port.
Remote Port	Port number of neighbor device.
System Name	System name of the neighbor device.
Config IP	Management IP address of neighbor device or port.

6.3 DHCP-Server Config

DHCP (Dynamic Host Configuration Protocol) is usually applied to large LAN environment. Its main functions are centralized management and IP address distribution, which enables the host in the network to acquire IP address, Gateway address, DNS server address dynamically and improve the usage of addresses.

6.3.1 DHCP Switch

Function Description


On the "DHCP Switch" page, user can enable/disable DHCP.

Operation Path

Open in order: "Network Config > DHCP-Server Config > DHCP Switch".

Interface Description

DHCP switch interface is as follows:

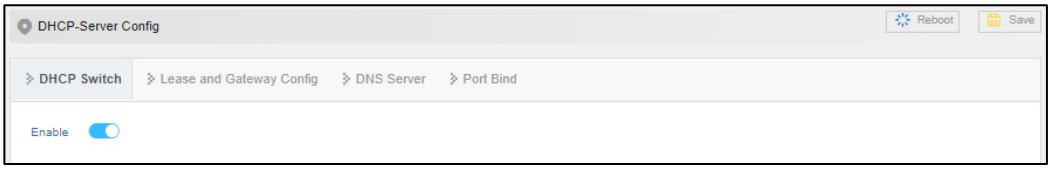

The main element configuration description of DHCP switch configuration interface.

Interface Element	Description
Enable	After enabling the switch, the device, as a DHCP server, can distribute IP address to devices connected to it by setting static allocation address table.

Copyright © 3onedata Co., Ltd.

6.3.2 Lease and Gateway Configuration

Function Description


Set the valid time and default gateway for the IP address of the client.

Operation Path

Open in order: "Network Config > DHCP-Server Config > Lease and Gateway Config".

Interface Description

The Lease and Gateway Configuration interface is as follows:

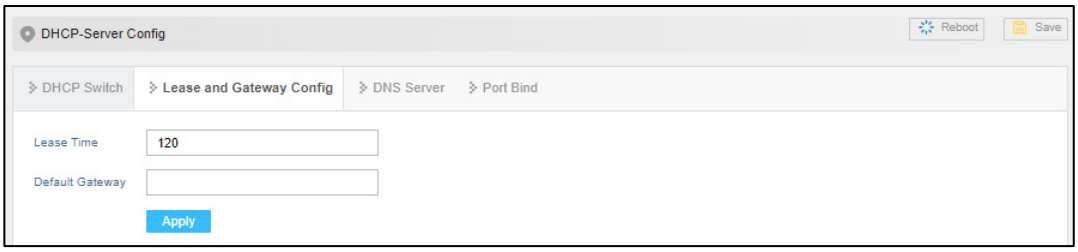

The main element configuration description of Lease and Gateway Configuration interface:

Interface Element	Description
Lease Time	The IP address of the client is valid for use. The default value is 120, the unit is min, and the value range is 1-65535. Note: When the time of ip address obtained by dhcp client reaches the lease time, it needs to renew it otherwise the ip address would be invalid and dhcp client needs to request ip address again.
Default Gateway	Default client gateway address, example: 255.255.255.0.

6.3.3 DNS Server

Function Description

Configure the DNS server address. Parse the domain name to be visited to an IP address, realizing domain name access network.


Copyright © 3onedata Co., Ltd.

Operation Path

Open in order: "Network Config > DHCP-Server Config > DNS Server".

Interface Description

Server configuration interface is as follows:

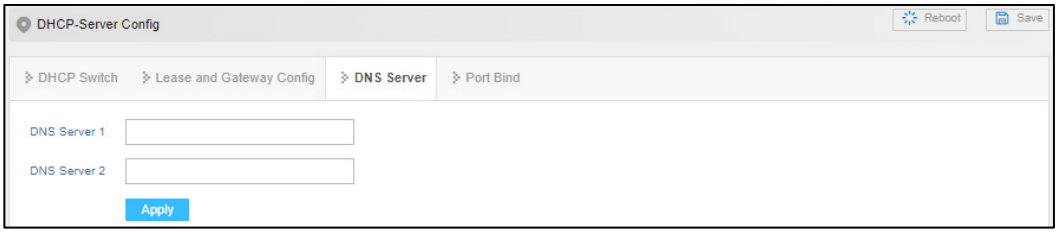

The main element configuration description of server configuration interface:

Interface Element	Description
DNS Server 1	IP address of domain name resolution server 1.
DNS Server 2	IP address of domain name resolution server 2.

6.3.4 Port Binding

Function Description

Bind the relationship of IP addresses assigned by ports.

Take Device A and Device B as examples.

If DHCP Server function is enable on Device A and two static address allocation tables are set:

- 192.168.1.19 corresponds to Port 1;
- 192.168.1.20 corresponds to Port 2.

After the function of automatically obtaining the IP address is enabled on Device B,

- If Device A is connected to Device B through port 1, Device B can automatically obtain the IP address of 192.168.1.19;
- If Device A is connected to Device B through port 2, Device B can automatically obtain the IP address of 192.168.1.20.


Copyright © 3onedata Co., Ltd.

Operation Path

Open in order: "Network Config > DHCP Server Config > Port Bind".

Interface Description

Port bind configuration interface is as follows:

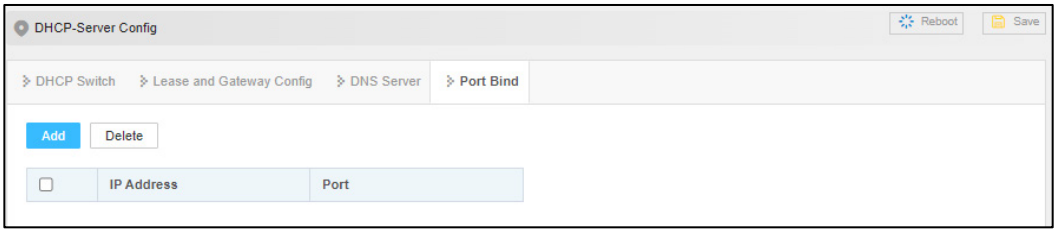

The main element configuration description of port binding interface:

Interface Element	Description
IP Address	IP address that DHCP address pool distributes, the IP addresses that client gains in the port.
Port	The corresponding port name of the device Ethernet port.

6.4 Access Control

6.4.1 Port Authentication

IEEE 802.1X protocol is a port-based network access control protocol, that is, user devices are authenticated on the ports of LAN access devices so that user devices can control access to network resources.

IEEE 802.1x adopts the logic functions of "controllable port" and "uncontrollable port" in the authentication architecture, thus realizing the separation of business and authentication. After the user passes the authentication, the business flow and the authentication flow realize the separation. It has no special request to the subsequent packet processing, the service can be very flexible, and has a great advantage in business especially in carrying out broadband multicast, all services are not restricted by the authentication method.

802.1X structure mainly consists of three parts:

Copyright © 3onedata Co., Ltd.

- Supplicant: user or client that wants to get the authentication;
- authentication server: typical example is RADIUS server;
- Authentication system Authenticator: access devices, such as wireless access points, switches, etc

Function Description


Enable and configure 802.1X Authentication parameter.

Operation Path

Open in order: "Network Config > Access Control > Port Authentication".

Interface Description

The screenshot of Port Authentication interface is as follows:

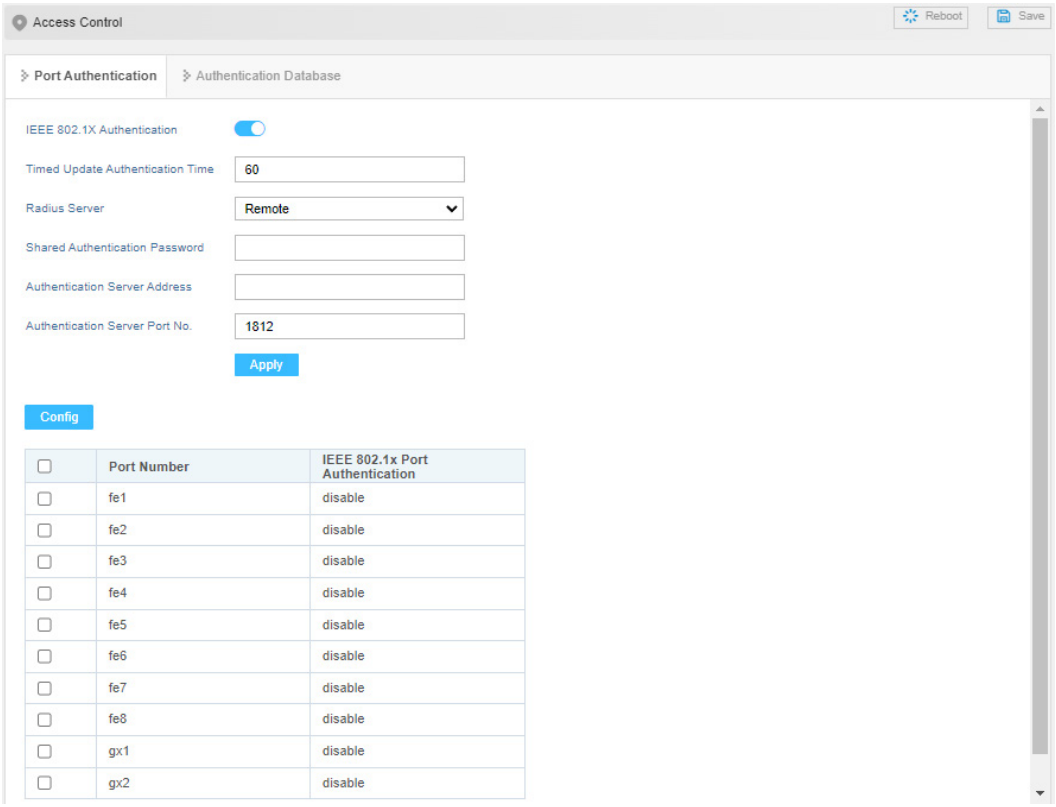

The main element configuration description of port authentication interface:

Interface Element	Description
IEEE802.1X Authentication	Enable/disable IEEE802.1X authentication.
Timed Update Authentication Time	The range of authentication upgrade interval is 60~4095, unit: second. The reauthentication interval of 802.1x used for

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	strengthening the security of authentication.
Radius Server	Local internal Radius server and external Radius server configuration: • Local: built-in Radius server, if choosing internal Radius server, the applicant will only use the username and password of internal Radius database. • Remote: fill in the IP address, port number and shared password for authentication of the authentication server if using external Radius server.
Shared Authentication Password	The shared password character string used for device accessing Radius server. Supports combinations of letters, numbers and symbols with a length of no more than 50 characters.
Authentication Server Address	IP address of Radius server
Authentication Server Port No.	The port number of the Radius server. The default is 1812, value range is 1-65535.
Port Number	Switch port number.
IEEE802.1x Port Authentication	IEEE802.1X authentication state of the port: • Enable; • Disable.

6.4.2 Authentication Database

Function Description

Set the username and password locally authenticated by 802.1X, and add, delete and save users.


Operation Path

Open in order: “Network Config > Access Control > Port Authentication > Authentication Database”.

Copyright © 3onedata Co., Ltd.

Interface Description

Screenshot of database authentication interface:

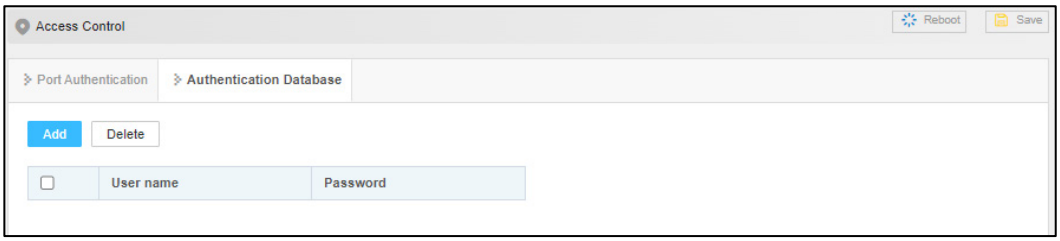

The main element configuration description of database authentication interface:

Interface Element	Description
User name	Username of logging into local authentication.
Password	Password of logging into local authentication

6.5 QoS

6.5.1 QoS Classification

QoS (Quality of Service) is used to evaluate the ability of the service provider to meet the service needs of customers. As for network business, service quality includes transmission bandwidth, transfer delay, data packet loss rate and so on.

The service quality issues that traditional network faces are caused by network congestion. The so-called congestion refers to the phenomenon that the forwarding rate decreases and extra delays are introduced due to the relative shortage of supply resources, thus leading to the decline of service quality. As for congestion management, queue technology is generally adopted. It uses a queue algorithm to classify flow, then uses some priority algorithm to send these flow.


Priority is used to tag the priority of message transmission.

- CoS

  Ethernet defines 8 business priorities (CoS, Class of Service) in the VLAN TAG of Ethernet frame head. The 802.1Q label head of 4 bytes has included 2-byte TPID (Tag Protocol Identifier) and 2-byte TCI (Tag Control Information), TPID's is 0x8100, the following graph has displayed the details of 802.1Q label head, priority


Copyright © 3onedata Co., Ltd.

field is 802.1p priority.

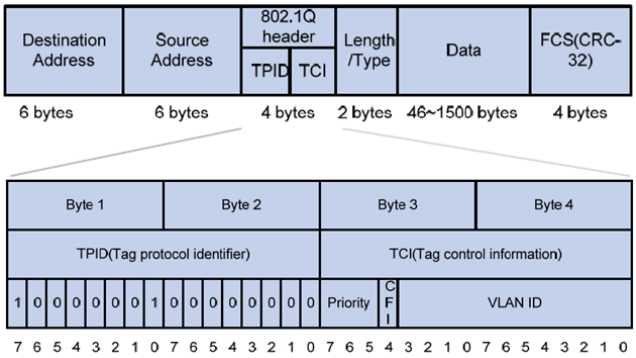

- ToS

  The ToS (Type of Service) domain in the head of IP message is called DS (differential Services) domain, in which the priority of DSCP is represented by the first 6 digits (0 ~ 5 digits) of this domain, with a value range of 0-63, and the last 2 digits (6 and 7 digits) are reserved. The greater the priority level value, the higher the priority level.

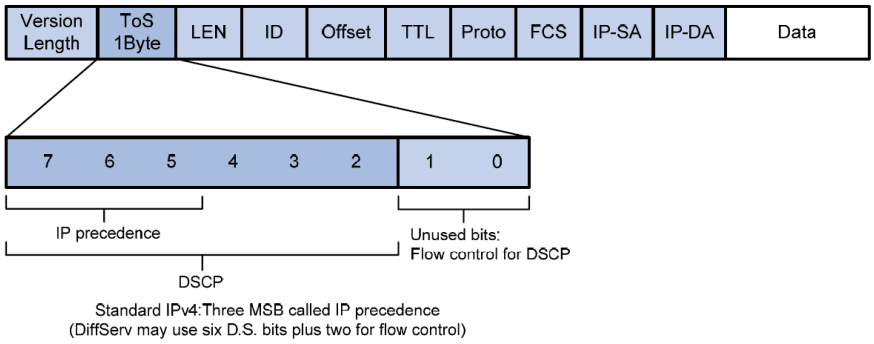

Function Description

Set the queue mechanism of the device and the priority parameters of each port.


Operation Path

Open in order: “Network Config > QoS > Classification of QoS”.

Interface Description

Screenshot of QoS Classification interface:

Copyright © 3onedata Co., Ltd.

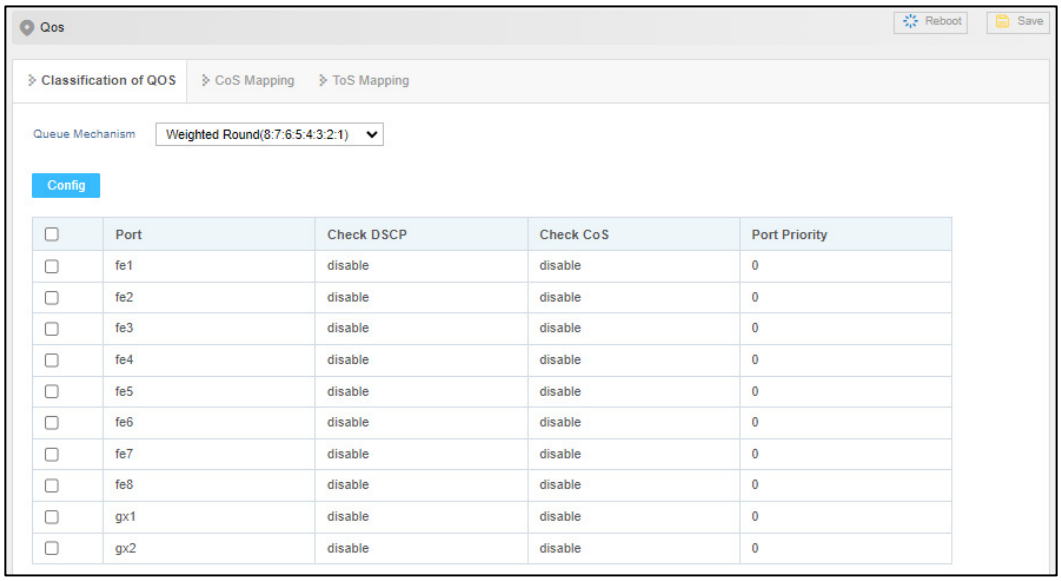

The main element configuration description of QoS classification interface:

Interface Element	Description
Queue Mechanism	Queuing scheduling setting, options are: • Weighted Fair (8:4:2:1): according to the queue's weighted value 8:4:2:1, weighted round-robin queue scheduling algorithm would schedule queues in turn to ensure that each queue can get some service time. • Strict (Strict Priority): Strict priority queue scheduling algorithm includes 4 queues and schedules in the decreasing order of priority. When the queue with fairly high priority is empty, then it would send groupings of queue with fairly low priority.
Port	The switch port number.
Check DSCP	After checking the checkbox, the priority of ToS would be inspected during queue scheduling.
Check CoS	After checking the checkbox, the priority of CoS would be inspected during queue scheduling.
Port Priority	To configure default port priority for ports that haven't enabled ToS and CoS priority. The value range is 0-7. The higher the value, the higher the priority. Note: By default, switch would use port priority in place of the 802.1p priority the port comes with when receiving message to control the quality of service the messages deserve.

Copyright © 3onedata Co., Ltd.

Note

- When the ToS and CoS are not enabled, queuing and scheduling are in the order of port priority.
- When the ToS or CoS are enabled, queuing and scheduling according to ToS or CoS instead of considering port priority.
- If the ToS and CoS are enabled at the same time, queuing according to ToS priority. When the ToS values are the same, queuing according to CoS priority.

6.5.2 CoS Mapping

Function Description


On the page of “CoS Mapping”, user can configure mapping between CoS value and priority queues.

Operation Path

Open in order: “Network Config > QoS > CoS Mapping”.

Interface Description

Screenshot of CoS Mapping interface:

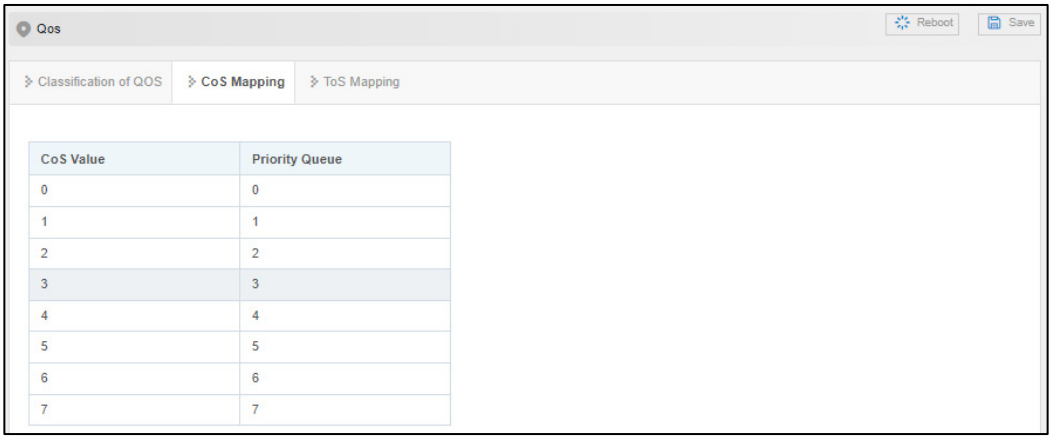

The main element configuration description of QoS mapping interface:

Interface Element	Description
CoS value	Display CoS value.
Priority Queue	Set mapping between CoS value and priority queue, priority

Copyright © 3onedata Co., Ltd.

	queue is as follows: • Low: low priority queue • Normal: normal priority queue; • Medium: medium priority queue • High: high priority queue

6.5.3 ToS Mapping

Function Description


On the page of “ToS Mapping”, user can configure mapping between CoS value and priority queue.

Operation Path

Open in order: “Network Config > QoS > ToS Mapping”.

Interface Description

Screenshot of ToS Mapping interface:

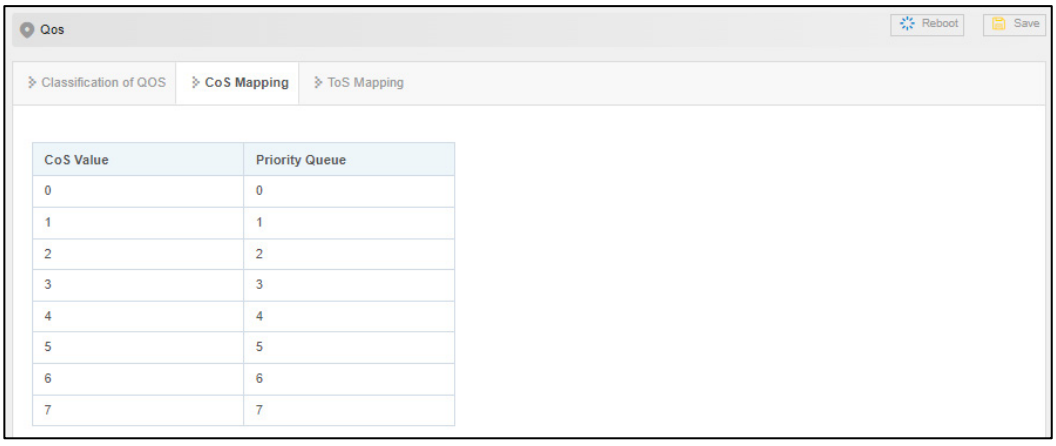

The main element configuration description of ToS mapping interface:

Interface Element	Description
ToS (DSCP) value	It displays ToS (DSCP) in hexadecimal and decimal format simultaneously. The value in the bracket is decimal.
Priority Queue	Set mapping between ToS value and priority queue, options are as follows:

Copyright © 3onedata Co., Ltd.

	• Low: low priority queue • Normal: normal priority queue • Medium: medium priority queue • High: high priority queue

6.6 Modbus_TCP

Function Description

Modbus TCP monitoring function can be enabled. Client can read the switch system, port, ring network, frame statistics and other parameters information via Modbus TCP protocol, which are convenient for various integrated systems to monitor and manage the device.

Note

Please see the switch read-only register address information in the "Modbus TCP data sheet" of this section.

Operation Path

Open in order: "Network Config > Modbus TCP".

Interface Description

Modbus TCP screenshot:



The main element configuration description of Modbus TCP interface:

Interface Element	Description
Modbus TCP	Modbus TCP monitoring enable switch, which is disabled by default. After enabling Modbus TCP monitoring function, client can read the switch device information via function code 4.

Copyright © 3onedata Co., Ltd.

Modbus TCP Data Sheet

Switch read-only register (support function code 4) address information and stored device information, as the table below:

Note

The following table address is hexadecimal format, please convert it into suitable format according to the demands of current debugging tool.

Information Type	Address (HEX)	Data Type	Description
System Information	0x0000	2 Words	Device ID (reserved)
	0x0002	16 Words	Name (ASCII display)
	0x0012	16 Words	Description (ASCII display)
	0x0022	3 Words	MAC address (HEX display)
	0x0025	2 Words	IP address
	0x0027	16 Words	Contact information
	0x0037	16 Words	Firmware Ver (ASCII display)
	0x0047	16 Words	Hardware Ver (ASCII display)
	0x0057	16 Words	Serial No.
	0x0067	1 Word	Power supply 1 status: • 0x0000:OFF • 0x0001:ON
	0x0068	1 Word	Power supply 2 status: • 0x0000:OFF • 0x0001:ON
Port Information	0x1000-0x101B	1 Word	Port connection status: • 0x0000:Link down • 0x0001:Link up • 0x0002:Disable • 0xFFFF:No port
	0x101D-0x1038	1 Word	Port operating mode: • 0x0000:10M-Half • 0x0001:10M-Full • 0x0002:100M-Half • 0x0003:100M-Full

3onedata proprietary and confidential
Copyright © 3onedata Co., Ltd.

Information Type	Address (HEX)	Data Type	Description
			• 0x0004:1G-Half • 0x0005:1G-Full • 0xFFFF:No port
	0x1039-0x1054	1 Word	Port flow control status: • 0x0000:OFF • 0x0001:ON • 0xFFFF:No port
	0x1056-0x1071	1 Word	Port interface type: • 0x0000: Copper port • 0x0001: Fiber port • 0x0002: Combo port • 0xFFFF:No port

Example: MODBUS TCP Configuration

Acquire the switch device name information via DebugTool analogue client, the switch information as follows:

- Switch default IP address: 192.168.1.254;
- Address of switch register that stores the device name information: 0x002;
- Number of switch register that stores the device name information: 16 words;


Operation Steps

First, configure the switch Modbus TCP monitoring enable.

Step 1 Log into Web configuration interface.

Step 2 Select "Network Config > Modbus TCP".

Step 3 Slide on the "Modbus TCP" enable switch, as shown in the figure below.

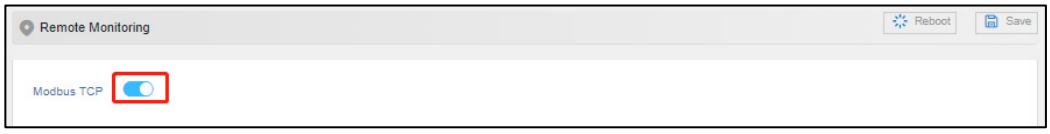

Step 4 End.


Then, run the debug tool software to acquire the device parameters.

Step 5 Open "Debug Tool".


Copyright © 3onedata Co., Ltd.

Step 6 Click the drop-down list of "Create connection".

Step 7 Select "Create Modbus debugging > ModbusPoll", as the picture below.

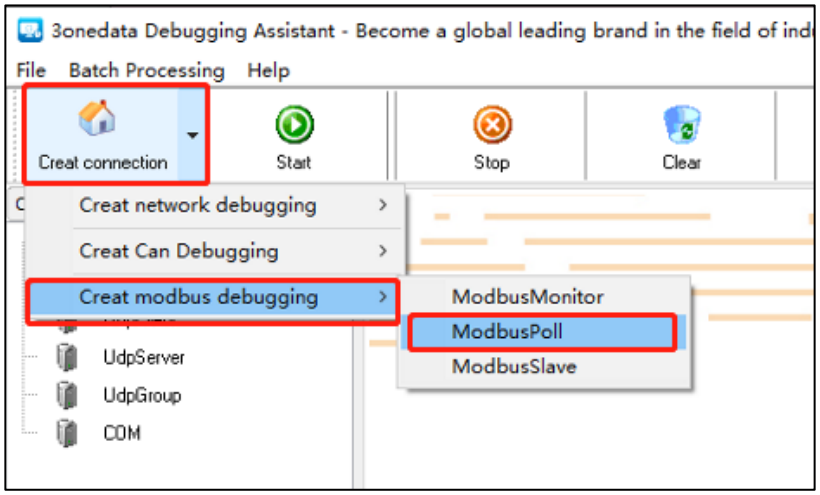

Step 8 Configuration window of ModbusPoll parameters pops up, the configuration as the picture below:

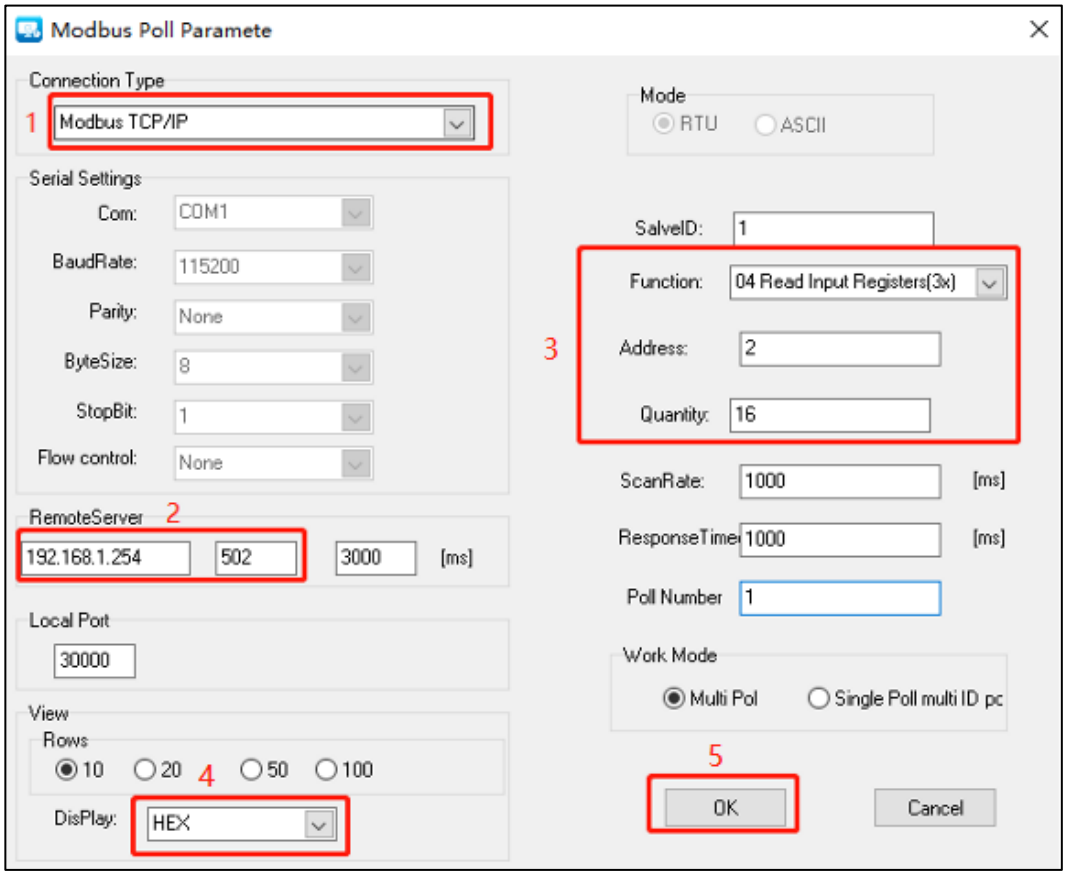

1 On the drop-down list of "Connection Type", select "Modbus TCP/IP";

1 Enter the switch IP address "192.168.1.254" and port number "502" on the column of "Remote Server";

Copyright © 3onedata Co., Ltd.

2 Select "04 Read Input Registers (3x)" on the drop-down list of "Function";

3 Enter decimal device name register address "2" on the text box of "Address";


Notice:
Here the start address is decimal format, so hexadecimal register address should be converted into decimal format.

4 Enter the register amount "16" on the text box of "Quantity";


5 Select "HEX" on the drop-down list of "Display";

6 Click "OK".

Step 9 On the page of Debug Tool, select created ModbusPoll, and then click "Start";

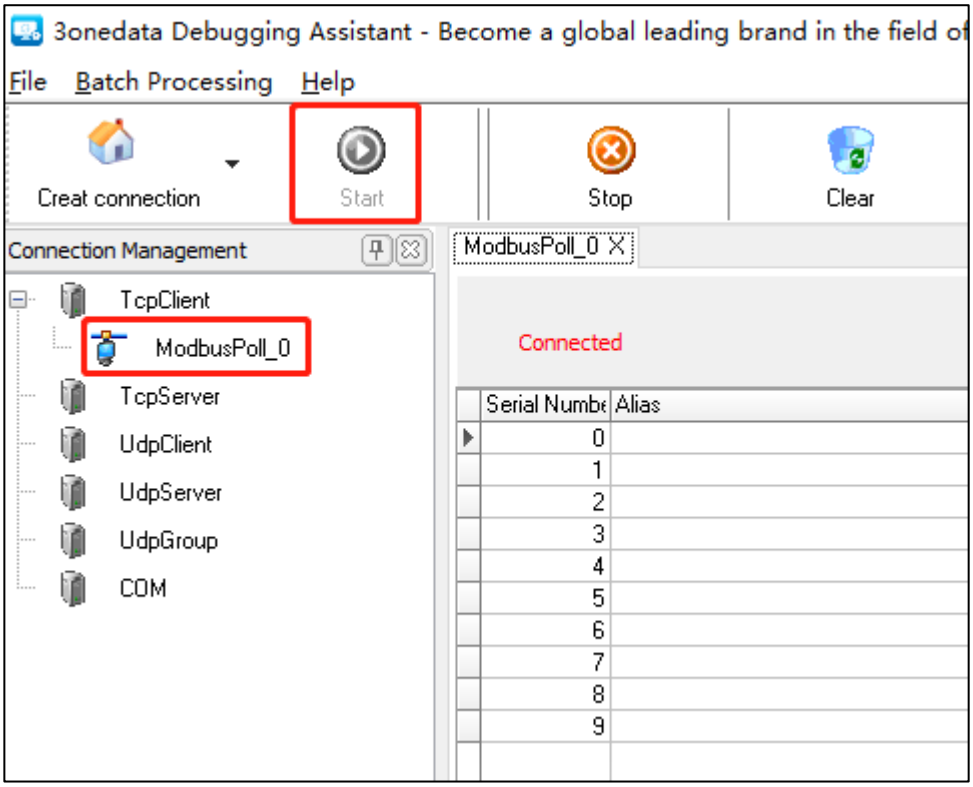

Step 10 Check responsive data, and convert the hexadecimal value read by register into ASCII code, displayed as "Industrial Switch";

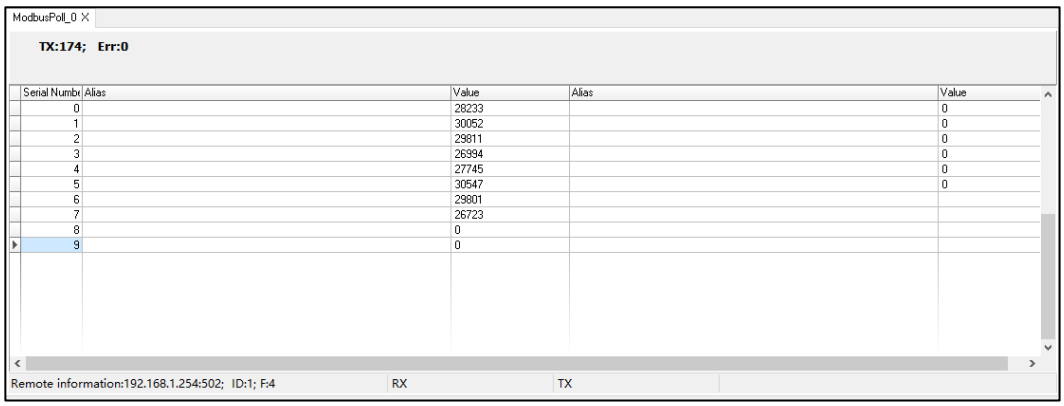

Copyright © 3onedata Co., Ltd.

Step 11 End.

Note

- Switch can establish 4 Modbus TCP monitoring connections at the same time.
- Switch Port Information, Frame Statistics and PoE Information. It supports the sequential read of port parameters of multiple registers. For example, address range of the register that stores port connection status information is 0x1000-0x101B, each register data is 1 word; when the start address of register is 0x1000, the register number is 1, it will read port 1 status; If the register quantity is 10, it will read the status from Port 1 to Port 10; If the port doesn't exist, then the read data will be 0xFFFF.

3onedata proprietary and confidential
Copyright © 3onedata Co., Ltd.

7 CAN Server

7.1 CAN Settings

Function Description


Check and configure baud rate, woke mode, subcontract frame number, CAN frame limit and other parameters of each CAN port of the device.

Operation Path

Open: "CAN Server > CAN Settings".

Interface Description

The CAN setting interface is as follows:

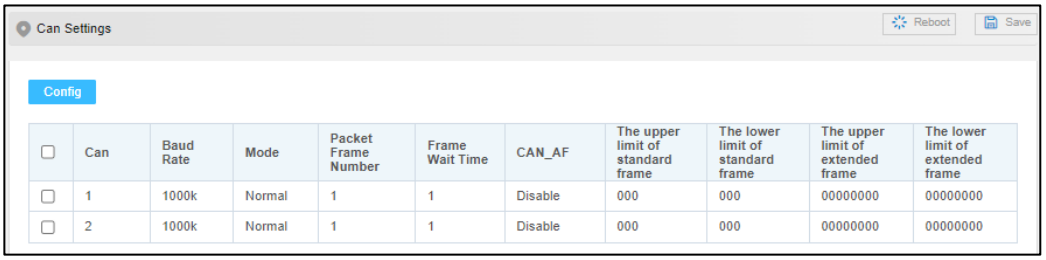

The main element configuration description of CAN settings interface:

Interface Element	Description
Can	Display the CAN port number of the device.
Baud Rate	Display the baud rate of the device's CAN port.
Mode	Display the work mode of the device's CAN port. • Normal: the device is in normal operating status. • Just Listen: CAN server is in interception status and can't send data. • Self Test: the device is in the self-transmitting and receiving operation status.
Packet Frame Number	Display the number of CAN frames received when


Copyright © 3onedata Co., Ltd.

Interface Element	Description
	the device CAN port encapsulates Ethernet packets.
Frame Wait Time	Display the time interval of CAN frames received when the device CAN port encapsulates Ethernet packets.
CAN_AF	Display acceptance and filtering status of the device's CAN port. • Enable • Disable
The upper limit of standard frame	Display the upper limit of standard frame received by the device's CAN port.
The lower limit of standard frame	Display the lower limit of standard frame received by the device's CAN port.
The upper limit of extended frame	Display the upper limit of extended frame received by the device's CAN port.
The lower limit of extended frame	Display the lower limit of extended frame received by the device's CAN port.
Config	Click "Config" to modify the parameters of corresponding CAN port.

Click "Config" in the CAN entry to modify the current CAN port parameters.

Interface Description: Configuration

The current configuration interface is as follows:

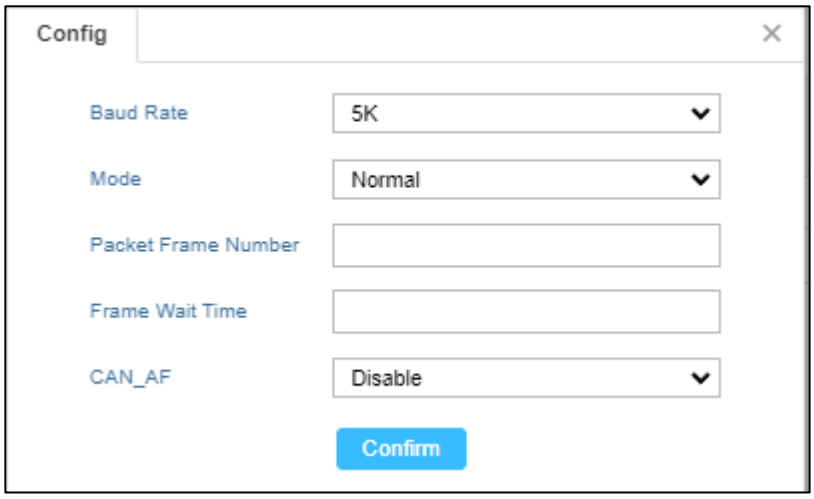

Copyright © 3onedata Co., Ltd.

The main element configuration description of configuration interface:

Interface Element	Description
Baud Rate	CAN baud rate drop-down list, options as follows: 5K/10K/20K/50K/100K/125K/250K/500K/1000K
Mode	The drop-down list of CAN work mode, the options are as follows: • Normal: the device is in normal operating status. • Just Listen: CAN server is in interception status and can't send data. • Self Test: the device is in the self-transmitting and receiving operation status.
Packet Frame Number	When the CAN port continuously receives data and the received CAN frame number reaches "Frame Number", the received data is packaged as an Ethernet packet and sent out, settable value is 0~50.
Frame Wait Time	When the CAN port doesn't receive the new data frame within defined time of "Frame Wait Time", the received data that hasn't been sent out is packaged to an Ethernet packet sent to the Ethernet port, settable value is 1~254ms.
CAN_AF	CAN_AF check box, click to enable CAN port acceptance and filtering function. After enabled, the data will be eliminated if the standard frame and the extended frame ID received by CAN port are not in the restricted range.

7.2 CAN Mode

Function Description

Configure the work mode of corresponding device CAN port.

The working modes supported by the device are:

- CAN TCP Server Mode
- CAN TCP Client Mode
- CAN UDP Server Mode


Copyright © 3onedata Co., Ltd.

- CAN UDP Client Mode
- CAN UDP Rang Client Mode

Operation Path

Open in order “CAN Mode > CAN1”. Under the menu of "CAN Mode", the corresponding CAN port information can be configured by entering different CAN ports. The configuration operation mode of all CAN ports' WEB interfaces is the same.

7.2.1 TCP Server Mode

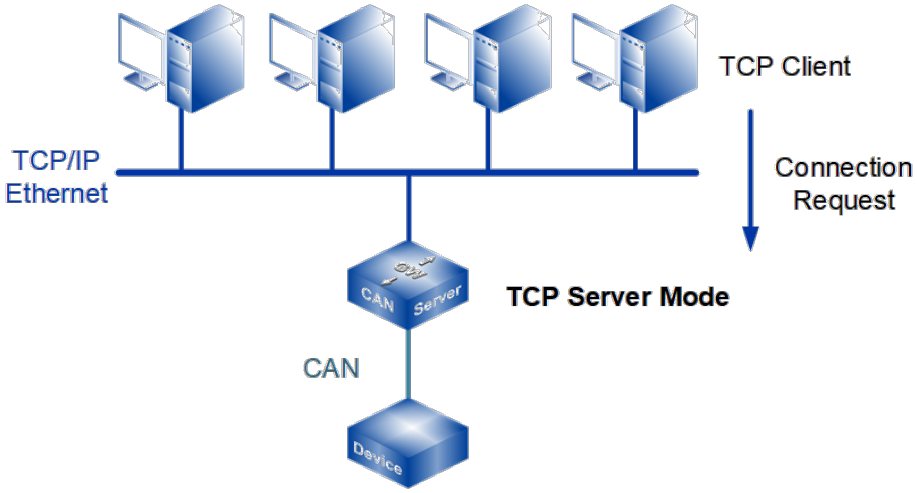


In CAN TCP server mode, the device is assigned an IP port number and passively waits for the host to connect. After the host initiates connection request and establish connection to the device, the host can realize the data transmission via network connection and CAN port. CAN TCP Server Mode supports multiple session connection at the same time, so that multiple hosts can read or send Ethernet data to a CAN port device at the same time.

Interface Description

TCP server mode interface is as follows:

Copyright © 3onedata Co., Ltd.

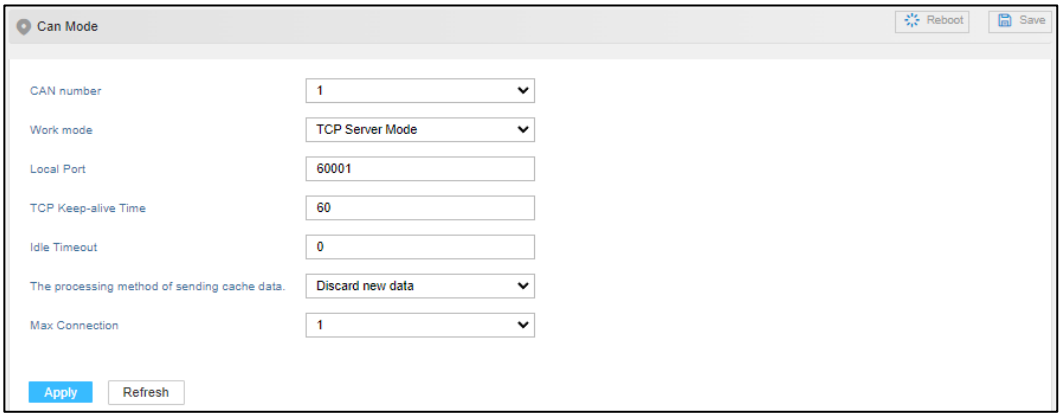


TCP server mode interface main element configuration instructions:

Interface Element	Description
The CAN number	Display the CAN number of the device currently configured.
Work mode	The working mode of CAN port of the device, TCP Server Mode. Note: The configuration parameters displayed under different working modes are different.
Local port	Local port of the device, effective range is 1-65535. Note: TCP port provided by the device that can be connected by other TCP/IP nodes, which is associated with the corresponding CAN port of the device.
TCP Alive Time	If no TCP activity occurs within the allotted time, the system would send contact-probing message to check the validity of TCP connection. If the reply packet of opposite side hasn't been received after sending probe packet for 3 times, system will regard the opposite side as down and forwardly close the communication connection. If set TCP Alive Time to "0", the function will be disabled. Effective time range 0~65535s.
Idle timeout	The idle time of device's communication link, valid time range 0~65535s. • TCP Timeout > 0: If there is no data communication between the server and client, the server and client will break connection. • TCP Timeout = 0: When there is no data communication between the server and client, the server and client will keep in connection status.

Copyright © 3onedata Co., Ltd.

Interface Element	Description
The processing method of sending cache data.	When sending cache data overflows, the data can be processed as follows: • Discard new data; • Discard old data.
Max connection numbers	The maximum session number supported by the device's CAN port. Note: Session refers to the process the device transmits data received from CAN port to Ethernet via socket connection. More than one session number represents the device transmits the data received from CAN port to Ethernet via more than one socket.

7.2.2 TCP Client Mode

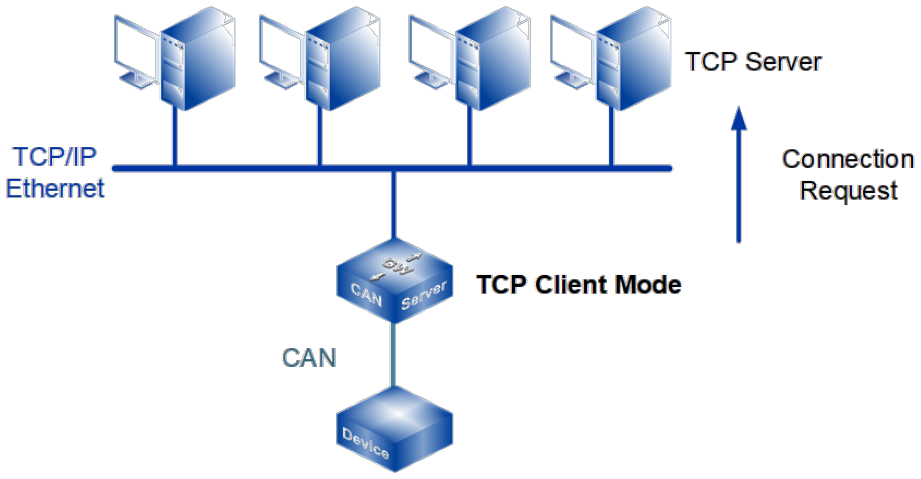


In CAN TCP client mode, the device can actively establish a network connection with the host specified by the user when the CAN port data arrives. After the data transmission is completed, the device will automatically close the network connection according to TCP keep-alive time/idle timeout and other parameters. CAN TCP Client Mode supports multiple session connection at the same time, so that multiple hosts can read or send Ethernet data to a CAN port device at the same time.

Interface Description

TCP Client mode interface is as follows:

Copyright © 3onedata Co., Ltd.

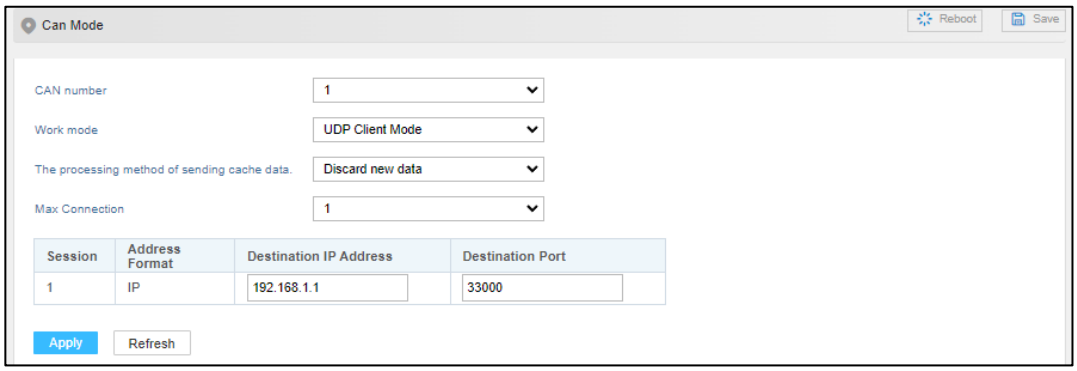


TCP client mode interface main element configuration instructions:

Interface Element	Description
CAN number	Display the CAN number of the device currently configured.
Work mode	The working mode of CAN port of the device, TCP Client Mode. Note: The configuration parameters displayed under different working modes are different.
TCP Keep-alive Time	If no TCP activity occurs within the allotted time, the system would send contact-probing message to check the validity of TCP connection. If the reply packet of opposite side hasn't been received after sending probe packet for 3 times, system will regard the opposite side as down and forwardly close the communication connection. If set TCP Alive Time to "0", the function will be disabled. Effective time range 0~65535s.
The processing method of sending cache data.	When sending cache data overflows, the data can be processed as follows: • Discard new data; • Discard old data.
Max Connection	The session number of the device's CAN port. Note: Session refers to the process the device transmits data received from CAN port to Ethernet via socket connection. More than one session number represents the device transmits the data received from CAN port to Ethernet via more than one socket.
Destination IP	The IP address of the server to which the device needs to connect.
Destination Port	Enter the TCP port number of the server to which the device needs to connect.
Local Port	A local port number assigned by the device for TCP

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	connection, which can provide service or connection to the outside world, is used to connect and communicate with the server.
Port fixed	Local port fixed, options are as follows: • Disable: the system automatically selects the idle local port to establish a connection with the server; • Enable: connect to the server using a manually configured local port.

7.2.3 UDP Server Mode

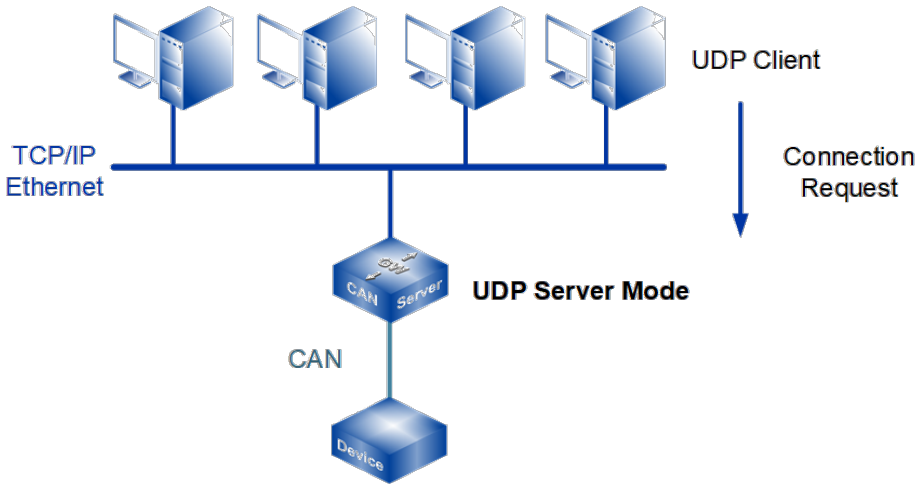


Under CAN UDP Server Mode, the device can be a server, and it can transmit data with the host user appointed under the UDP protocol. Under CAN UDP Server Mode, the device can transmit the data from CAN device to one or multiple hosts, and CAN device can also receive the data from one or multiple hosts.

Interface Description

TCP Server Mode interface is as follows:

Copyright © 3onedata Co., Ltd.

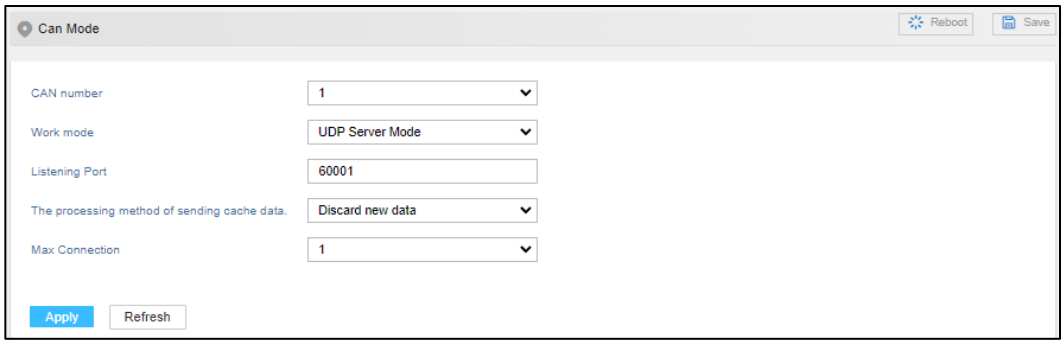


UDP Server Mode interface main element configuration instructions

Interface Element	Description
CAN number	Display the CAN number of the device currently configured.
Work mode	The working mode of CAN port of the device, UDP Server Mode. Note: The configuration parameters displayed under different working modes are different.
Listening Port	The device is used as the listening port of UDP server for receiving UDP data. Note: User must allot the only listening port to each CAN port, then the system can normally receive UDP data.
The processing method of sending cache data.	When sending cache data overflows, the data can be processed as follows: • Discard new data; • Discard old data.
Max Connection	The maximum session number supported by the device's CAN port.

Copyright © 3onedata Co., Ltd.


7.2.4 UDP Client Mode

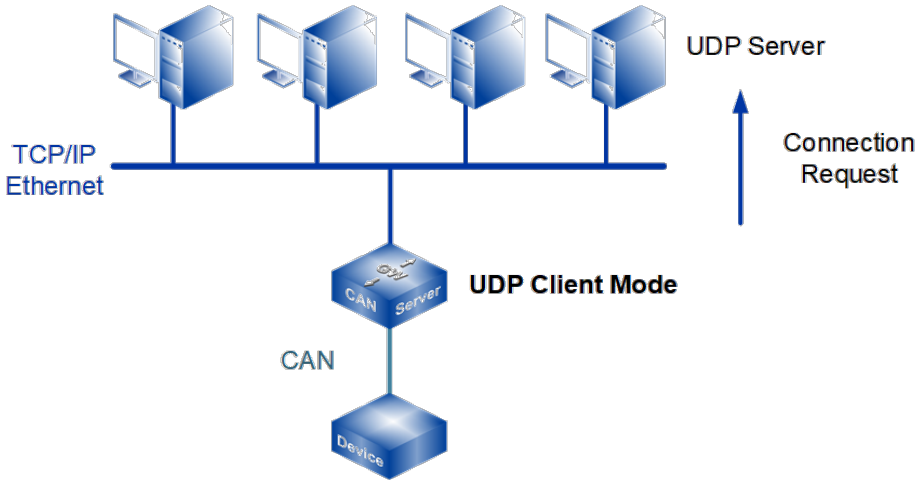

Under CAN UDP Client Mode, the device can be a client, and it can transmit data with the host user appointed under the UDP protocol. Under CAN UDP Client Mode, the device can transmit the data from CAN device to one or multiple hosts, and CAN device can also receive the data from one or multiple hosts.

Interface Description

UDP Client Mode interface is as follows:

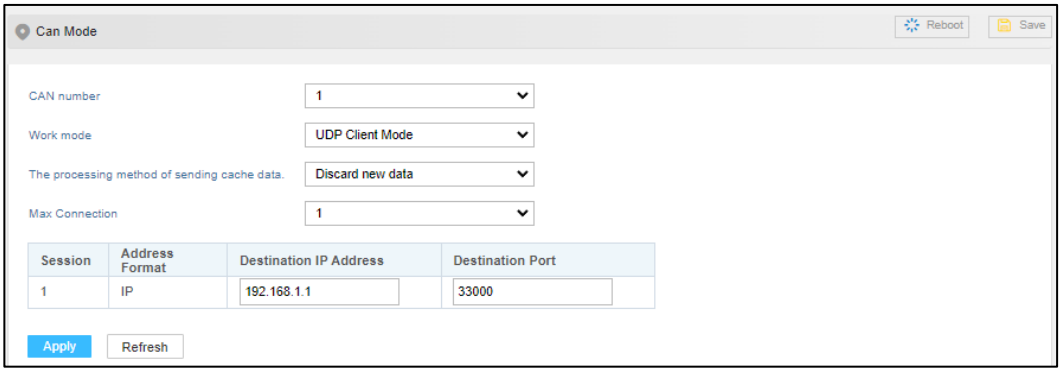


UDP Client Mode interface main element configuration instructions:

Interface Element	Description
CAN number	Display the CAN number of the device currently configured.
Work mode	The working mode of CAN port of the device, UDP Client Mode. Note: The configuration parameters displayed under different working modes are different.

Copyright © 3onedata Co., Ltd.

Interface Element	Description
The processing method of sending cache data.	When sending cache data overflows, the data can be processed as follows: • Discard new data; • Discard old data.
Max Connection	The maximum session number supported by the device's CAN port.
Address Format	The Server address format that CAN as the UDP client needs to connect: IP: IP address format, eg. 192.168.1.254;
Destination IP Address	Enter the IP address of the server to which the device needs to connect.
Destination Port	The listening port number of the server that the device need for session.

7.2.5 UDP Rang Mode

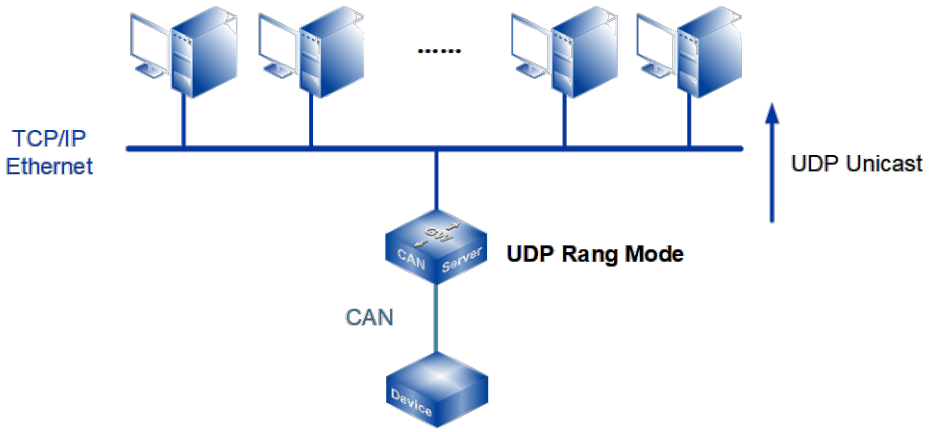


When the router, switch and other devices do not support multicast function, the device can realize the multicast function under the CAN UDP Rang Mode. In this mode, the device transmits data with multiple hosts in the same network segment designated by the user through UDP protocol, to achieve point to multipoint data communication. Under CAN UDP Rang Mode, CAN device can receive the data from one or multiple hosts.

Interface Description

UDP Rang Mode interface is as follows:

Copyright © 3onedata Co., Ltd.

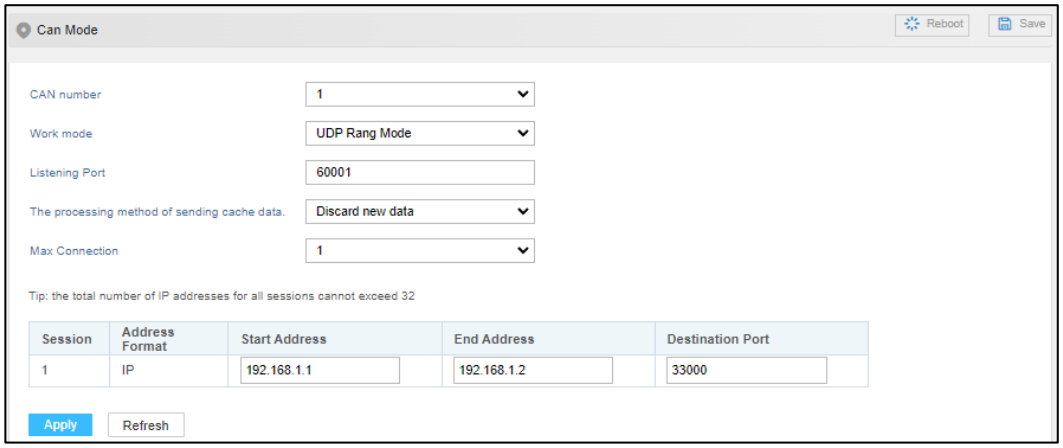

UDP Rang Mode interface main element configuration instructions:

Interface Element	Description
CAN number	Display the CAN number of the device currently configured.
Work mode	The working mode of CAN port of the device, UDP Rang Mode. Note: The configuration parameters displayed under different working modes are different.
Listening Port	The listening port of the device to receive UDP data Note: User must allot the only listening port to each CAN port, then the system can normally receive UDP data.
The processing method of sending cache data.	When sending cache data overflows, the data can be processed as follows: • Discard new data; • Discard old data.
Max Connection	The maximum session number supported by the device's CAN port.
Address Format	The format of UDP Rang address.
Start Address	Start IP address of UDP Rang destination address.
End Address	End IP address of UDP Rang destination address.
Destination Port	The listening port number of the server that the device need for session.

Notice

- Rang address only supports B class and C class IP address. The start address value and

Copyright © 3onedata Co., Ltd.

end address value of the Rang address need to be the same network segment.

- The start value of Rang address must be less than or equal to the end address value.
- In order to ensure the normal operation of communication, the rang address range needs to be as small as possible because each IP will cost 20ms.

7.3 CAN Statistics

Function Description


View the statistics of the number of bytes received and sent during the conversion between each CAN port and the network.

Operation Path

Open in order: "CAN Server > CAN Statistics".

Interface Description

The interface of CAN Statistics is as follows:

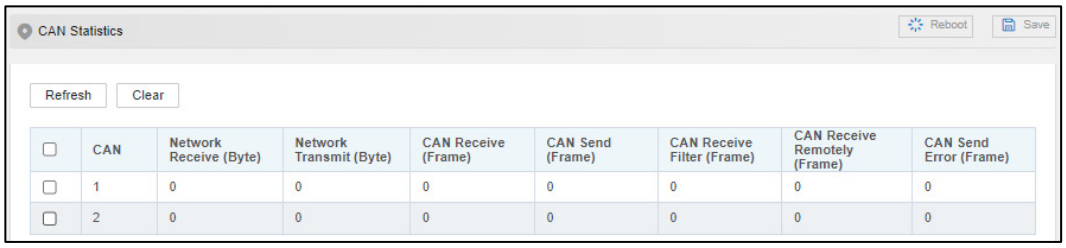

The main element configuration description of CAN Statistics interface:

Interface Element	Description
CAN	Display the corresponding CAN port number of the device.
Network Receive (Byte)	Number of bytes received by the device network interface.
Network Transmit (Byte)	Number of bytes sent by the device network interface.
CAN Receive (Frame)	The number of data frames received by the device CAN port.
CAN Send (Frame)	The number of data frames transmitted by the device CAN port.

Copyright © 3onedata Co., Ltd.

Interface Element	Description
CAN Receive Filter (Frame)	The number of data frames filtered by the device's CAN port.
CAN Receive Remotely (Frame)	The number of remotely frames transmitted by the device's CAN port.
CAN Send Error (Frame)	The number of error frames transmitted by the device's CAN port.

7.4 Network Connection State

Function Description


View the working mode and network session connection of each CAN port of the device.

Operation Path

Open in order: "CAN Server > Network Connection State".

Interface Description

The network connection state interface is as follows:

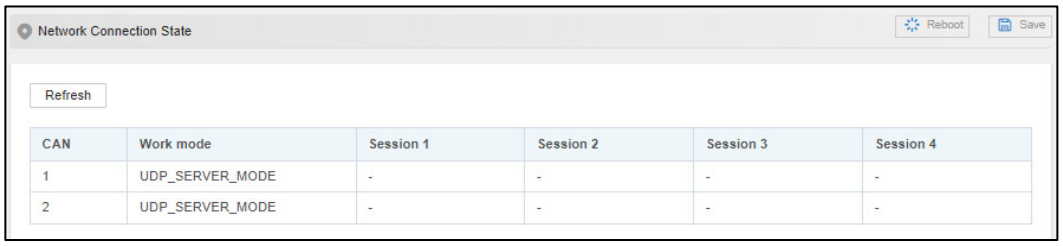

The main elements configuration descriptions of the network connection state interface:

Interface Element	Description
CAN	Display the corresponding CAN port number of the device.
Work mode	The operation mode of current serial port are as follows: • TCP Server Mode • TCP Client Mode • UDP Server Mode • UDP Client Mode • UDP Rang Mode
Session	IP address and port of the current CAN port network session

3onedata proprietary and confidential
Copyright © 3onedata Co., Ltd.

Interface Element	Description
	connection.

Copyright © 3onedata Co., Ltd.

8 Serial Server

8.1 Serial Settings

Function Description


On the "Serial Settings" page, you can view and configure the serial number, baud rate, parity bit, data bit, stop bit, flow control, interface mode and other parameters of each serial port of the device.

Operation Path

Open “Serial Server > Serial Settings”.

Interface Description

Serial Settings interface is as follows:

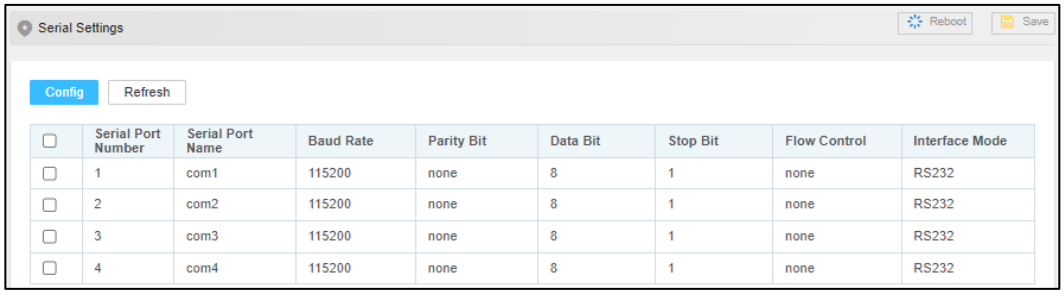

The main element configuration description of serial port setup interface:

Interface Element	Description
Config	Check in the serial port entry to modify the the selected serial port parameters.
Serial Port Number	Display the serial port number of the device.
Serial Port Name	Display the name of the device.

Copyright © 3onedata Co., Ltd.

Interface Element	Description
Baud Rate	Display the baud rate of the device's serial port.
Parity Bit	Display the parity bits of the device's serial Port.
Data Bit	Display the data bits of the device's serial port.
Stop Bit	Display the stop bits of the device's serial port.
Flow Control	Display whether the flow control function of the device's serial port is enabled.
Interface Mode	Display the interface mode of the device's serial port. • 232 • 485 • 422

8.2 Serial Port Mode

Function Description

On the "Serial Port Mode" page, you can configure the working mode of the corresponding serial port number of the device.

The working modes supported by the device are:


- RealCom Mode
- Reverse RealCom Mode
- TCP Server Mode
- TCP Client Mode
- UDP Server Mode
- UDP Client Mode
- UDP Rang Mode
- Pair Slave Mode
- Pair Master Mode
- Telnet Mode
- Reverse Telnet Mode
- Disable Mode

3onedata proprietary and confidential
Copyright © 3onedata Co., Ltd.

Operation Path

Open in order “Serial Server > Serial Port Mode”. Under the menu of " Serial Port Mode", the corresponding serial port information can be configured by entering different serial ports. The configuration operation mode of all serial ports' WEB interfaces is the same.

8.2.1 RealCom Mode

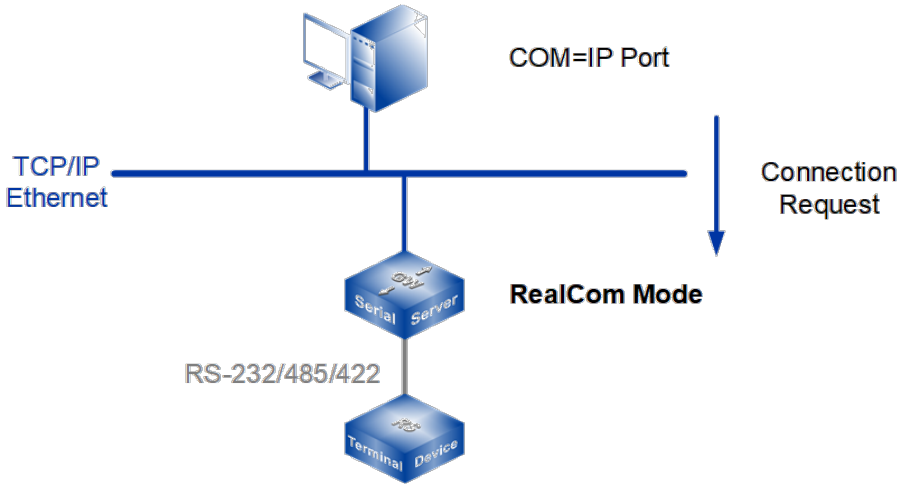

Note:

The device picture mentioned in above figure is only an example, and the actual appearance of the device or serial port type is subject to the device obtained.


In RealCom mode, the serial port server and Windows / Linux operating system with the RealCOM drive work cooperatively. RealCom COM/TTY driver establishes a transparent or secure network transmission connection between the host and the serial device in the operating system. Map the serial port of the serial port server to the local COM/TTY device of the host according to the user configured serial server IP address and serial port number and other parameters. The original serial device software or communication module without modification can be used directly without modification.

The RealCom driver gets the data be sent to the local COM / TTY device of the host, then sends it over Ethernet in the form of TCP / IP packet. At the other end of the transmission, the serial server will receive the TCP / IP packet and analyse the packet, and after unpacking send the original data to the serial device through the corresponding serial port, and vice versa.

Copyright © 3onedata Co., Ltd.

Interface Description

The interface of RealCom Mode is as follows:

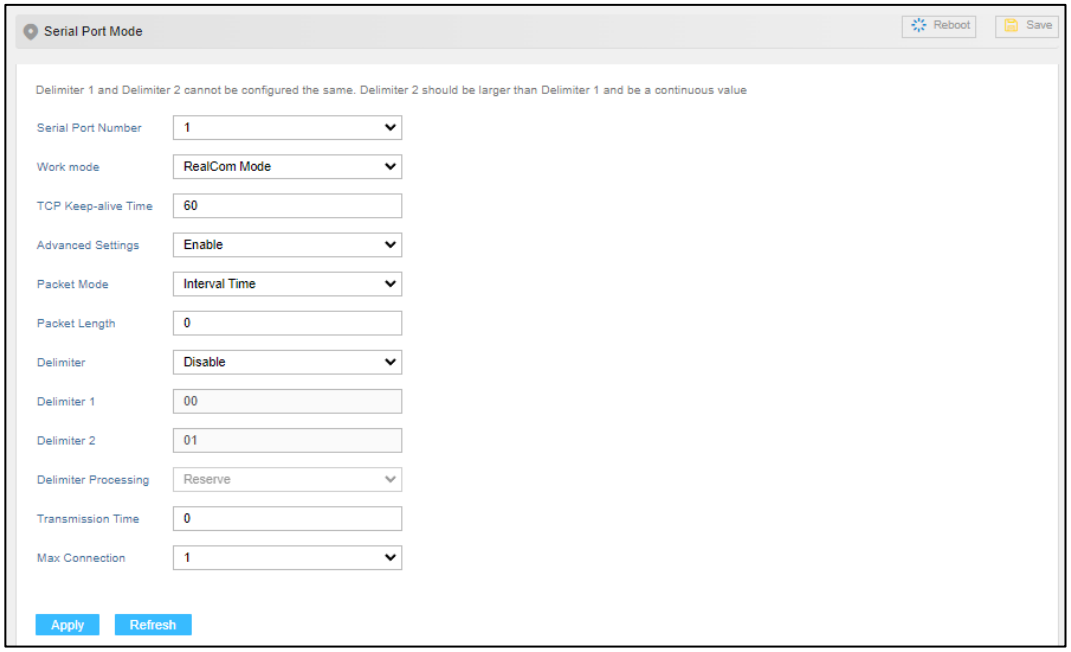

Main element configuration instructions in RealCom Mode interface

Interface Element	Description
Serial Port Number	Display the serial number of the device currently configured.
Work mode	The working modes of serial port of the device, RealCom Mode. Note: The configuration parameters displayed under different working modes are different.
TCP Keep-alive Time	If there isn't any TCP activity within schedule time, the system will automatically send connection detection message and check whether the TCP connection is valid. If the reply packet of opposite side hasn't been received after sending probe packet for 3 times, system will regard the opposite side as down and forwardly close the communication connection.
Advanced Settings	Enable advanced settings to configure packaging mode, packaging length, and delimiters.
Packet Mode	Serial port data packaging Ethernet data time, the options are as follows: • Interval: after sending the last Ethernet packet for

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	some time, the system packages the received serial port data into Ethernet packets and sends them out; • Forced time: the system packages serial port data received within a specified time into Ethernet packets and transmit them.
Packet Length	For the frame length of the serial data to Ethernet data, the data frame is forwarded within the set time range when it is greater than or equal to the set frame length, and the value ranges from 0 to 1024. It means no limit on data transmission length when it' set to 0. Note: There are some slight deviations between the actual package length value and the set value.
Delimiter	Select the number of delimited characters, the options are as follows: • Disable: disable delimiter function; • 1: enable delimiter 1; • 2: enable Delimiter 2. Note: If the packaging length or the forced transfer time is 0 and the number of delimited character is greater than 0, the system would detect and process the delimiter after receiving serial data. Every time it receives matched delimiter (or combination of characters), the system would send out all cached serial data via network.
Delimiter 1	The Delimiter 1 is expressed in hexadecimal, value range is 00-FF.
Delimiter 2	The Delimiter 2 is expressed in hexadecimal, value range is 00-FF.
Delimiter Processing	Select the delimiter processing method. Options: • Retain: the system would send out the received delimiter and other data via network. • Delimiter+1: the system transfers data after receiving a delimiter and an extra byte. • Delimiter+2: the system transfers data after receiving a delimiter and 2 extra byte. • Delete: the matched delimiter (or combination of delimiter) would be deleted. The system only transmits data except delimiter.
Transmission Time	If the transmission time is greater than 0, the system


Copyright © 3onedata Co., Ltd.

Interface Element	Description
	sends the serial data received within the specified time through a packet, in the range of 0 to 65535 ms. When the transfer time is 0, it means that the data transmission interval is not restricted.
Max Connection	The number of hosts connected to a serial port at the same time. • Each host communicates with serial port in the order of first-in first-out; • The system supports up to 4 connections.

Notice

When the maximum number of connections is greater than 1, set the parameters to be consistent when multiple hosts are connected to the same serial port, otherwise it will cause communication error.

8.2.2 Reverse RealCom Mode

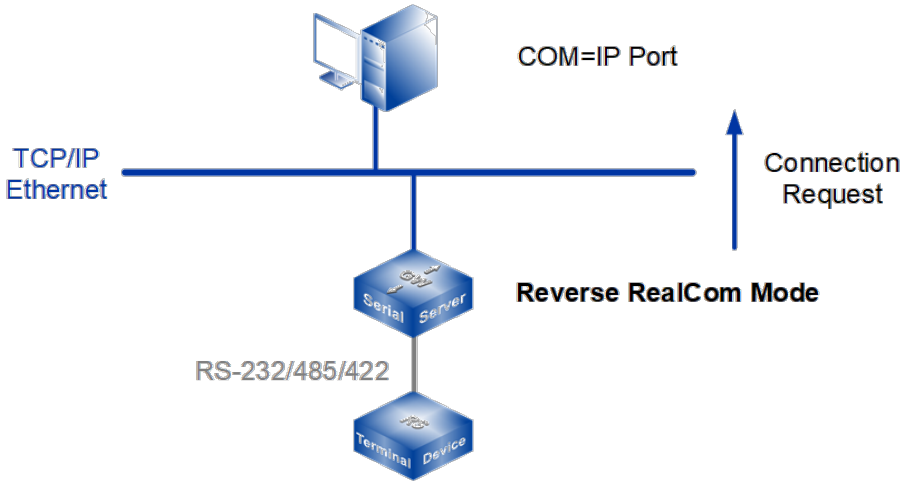

Note:

The device picture mentioned in above figure is only an example, and the actual appearance of the device or serial port type is subject to the device obtained.

The RealCOM mode will not work when the device uses a private IP address or is in a dynamic IP address environment. In this case, the remote host/server cannot connect


Copyright © 3onedata Co., Ltd.

to the device. At this time, the connection can be established through the reverse RealCOM mode, and the device initiates a request to the remote host/server installed with the COM/TTY driver and establishes a connection, mapping the serial port of the device to the local COM/TTY device of the host, and the software or communication module of the original serial device can be directly used without modification.

The RealCom driver gets the data be sent to the local COM / TTY device of the host, then sends it over Ethernet in the form of TCP / IP packet. At the other end of transmission, the device receives the TCP/IP data packet, and after unpacking, sends the original data to the serial port device through the corresponding serial port, and vice versa.

Interface Description

Reverse RealCom Mode interface is as follows:

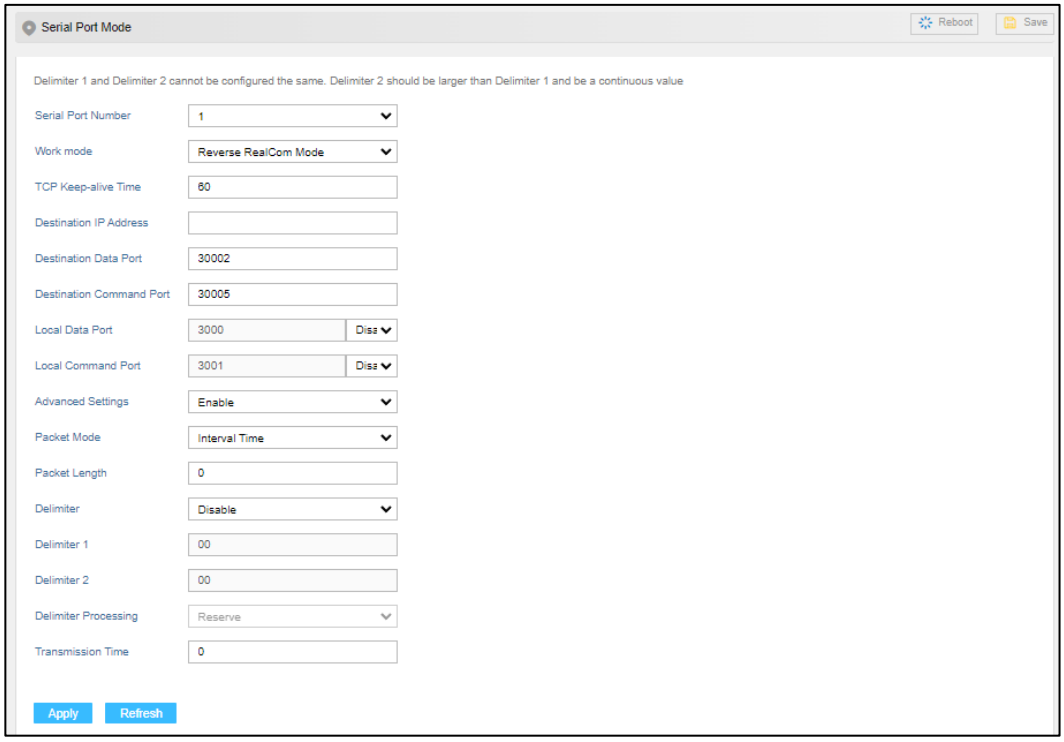

Reverse RealCom Mode interface main element configuration instructions:

Interface Element	Description
Serial Port Number	Displays the serial number of the device currently configured.
Work mode	The working mode of serial port of the device, Reverse RealCom Mode Note:

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	The configuration parameters displayed under different working modes are different.
TCP Keep-alive Time	If there isn't any TCP activity within schedule time, the system will automatically send connection detection message and check whether the TCP connection is valid. If the reply packet of opposite side hasn't been received after sending probe packet for 3 times, system will regard the opposite side as down and forwardly close the communication connection.
Destination IP Address	Specify device to connect to the IP address of remote host/server, such as 10.0.0.2.
Destination Data Port	The data port number of destination IP address 1, ranging from 1-65535. Note: Make sure the port is not blocked by the firewall or occupied by other programs when using port numbers.
Destination Command Port	The command port number of destination IP address 1, ranging from 1-65535.
Local Data Port	Local data port that device and destination IP address 1 connect, options are as follows: • Enable: configure a specific local data port manually when enabled. • Disable: system distributes local data port automatically when disable.
Local Command Port	Local command port that device and destination IP address 1 connect, options are as follows: • Enable: configure a specific local command port manually when enabled. • Disable: system distributes local command port automatically when disabled.
Advanced Settings	Enable advanced settings to configure packaging mode, packaging length, and delimiters.
Packet Mode	Serial port data packaging Ethernet data time, the options are as follows: • Interval: after sending the last Ethernet packet for some time, the system packages the received serial port data into Ethernet packets and sends them out;


Copyright © 3onedata Co., Ltd.

Interface Element	Description
	• Forced time: the system packages serial port data received within a specified time into Ethernet packets and transmit them.
Packet Length	For the frame length of the serial data to Ethernet data, the data frame is forwarded within the set time range when it is greater than or equal to the set frame length, and the value ranges from 0 to 1024. It means no limit on data transmission length when it' set to 0. Note: There are some slight deviations between the actual package length value and the set value.
Delimiter	Select the number of delimited characters, the options are as follows: • Disable: disable delimiter function; • 1: enable delimiter 1; • 2: enable Delimiter 2. Note: If the packaging length or the forced transfer time is 0 and the number of delimited character is greater than 0, the system would detect and process the delimiter after receiving serial data. Every time it receives matched delimiter (or combination of characters), the system would send out all cached serial data via network.
Delimiter 1	The Delimiter 1 is expressed in hexadecimal, value range is 00-FF.
Delimiter 2	The Delimiter 2 is expressed in hexadecimal, value range is 00-FF.
Delimiter Processing	Select the delimiter processing method. Options: • Retain: the system would send out the received delimiter and other data via network. • Delimiter+1: the system transfers data after receiving a delimiter and an extra byte. • Delimiter+2: the system transfers data after receiving a delimiter and 2 extra byte. • Delete: the matched delimiter (or combination of delimiter) would be deleted. The system only transmits data except delimiter.
Transmission Time	If the transmission time is greater than 0, the system sends the serial data received within the specified

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	time through a packet, in the range of 0 to 65535 ms. When the transfer time is 0, it means that the data transmission interval is not restricted.

8.2.3 TCP Server Mode

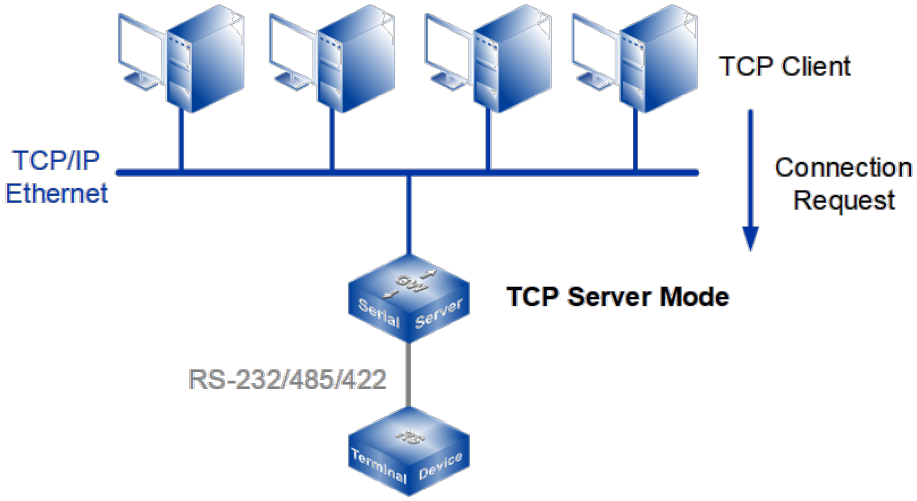

Note:


The device picture mentioned in above figure is only an example, and the actual appearance of the device or serial port type is subject to the device obtained.

In TCP server mode, the device is assigned an IP port number and passively waits for the host to connect. When the host initiates a connection request and establishes a connection with the device, the host can realize bidirectional transparent or encrypted data transmission through network connection and serial port. The TCP server mode supports up to four session connections simultaneously, allowing multiple hosts to simultaneously read or send Ethernet data to a serial device.

Interface Description

TCP server mode interface is as follows:

Copyright © 3onedata Co., Ltd.

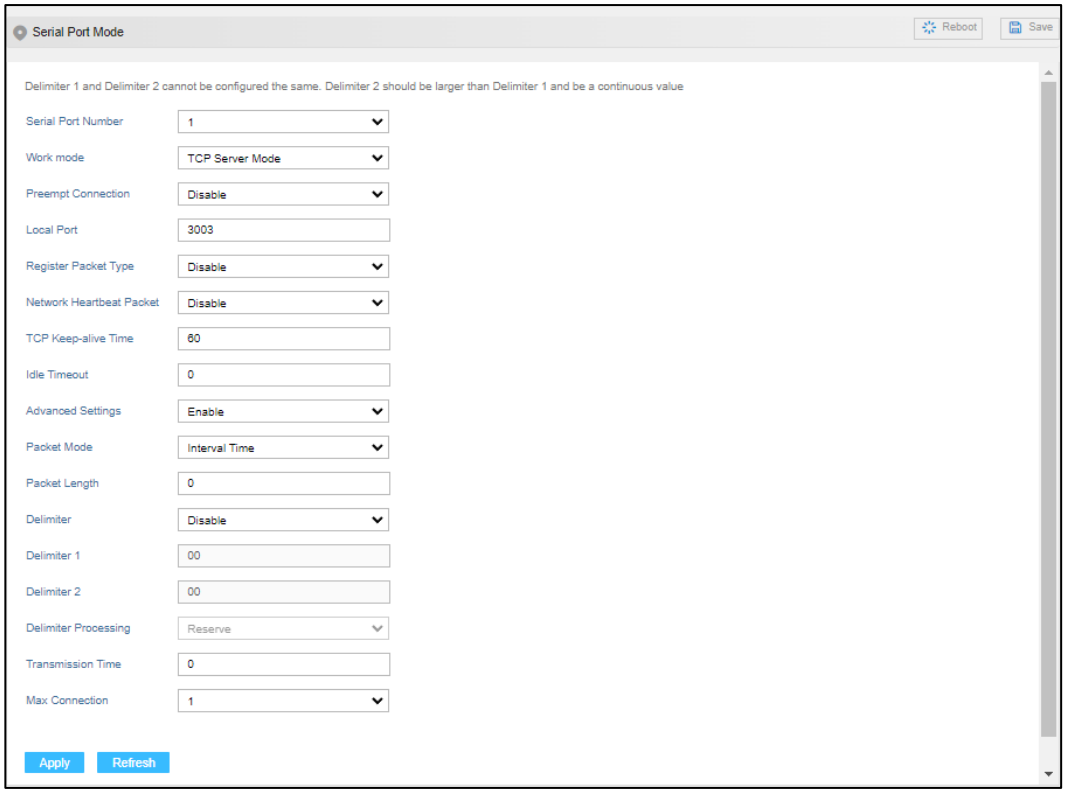

TCP server mode interface main element configuration instructions:

Interface Element	Description
Serial Port Number	Display the serial number of the device currently configured.
Work mode	The working mode of Serial port of the device, TCP Server Mode. Note: The configuration parameters displayed under different working modes are different.
Preempt Connection	When exceed the maximum number of connection request, the number of sessions that have established TCP connections can be preempted, options are as follows: • Disable: established TCP link are not allowed to be preempted; • First connection: the TCP link that first establishes will be preempted; • Longest uncommunicated: the longest uncommunicated TCP link will be preempted.
Local Port	The destination connection port of TCP client.
Register Package Type	The information sent after the device is connected to

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	the peer client. Options: • Disable: After the connection is successful, no information is sent to the peer client. • Ipaddr: After the connection is successful, send the IP address of the device to the remote client. • Devicename: After the connection is successful, send the devicename of the device to the remote client. • Custom: Send custom content to the opposite client after successful connection.
Network Heartbeat Packet	Heartbeat packet enable drop-down list, the options are as follows: • Enable: after the network heartbeat packet is enabled, the device periodically sends the specified content to the device at the opposite end. • Disable: heartbeat packet is disabled by default.
TCP Keep-alive Time	If there isn't any TCP activity within schedule time, the system will automatically send connection detection message and check whether the TCP connection is valid. If the reply packet of opposite side hasn't been received after sending probe packet for 3 times, system will regard the opposite side as down and forwardly close the communication connection.
Idle Timeout	Set the idle time of current data communication link of the device. If the idle time-out during communication is larger than 0, the system would close the TCP connection without any data transmission activity occurring in the specified time automatically. 0 means the free TCP connection would not be closed automatically.
Advanced Settings	Enable advanced settings to configure packaging mode, packaging length, and delimiters.
Packet Mode	Serial port data packaging Ethernet data time, the options are as follows: • Interval: after sending the last Ethernet packet


Copyright © 3onedata Co., Ltd.

Interface Element	Description
	for some time, the system packages the received serial port data into Ethernet packets and sends them out; • Forced time: the system packages serial port data received within a specified time into Ethernet packets and transmit them.
Packet Length	For the frame length of the serial data to Ethernet data, the data frame is forwarded within the set time range when it is greater than or equal to the set frame length, and the value ranges from 0 to 1024. It means no limit on data transmission length when it' set to 0. Note: There are some slight deviations between the actual package length value and the set value.
Delimiter	Select the number of delimited characters, the options are as follows: • Disable: disable delimiter function; • 1: enable delimiter 1; • 2: enable Delimiter 2. Note: If the packaging length or the forced transfer time is 0 and the number of delimited character is greater than 0, the system would detect and process the delimiter after receiving serial data. Every time it receives matched delimiter (or combination of characters), the system would send out all cached serial data via network.
Delimiter 1	The Delimiter 1 is expressed in hexadecimal, value range is 00-FF.
Delimiter 2	The Delimiter 2 is expressed in hexadecimal, value range is 00-FF.
Delimiter Processing	Select the delimiter processing method. Options: • Retain: the system would send out the received delimiter and other data via network. • Delimiter+1: the system transfers data after receiving a delimiter and an extra byte. • Delimiter+2: the system transfers data after receiving a delimiter and 2 extra byte. • Delete: the matched delimiter (or combination of delimiter) would be deleted. The system only transmits data except delimiter.

Copyright © 3onedata Co., Ltd.

Interface Element	Description
Transmission Time	If the transmission time is greater than 0, the system sends the serial data received within the specified time through a packet, in the range of 0 to 65535 ms. When the transfer time is 0, it means that the data transmission interval is not restricted.

8.2.4 TCP Client Mode

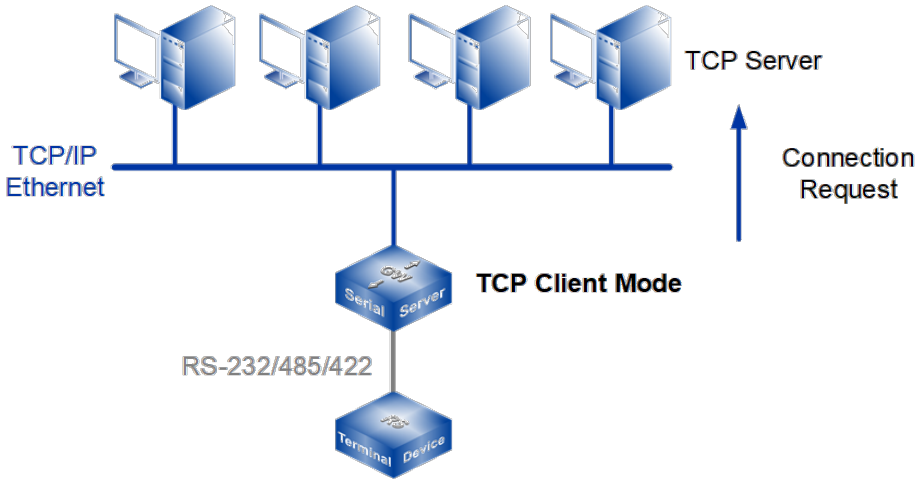

Note:


The device picture mentioned in above figure is only an example, and the actual appearance of the device or serial port type is subject to the device obtained.

In TCP client mode, the device can actively establish a network connection with the host specified by the user when the serial port data arrives. After the data transmission is completed, the device will automatically close the network connection according to TCP keep-alive time/idle timeout and other parameters. Similarly, TCP client mode can support up to four session connections at the same time, so that multiple hosts can simultaneously read or send Ethernet data to a serial device.

Interface Description

TCP Client Mode interface is as follows:

Copyright © 3onedata Co., Ltd.

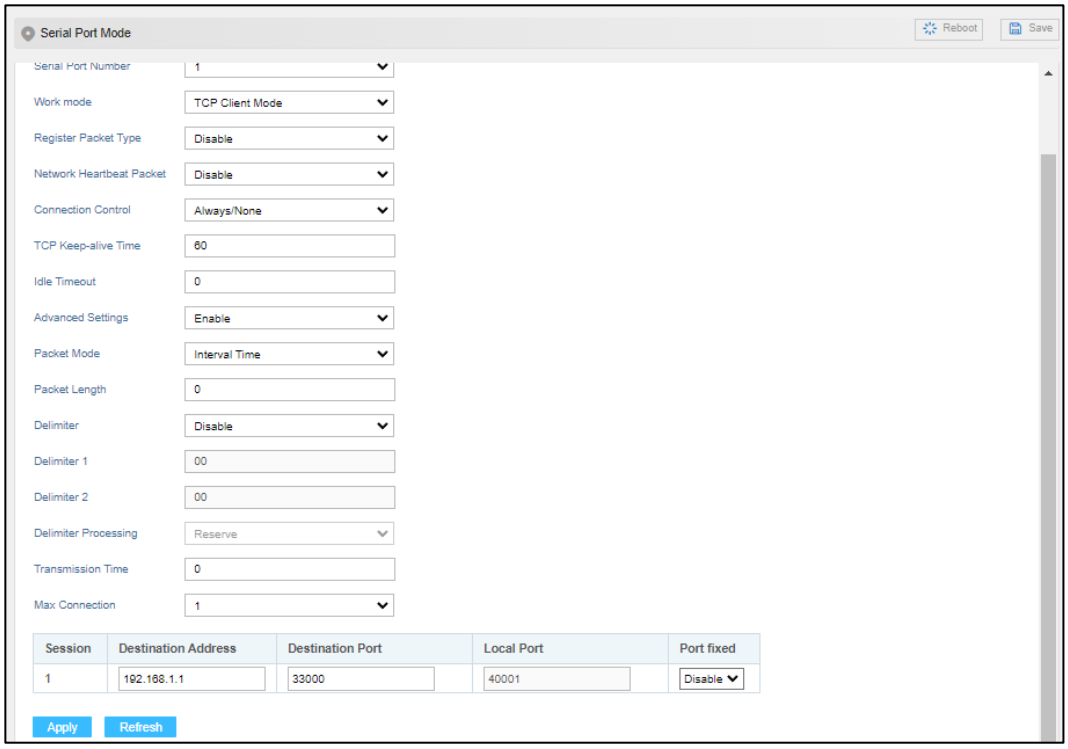

TCP Client Mode interface main element configuration instructions:

Interface Element	Description
Serial Port Number	Displays the serial number of the device currently configured.
Work mode	The working mode of Serial port of the device, TCP Client Mode. Note: The configuration parameters displayed under different working modes are different.
Register Package Type	The information sent after the device is connected to the peer client. Options: • Disable: After the connection is successful, no information is sent to the peer client. • Ipaddr: After the connection is successful, send the IP address of the device to the remote client. • Devicename: After the connection is successful, send the devicename of the device to the remote client. • Custom: Send custom content to the opposite client after successful connection.
Network Heartbeat Packet	Heartbeat packet enable drop-down list, the options are as follows:

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	• Enable: after the network heartbeat packet is enabled, the device periodically sends the specified content to the device at the opposite end. • Disable: heartbeat packet is disabled by default.
Connection Control	Select how the device initiates a connection request and disconnectsit. Options: • Always/None – Always: Immediately tries to establish a connection with the target host after the system is started and automatically reconnects the target host after the connection is disconnected. – None: Never shut down the network connection automatically. • Char/None – Char: Automatically connects to the target host when receiving data from the serial port. – None: Never shut down the network connection automatically. • Char/Idel – Char: Automatically connects to the target host when receiving data from the serial port. – Idle: If the idle timeout time is greater than 0, the system will automatically shut down TCP connections that do not have any data send and receive activity for a specified period of time. • DSR On/ DSR Off – DSR On: Automatically connects to the target host when the DSR signal is detected. – DCD Off: Automatically shuts down the network connection when the DCD signal is detected invalid. • DSR On/ None – DSR On: Automatically connects to the target host when the DSR signal is

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	detected. – None: Never shut down the network connection automatically. • DCD On / DCD Off – DCD On: Automatically connects to the target host when the DCD signal is detected. – DCD Off: Automatically shuts down the network connection when the DCD signal is detected invalid. • DCD On / None – DCD On: Automatically connects to the target host when the DCD signal is detected. – None: Never shut down the network connection automatically.
TCP Kepp-alive Time	If there isn't any TCP activity within schedule time, the system will automatically send connection detection message and check whether the TCP connection is valid. If the reply packet of opposite side hasn't been received after sending probe packet for 3 times, system will regard the opposite side as down and forwardly close the communication connection.
Idle Timeout	Set the idle time of current data communication link of the device. If the idle time-out during communication is larger than 0, the system would close the TCP connection without any data transmission activity occurring in the specified time automatically. 0 means the free TCP connection would not be closed automatically.
Advanced Settings	Enable advanced settings to configure packaging mode, packaging length, and delimiters.
Packet Mode	Serial port data packaging Ethernet data time, the options are as follows: • Interval: after sending the last Ethernet packet for some time, the system packages the received serial port data into Ethernet packets and sends them out;

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	• Forced time: the system packages serial port data received within a specified time into Ethernet packets and transmit them.
Packet Length	For the frame length of the serial data to Ethernet data, the data frame is forwarded within the set time range when it is greater than or equal to the set frame length, and the value ranges from 0 to 1024. It means no limit on data transmission length when it' set to 0. Note: There are some slight deviations between the actual package length value and the set value.
Delimiter	Select the number of delimited characters, the options are as follows: • Disable: disable delimiter function; • 1: enable delimiter 1; • 2: enable Delimiter 2. Note: If the packaging length or the forced transfer time is 0 and the number of delimited character is greater than 0, the system would detect and process the delimiter after receiving serial data. Every time it receives matched delimiter (or combination of characters), the system would send out all cached serial data via network.
Delimiter 1	The Delimiter 1 is expressed in hexadecimal, value range is 00-FF.
Delimiter 2	The Delimiter 2 is expressed in hexadecimal, value range is 00-FF.
Delimiter Processing	Select the delimiter processing method. Options: • Retain: the system would send out the received delimiter and other data via network. • Delimiter+1: the system transfers data after receiving a delimiter and an extra byte. • Delimiter+2: the system transfers data after receiving a delimiter and 2 extra byte. • Delete: the matched delimiter (or combination of delimiter) would be deleted. The system only transmits data except delimiter.
Transmission Time	If the transmission time is greater than 0, the system sends the serial data received within the specified time through a packet, in the range of 0 to 65535 ms.

Copyright © 3onedata Co., Ltd.


Interface Element	Description
	When the transfer time is 0, it means that the data transmission interval is not restricted.
Max Connection	The number of hosts connected to a serial port at the same time. • Each host communicates with serial port in the order of first-in first-out; • The system supports up to 4 connections.
Session	The number of TCP connection sessions corresponds to the maximum number of connections.
Destination Address	Enter the IPv4 or IPv6 address of the server to which the device is connected.
Destination Port	Enter the TCP port number of the server to which the device is connected.
Local Port	A local port number assigned by the device for TCP connection, which can provide service or connection to the outside world, is used to connect and communicate with the server.
Port fixed	Local port fixed, options are as follows: • Disable: the system automatically selects the idle local port to establish a connection with the server; • Enable: connect to the server using a manually configured local port.

Notice

The inactivity time takes effect only when "Control Connection" is set to "Char/Idle".

Copyright © 3onedata Co., Ltd.

8.2.5 UDP Server Mode

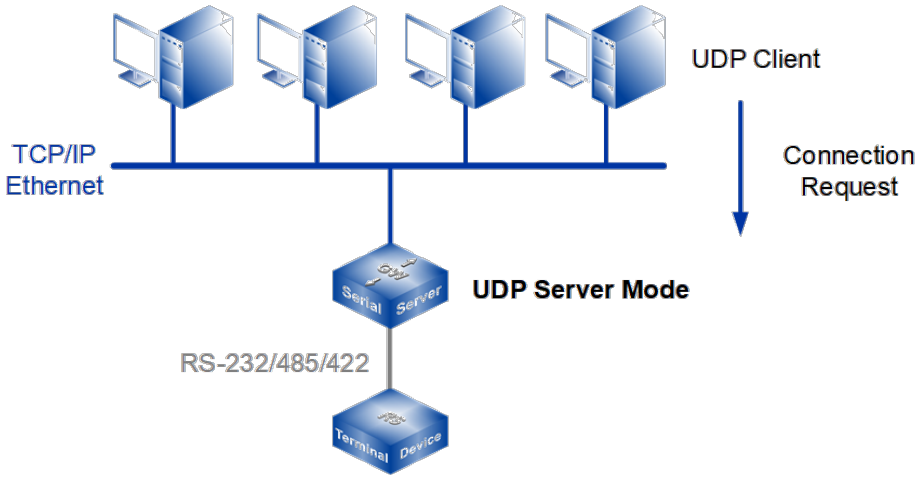

Note:


The device picture mentioned in above figure is only an example, and the actual appearance of the device or serial port type is subject to the device obtained.

In UDP mode, the device can be either a server or a client, and transmit serial data with the host designated by the user through UDP protocol. Devices in UDP mode can transmit data from serial devices to one or more hosts, and serial devices can also receive data from one or more hosts. Compared with TCP mode, UDP protocol is faster and more efficient.

Interface Description

UDP Server Mode interface is as follows:

Copyright © 3onedata Co., Ltd.

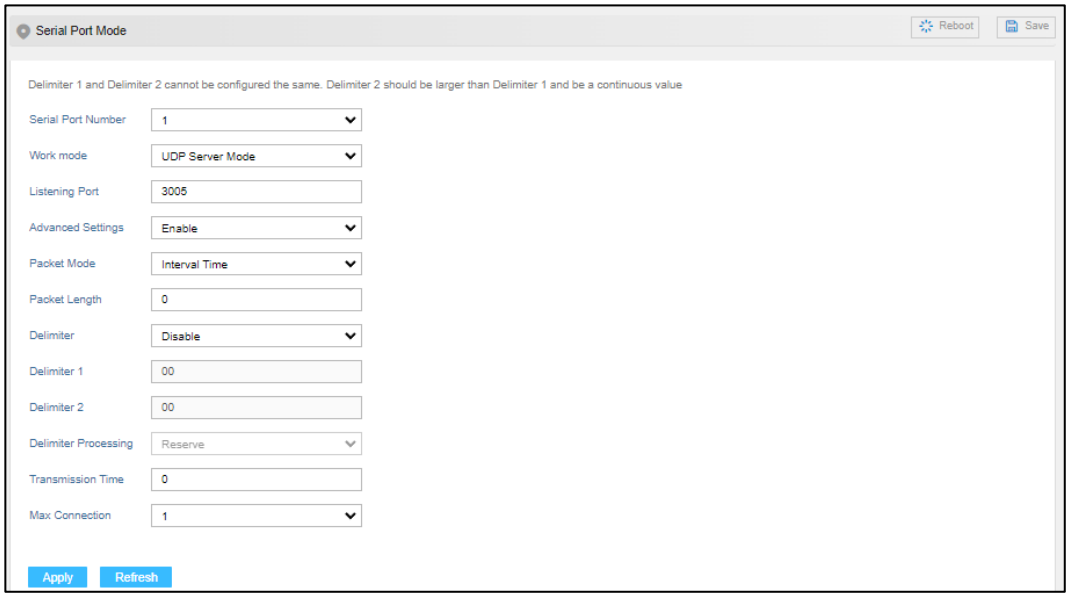

UDP Server Mode interface main element configuration instructions:

Interface Element	Description
Serial Port Number	Display the serial number of the device currently configured.
Work mode	The working mode of Serial port of the device, UDP Server Mode. Note: The configuration parameters displayed under different working modes are different.
Listening Port	The network receives the listening port of UDP data. The user must assign a unique listening port to each serial port so that the system can normally receive UDP data.
Advanced Settings	Enable advanced settings to configure packaging mode, packaging length, and delimiters.
Packet Mode	Serial port data packaging Ethernet data time, the options are as follows: • Interval: after sending the last Ethernet packet for some time, the system packages the received serial port data into Ethernet packets and sends them out; • Forced time: the system packages serial port data received within a specified time into Ethernet packets and transmit them.
Packet Length	For the frame length of the serial data to Ethernet data, the data frame is forwarded within the set time range when it is greater than or equal to the set frame length, and the


Copyright © 3onedata Co., Ltd.

Interface Element	Description
	value ranges from 0 to 1024. It means no limit on data transmission length when it' set to 0. Note: There are some slight deviations between the actual package length value and the set value.
Delimiter	Select the number of delimited characters, the options are as follows: • Disable: disable delimiter function; • 1: enable delimiter 1; • 2: enable Delimiter 2. Note: If the packaging length or the forced transfer time is 0 and the number of delimited character is greater than 0, the system would detect and process the delimiter after receiving serial data. Every time it receives matched delimiter (or combination of characters), the system would send out all cached serial data via network.
Delimiter 1	The Delimiter 1 is expressed in hexadecimal, value range is 00-FF.
Delimiter 2	The Delimiter 2 is expressed in hexadecimal, value range is 00-FF.
Delimiter Processing	Select the delimiter processing method. Options: • Retain: the system would send out the received delimiter and other data via network. • Delimiter+1: the system transfers data after receiving a delimiter and an extra byte. • Delimiter+2: the system transfers data after receiving a delimiter and 2 extra byte. • Delete: the matched delimiter (or combination of delimiter) would be deleted. The system only transmits data except delimiter.
Transmission Time	If the transmission time is greater than 0, the system sends the serial data received within the specified time through a packet, in the range of 0 to 65535 ms. When the transfer time is 0, it means that the data transmission interval is not restricted.
Max Connection	The number of hosts connected to a serial port at the same time. • Each host communicates with serial port in the order of first-in first-out;

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	• The system supports up to 4 connections.

8.2.6 UDP Client Mode

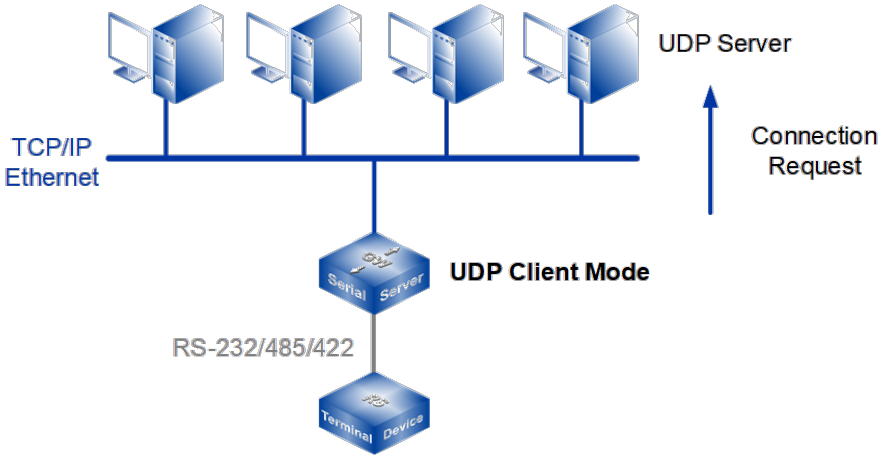

Note:


The device picture mentioned in above figure is only an example, and the actual appearance of the device or serial port type is subject to the device obtained.

In UDP mode, the device can be either a server or a client, and transmit serial data with the host designated by the user through UDP protocol. Devices in UDP mode can transmit data from serial devices to one or more hosts, and serial devices can also receive data from one or more hosts. Compared with TCP mode, UDP protocol is faster and more efficient.

Interface Description

UDP Client Mode interface is as follows:

Copyright © 3onedata Co., Ltd.

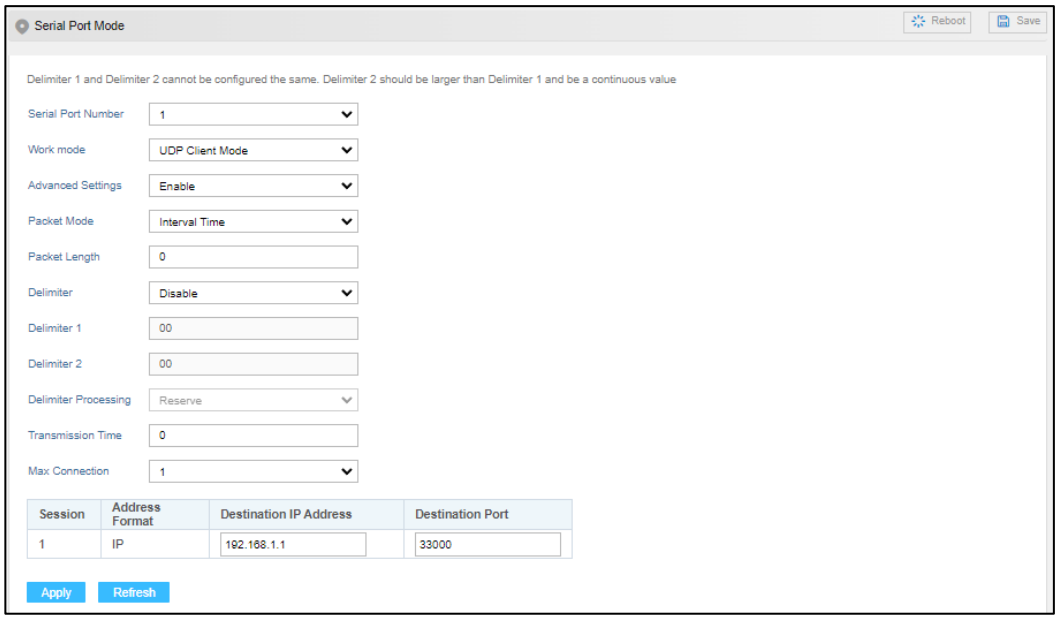

UDP Client Mode interface main element configuration instructions:

Interface Element	Description
Serial Port Number	Displays the serial number of the device currently configured.
Work mode	The working mode of Serial port of the device, UDP Client Mode. Note: The configuration parameters displayed under different working modes are different.
Advanced Settings	Enable advanced settings to configure packaging mode, packaging length, and delimiters.
Packet Mode	Serial port data packaging Ethernet data time, the options are as follows: • Interval: after sending the last Ethernet packet for some time, the system packages the received serial port data into Ethernet packets and sends them out; • Forced time: the system packages serial port data received within a specified time into Ethernet packets and transmit them.
Packet Length	For the frame length of the serial data to Ethernet data, the data frame is forwarded within the set time range when it is greater than or equal to the set frame length, and the value ranges from 0 to 1024. It means no limit


Copyright © 3onedata Co., Ltd.

Interface Element	Description
	on data transmission length when it' set to 0. Note: There are some slight deviations between the actual package length value and the set value.
Delimiter	Select the number of delimited characters, the options are as follows: • Disable: disable delimiter function; • 1: enable delimiter 1; • 2: enable Delimiter 2. Note: If the packaging length or the forced transfer time is 0 and the number of delimited character is greater than 0, the system would detect and process the delimiter after receiving serial data. Every time it receives matched delimiter (or combination of characters), the system would send out all cached serial data via network.
Delimiter 1	The Delimiter 1 is expressed in hexadecimal, value range is 00-FF.
Delimiter 2	The Delimiter 2 is expressed in hexadecimal, value range is 00-FF.
Delimiter Processing	Select the delimiter processing method. Options: • Retain: the system would send out the received delimiter and other data via network. • Delimiter+1: the system transfers data after receiving a delimiter and an extra byte. • Delimiter+2: the system transfers data after receiving a delimiter and 2 extra byte. • Delete: the matched delimiter (or combination of delimiter) would be deleted. The system only transmits data except delimiter.
Transmission Time	If the transmission time is greater than 0, the system sends the serial data received within the specified time through a packet, in the range of 0 to 65535 ms. When the transfer time is 0, it means that the data transmission interval is not restricted.
Max Connection	The number of host that one serial port has session with. • Each host communicates with serial port in the order of first-in first-out; • The system supports up to 4 sessions.
Session	The number of UDP sessions corresponds to the

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	maximum number of connections.
Address Format	Destination address format.
Destination IP Address	Enter the IP address of the server that the device needs to have session with.
Destination Port	Enter the UDP port number of the server that the device needs to have session with.

8.2.7 UDP Rang Mode

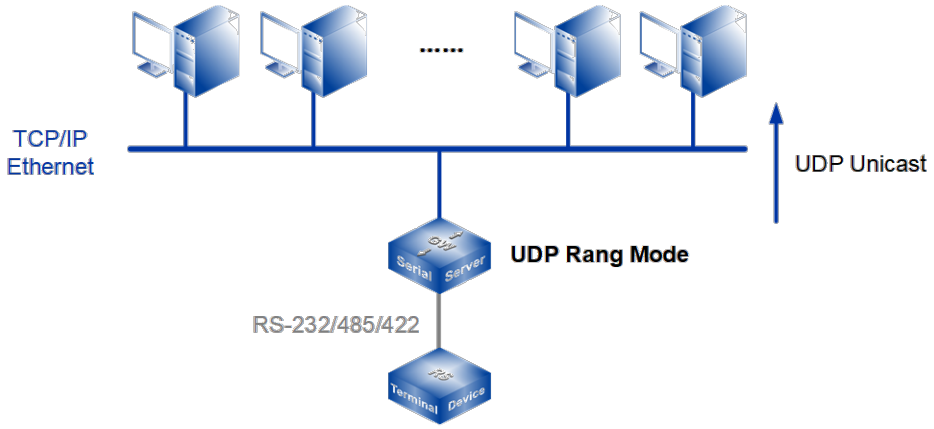

Note:


The device picture mentioned in above figure is only an example, and the actual appearance of the device or serial port type is subject to the device obtained.

When routers, switches and other devices do not support multicast, they can work in UDP segment mode to realize multicast function. In this mode, the device transmits serial data with multiple hosts in the same network segment designated by the user through UDP protocol, which can realize point-to-many data communication. UDP port mode serial device can also receive data from one or more hosts.

Interface Description

UDP Rang Mode interface is as follows:

Copyright © 3onedata Co., Ltd.

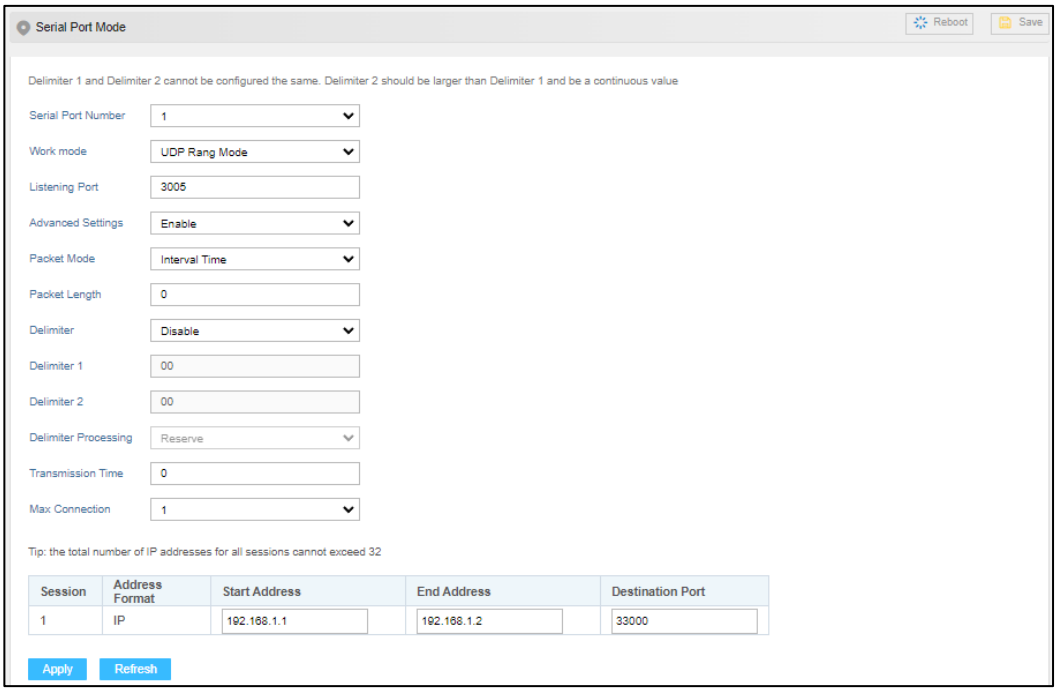

UDP Rang Mode interface main element configuration instructions:

Interface Element	Description
Serial Port Number	Displays the serial number of the device currently configured.
Work mode	The working mode of Serial port of the device, UDP Rang Mode. Note: The configuration parameters displayed under different working modes are different.
Listening Port	The network receives the listening port of UDP data. The user must assign a unique listening port to each serial port so that the system can normally receive UDP data.
Advanced Settings	Enable advanced settings to configure packaging mode, packaging length, and delimiters.
Packing Mode	Serial port data packaging Ethernet data time, the options are as follows: • Interval: after sending the last Ethernet packet for some time, the system packages the received serial port data into Ethernet packets and sends them out; • Forced time: the system packages serial port data received within a specified time into Ethernet packets and transmit them.
Packet Length	For the frame length of the serial data to Ethernet data, the data frame is forwarded within the set time range when it is


Copyright © 3onedata Co., Ltd.

Interface Element	Description
	greater than or equal to the set frame length, and the value ranges from 0 to 1024. It means no limit on data transmission length when it' set to 0. Note: There are some slight deviations between the actual package length value and the set value.
Delimiter	Select the number of delimited characters, the options are as follows: • Disable: disable delimiter function; • 1: enable delimiter 1; • 2: enable Delimiter 2. Note: If the packaging length or the forced transfer time is 0 and the number of delimited character is greater than 0, the system would detect and process the delimiter after receiving serial data. Every time it receives matched delimiter (or combination of characters), the system would send out all cached serial data via network.
Delimiter 1	The Delimiter 1 is expressed in hexadecimal, value range is 00-FF.
Delimiter 2	The Delimiter 2 is expressed in hexadecimal, value range is 00-FF.
Delimiter Processing	Select the delimiter processing method. Options: • Retain: the system would send out the received delimiter and other data via network. • Delimiter+1: the system transfers data after receiving a delimiter and an extra byte. • Delimiter+2: the system transfers data after receiving a delimiter and 2 extra byte. • Delete: the matched delimiter (or combination of delimiter) would be deleted. The system only transmits data except delimiter.
Transmission Time	If the transmission time is greater than 0, the system sends the serial data received within the specified time through a packet, in the range of 0 to 65535 ms. When the transfer time is 0, it means that the data transmission interval is not restricted.
Max connection	The number of host that one serial port has session with. • Each host communicates with serial port in the order of first-in first-out; • The system supports up to 4 sessions.

Copyright © 3onedata Co., Ltd.

Interface Element	Description
Session	The number of UDP sessions corresponds to the maximum number of connections.
Address Format	Destination address format.
Start Address	Enter the start IP address of the UDP rang destination address.
End Address	Enter the end IP address of the UDP rang destination address.
Destination Port	Enter the port number of the opposite host that the device needs to have session with.

8.2.8 Pair Slave Mode

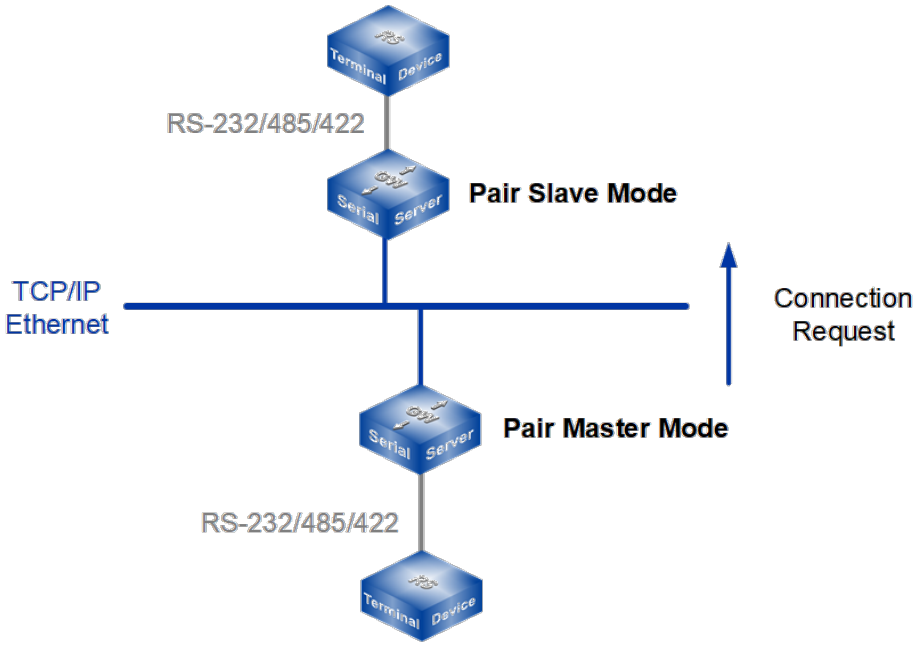

Note:

The device picture mentioned in above figure is only an example, and the actual appearance of the device or serial port type is subject to the device obtained.


Pair Slave mode requires two devices to work together to break through the data transmission distance limit of serial port. In this mode, two devices establish network connection with each other through Ethernet, and transparently transmit data from their respective serial ports to each other.

Copyright © 3onedata Co., Ltd.

A device in Pair Slave mode works as the slave, which is in passive mode, listening to a user-specified port and passively waiting for connection; the other device is the Master, which is in active mode. It actively connects the devices in passive Pair Slave mode according to the IP address and port set by the user. Its destination address is the IP address of Slave and its destination port is the listening port of Slave.

Interface Description

Pair Slave Mode interface as follows:

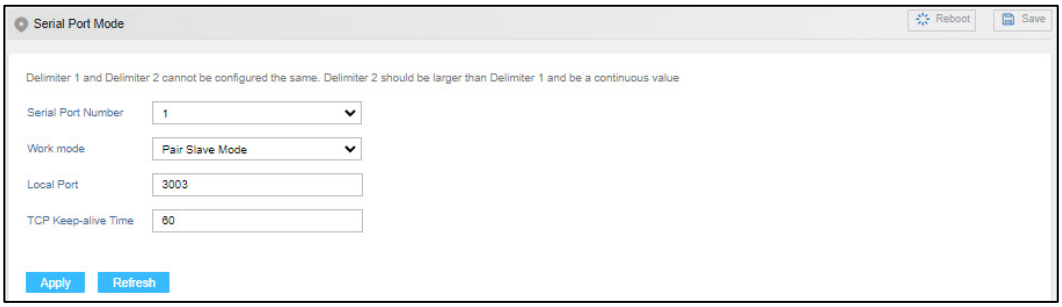

Pair Slave Mode interface main element configuration instructions:

Interface Element	Description
Serial Port Number	Displays the serial number of the device currently configured.
Work mode	The working mode of Serial port of the device, Pair Slaver Mode. Note: The configuration parameters displayed under different working modes are different.
Local Port	Applied to the pair salve mode, that is, the destination port of the pair master mode device.
TCP Keep-alive Time	The device sends a heartbeat packet by setting the time interval. If the device sends a heartbeat packet three times without receiving a response, the existing connection is disconnected. If set TCP Alive Time to "0", the function will be disabled.


8.2.9 Pair Master Mode

Refer to the previous section on Pair Master Mode.

Copyright © 3onedata Co., Ltd.

Interface Description

Pair Master Mode interface is as follows:

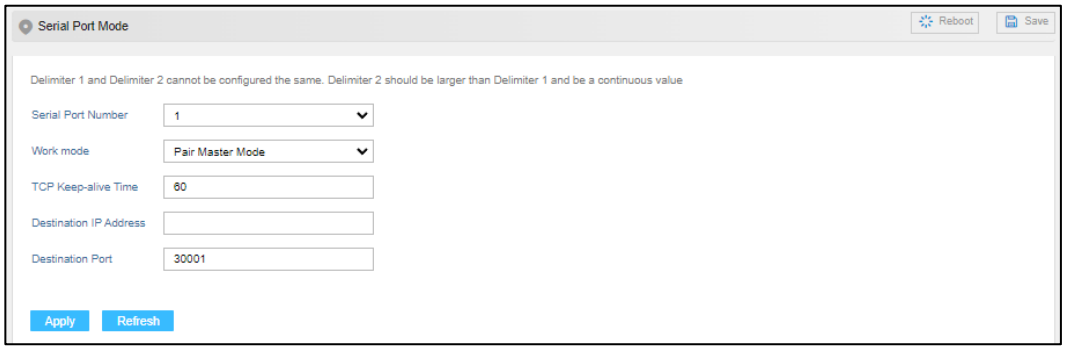


Pair Master Mode interface main element configuration instructions:

Interface Element	Description
Serial Port Number	Displays the serial number of the device currently configured.
Work mode	The working mode of Serial port of the device, Pair Master Mode. Note: The configuration parameters displayed under different working modes are different.
TCP Keep-alive Time	The device sends a heartbeat packet by setting the time interval. If the device sends a heartbeat packet three times without receiving a response, the existing connection is disconnected. If set TCP Alive Time to "0", the function will be disabled.
Destination IP Address	Applied to the pair master mode, that is, the IP address of the pair slave mode device.
Destination Port	Applied to the pair master mode, that is, the listen port of the pair slave mode device.

Copyright © 3onedata Co., Ltd.

8.2.10 Telnet Mode

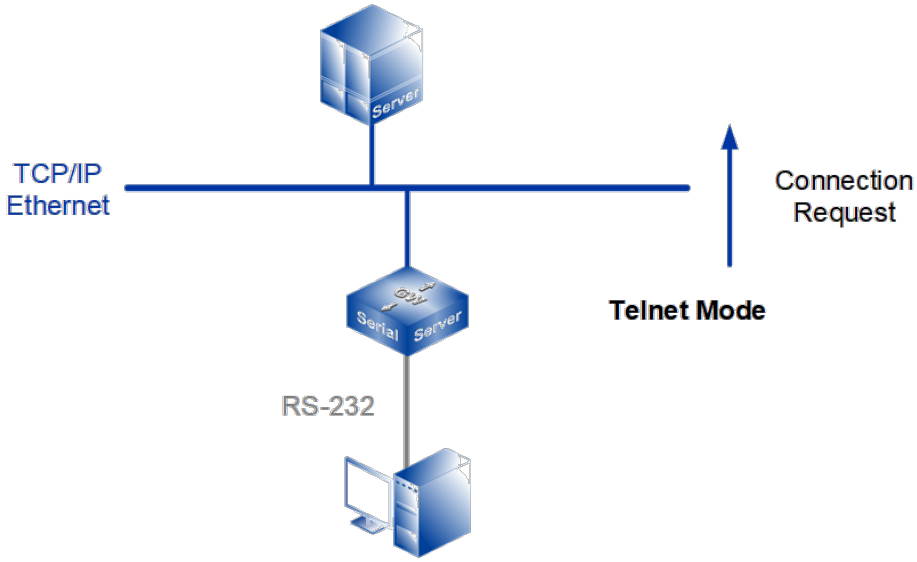


Note:

The device picture mentioned in above figure is only an example, and the actual appearance of the device or serial port type is subject to the device obtained.

In Telnet mode, the device can connect serial terminal device and Ethernet transmission server device, realizing serial terminal device to access the server through Telnet. The Ethernet server device needs to support the Telnet server function, and the device can automatically initiate access connection as a Telnet client. After establishing the connection, the serial terminal device can communicate with the server directly.

Interface Description

The interface of Telnet Mode is as follows:

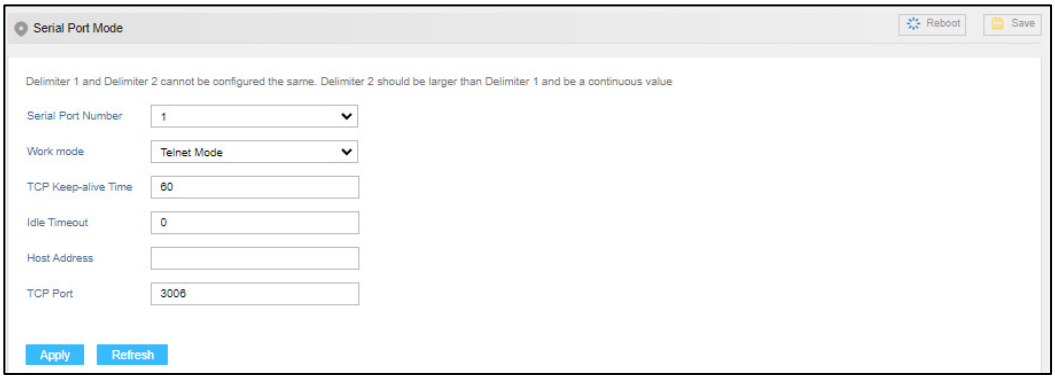


Copyright © 3onedata Co., Ltd.

Main element configuration instructions in Telnet Mode interface

Interface Element	Description
Serial Port Number	Displays the serial number of the device currently configured.
Work mode	The working mode of serial port of the device, Telnet Mode. Note: The configuration parameters displayed under different working modes are different.
TCP Keep-alive Time	The device sends a heartbeat packet by setting the time interval. If the device sends a heartbeat packet three times without receiving a response, the existing connection is disconnected. If set TCP Alive Time to "0", the function will be disabled.
Idle Timeout	Set the idle time of current data communication link of the device. If the idle time-out during communication is larger than 0, the system would close the TCP connection without any data transmission activity occurring in the specified time automatically. 0 means the free TCP connection would not be closed automatically.
Host Address	IP address of the main Telnet server device.
TCP Port	The port number of the Telnet server device. The Telnet protocol default port is 23.

Copyright © 3onedata Co., Ltd.

8.2.11 Reverse Telnet Mode

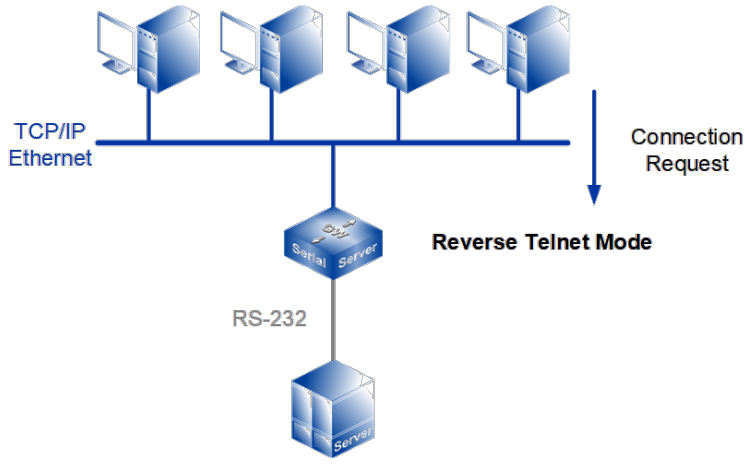


Note:

The device picture mentioned in above figure is only an example, and the actual appearance of the device and serial port type is subject to the device obtained.

In the reverse Telnet mode, opposite to how the Telnet mode works, the device can realize Ethernet terminal device to access RS-232 serial port device through Telnet mode. The network terminal device initiates access to the device as a Telnet client, and the device responds as a Telnet server, and then establishes the connection.

Interface Description

Reverse Telnet Mode interface is as follows:

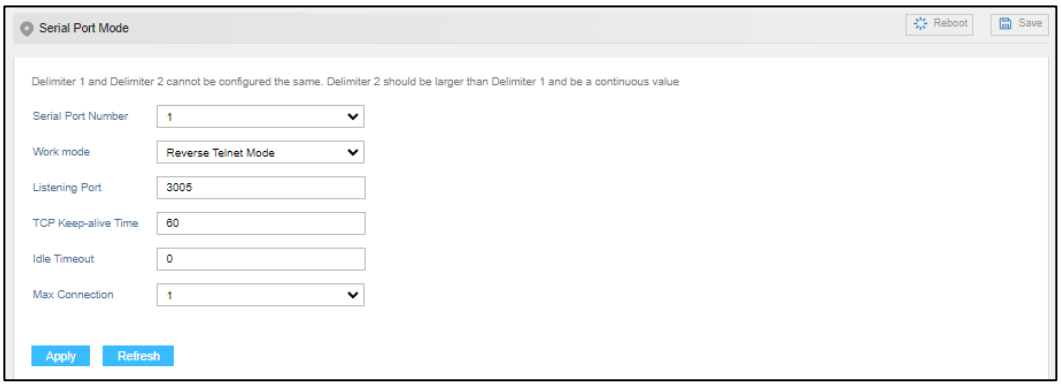

Reverse Telnet Mode interface main element configuration instructions:

Interface Element	Description
Serial Port Number	Display the serial number of the device currently

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	configured.
Work mode	The working mode of serial port of the device, Reverse Telnet Mode. Note: The configuration parameters displayed under different working modes are different.
Listening Port	• The device acts as the local port number used by the Telnet server.
TCP Keep-alive Time	The device sends a heartbeat packet by setting the time interval. If the device sends a heartbeat packet three times without receiving a response, the existing connection is disconnected. If set TCP Alive Time to "0", the function will be disabled.
Idle Timeout	Set the idle time of current data communication link of the device. If the idle time-out during communication is larger than 0, the system would close the TCP connection without any data transmission activity occurring in the specified time automatically. 0 means the free TCP connection would not be closed automatically.
Max Connection	The number of hosts connected to a serial port at the same time. • Each host communicates with serial port in the order of first-in first-out; • The system supports up to 8 connections.


8.2.12 Disable Mode

In Disable Mode, the serial port will be closed and cannot be used normally.

Interface Description

The interface of Disable Mode is as follows:

Copyright © 3onedata Co., Ltd.

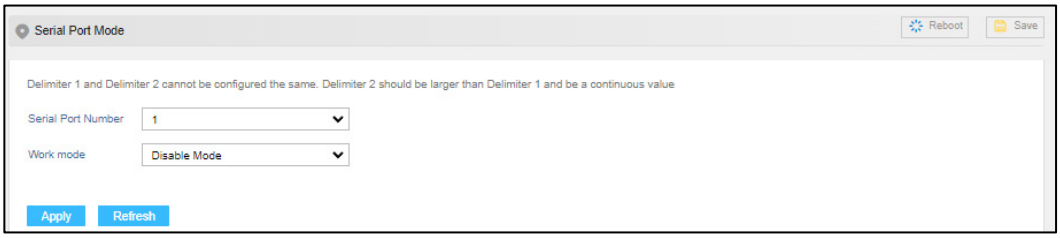

Main element configuration instructions in Disable Mode interface

Interface Element	Description
Serial Port Number	Display the serial number of the device currently configured.
Work mode	The working mode of serial port of the device, Disable Mode: Note: The configuration parameters displayed under different working modes are different.

8.3 Serial Port Count

Function Description


View the statistics of the number of bytes received and sent during the conversion between each serial port and the network.

Operation Path

Open “Serial Server > Serial Port Count” in sequence.

Interface Description

Serial Port Count interface is as follows:

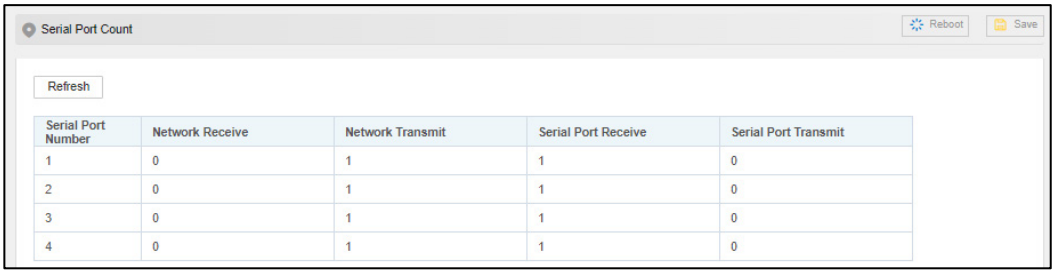

The main element configuration description of serial port count interface:

Copyright © 3onedata Co., Ltd.

Interface Element	Description
Serial Port Number	Display corresponding device serial port number.
Network Receive	Number of bytes received by the device network interface.
Network Transmit	Number of bytes sent by the device network interface.
Serial Port Receive	Number of bytes received by the serial port of the device.
Serial Port Transmit	Number of bytes sent by serial port of device.

8.4 Network Connection state

Function Description


View the working mode and network session connection status of each serial port of the device.

Operation Path

Open in order: "Serial Server > Network Connection State".

Interface Description

The network connection state interface is as follows:

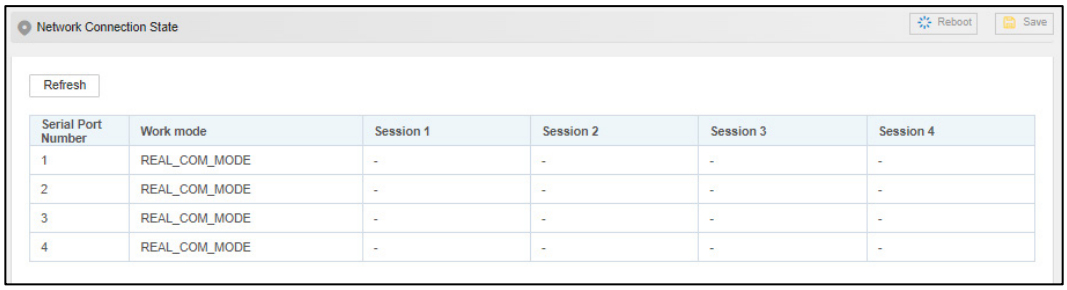

The main elements configuration descriptions of the network connection state interface:

Interface Element	Description
Serial Port Number	Display corresponding device serial port number.
Work mode	Display serial port work mode.
Session1-4	The connection status of the current serial network session, which can support up to 4 sessions, can be shown as follows: • Connected: The connected session will display the IP and port, for example: 192.168.1.16:54248 • Listening

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	• (None): the session is not enabled or UDP is not connected

Copyright © 3onedata Co., Ltd.

9 System Config

9.1 Network Diagnosis

9.1.1 Ping

Function Description

Ping is used to check whether the network is open or network connection speed. The Ping command uses the uniqueness of the IP addresses of the machines on the network to send a packet to the target IP address, and then asks the opposite end to return a packet with the same size to determine the connection status and delay value of the two network devices.

Operation Path

Open in order: "System Config > Network Diagnosis".

Interface Description

The Network diagnosis interface is as follows:



The main element configuration description of Ping interface:

Interface Element	Description
Address	The IP address of the detected device, that is, the

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	destination address. The device can check the network intercommunity to other devices via the ping command.

9.2 Time

9.2.1 NTP Config

The full name of NTP protocol is Network Time Protocol. Its purpose is to deliver uniform, standard time on the international Internet. Specific implementation scheme is appointing several clock source websites in the network to provide user with timing service, and these websites should be able to mutually compare to improve the accuracy. It can provide millisecond time correction, and is confirmed by the encrypted way to prevent malicious protocol attacks.

Function Description

Enable and configure NTP server.

Operation Path

Open in order: "System Config > NTP".

Interface Description

The NTP configuration interface is as follows:



Main element configuration description of NTP configuration interface:

Interface Element	Description
Enable	Enable/Disable NTP configuration.
NTP Server	IP address of NTP server, for example: 192.168.1.1.

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	Note: As NTP client, the system will synchronize time with NTP server every 11 minutes.

9.2.2 Time Zone Configuration

Function Description


Configure the device time zone.

Operation Path

Open in order: "System Config > NTP > Time Zone Config".

Interface Description

Time Zone Configuration interface is as follows:

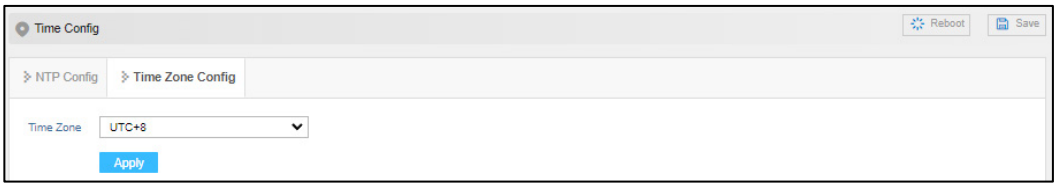

Main elements configuration description of time zone configuration interface:

Interface Element	Description
Time Zone	UTC (Universal Time Coordinated) time zone. Due to different regions, users can freely set the system clock according to the regulations of their own country or region.

9.3 Alarm Configuration

After enabling alarm, when the device port is in an abnormal state, the administrator can be informed in time, and the device state can be quickly repaired to avoid excessive loss.

3onedata proprietary and confidential
Copyright © 3onedata Co., Ltd.

9.3.1 Relay Setting

Function Description


Set the enable and circuit mode of the relay.

Operation Path

Open in order: "System Config > Alarm > Relay Settings".

Interface Description

The relay configuration interface is as follows:

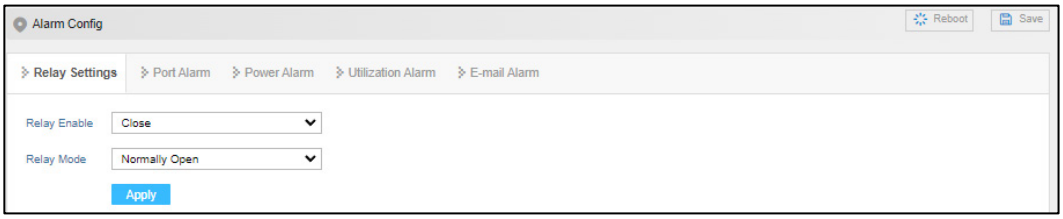

Main elements configuration description of relay configuration interface:

Interface Element	Description
Relay Enable	Enable/disable relay.
Relay Mode	Set the circuit state of the relay: • Normally closed: when the relay is normal without alarm, it is in closed status; when alarm occurs, the relay is in open status; • Normally open: when the relay is normal without alarm, it is in open status; when alarm occurs, the relay is in closed status.

9.3.2 Port Alarm

Function Description

After enabling alarm, when the device port is in an abnormal state, the administrator can be informed in time, and the device state can be quickly repaired to avoid excessive loss.


Copyright © 3onedata Co., Ltd.

Operation Path

Open in order: "System Config > Alarm > Port Alarm".

Interface Description

Port alarm interface is as below:

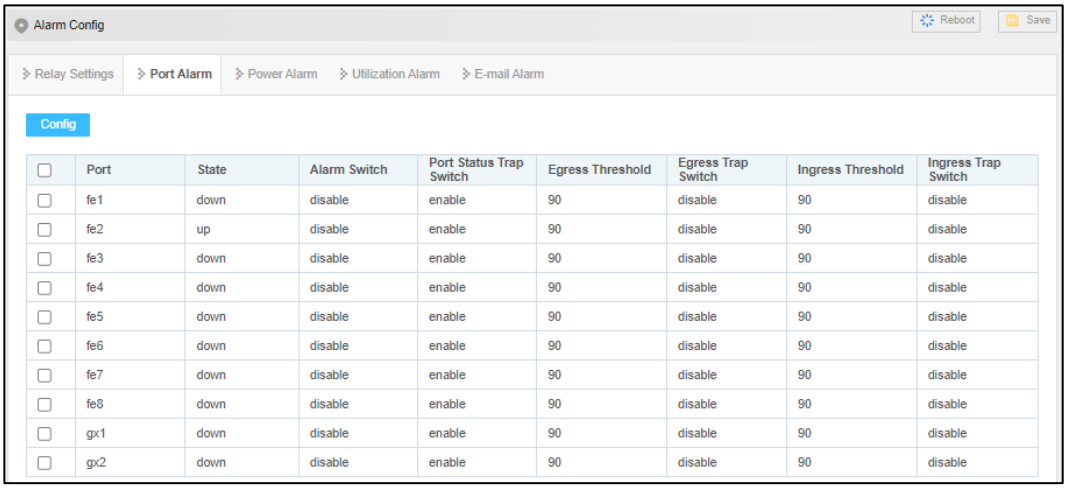

Port	State	Alarm Switch	Port Status Trap Switch	Egress Threshold	Egress Trap Switch	Ingress Threshold	Ingress Trap Switch
fe1	down	disable	enable	90	disable	90	disable
fe2	up	disable	enable	90	disable	90	disable
fe3	down	disable	enable	90	disable	90	disable
fe4	down	disable	enable	90	disable	90	disable
fe5	down	disable	enable	90	disable	90	disable
fe6	down	disable	enable	90	disable	90	disable
fe7	down	disable	enable	90	disable	90	disable
fe8	down	disable	enable	90	disable	90	disable
gx1	down	disable	enable	90	disable	90	disable
gx2	down	disable	enable	90	disable	90	disable

The main element configuration description of port alarm interface:

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
State	Port link status, display items as follows: • up • down
Alarm Switch	Port alarm function status, options as follows: • Enable • Disable
Port Status Trap Switch	Port status Trap switch, options: • Enable • Disable
Egress Trap Switch	Enable the egress Trap switch. Send Trap information when the threshold is reached. Egress Trap switch, options: • Enable • Disable
Egress Threshold	When the egress port reaches the threshold, NMS software prompts an alarm.

Copyright © 3onedata Co., Ltd.

Interface Element	Description
	Value range of threshold is 5-95, unit: %.
Ingress Trap Switch	Enable the ingress Trap switch. Send Trap information when the threshold is reached. Ingress Trap switch, options: • Enable • Disable
Ingress Threshold	When the ingress port reaches the threshold, NMS software prompts an alarm. Value range of threshold is 5-95, unit: %.

9.3.3 Power Alarm

Function Description

Enable/disable the power alarm function.

Note


Only DC dual power supply supports power alarm, and AC current does not support power alarm.

Operation Path

Open in order: "System Config > Alarm > Power Alarm".

Interface Description

Power alarm interface is as below:

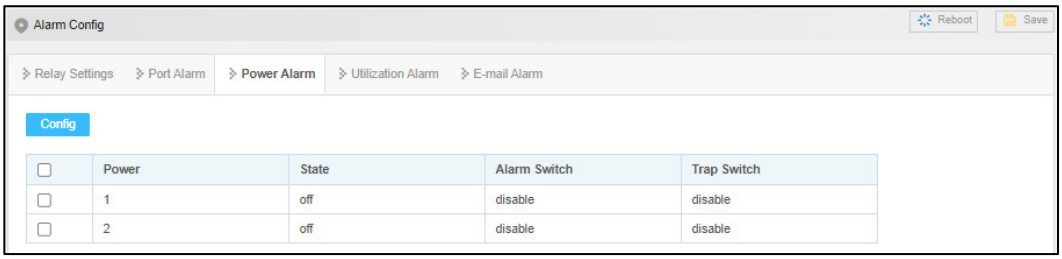

Main elements configuration description of power alarm interface:

Copyright © 3onedata Co., Ltd.

Interface Element	Description
Power	The corresponding name of this device's power supply
State	Device power link status, display items as follows: • On: connected • Off: disconnected
Alarm Switch	Port alarm function status, options as follows: • Enable: alarm has been enabled. • Disable: the alarm is not enabled
Trap Switch	• When the power alarm is enabled or disabled, select "Enable" to send Trap information. • When the power alarm is enabled or disabled, select "Disable" to not send Trap information.

9.3.4 Utilization Alarm

Function Description


On the "Utilization Alarm" page, you can set CPU utilization and memory utilization alarm events. When the alarm event parameter value exceeds the set threshold, the device will continuously send out Trap information to inform relevant personnel. When the alarm event parameter value drops below the set threshold, the device will send out a Trap message to inform the relevant personnel.

Operation Path

Open in order: "System Config > Alarm > Utilization Alarm".

Interface Description

Utilization Alarm interface is as below:

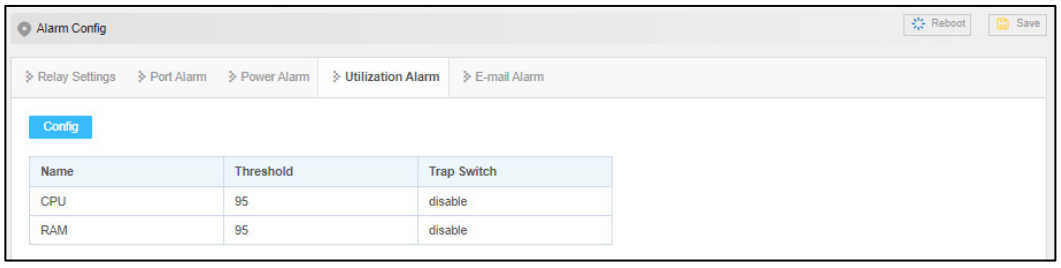

The main element configuration description of utilization alarm interface:

Copyright © 3onedata Co., Ltd.

Interface Element	Description
CPU Trap Switch	Enable the CPU Trap switch, and send Trap information when the CPU utilization reaches the threshold. CPU Trap status, options: • Enable • Disable
CPU Threshold	CPU utilization threshold, when the CPU utilization reaches the threshold, an alarm will be generated. Value range of threshold is 5-95, unit: %.
Memory Trap Switch	Enable the memory Trap switch, and send Trap information when the memory utilization reaches the threshold. Memory Trap status, options: • Enable • Disable
Memory Threshold	Memory utilization threshold, when the memory utilization reaches the threshold, an alarm will be generated. Value range of threshold is 5-95, unit: %.

9.3.5 E-mail Alarm

Function Description


On the page of "E-mail Alarm", user can enable remote alarm.

Operation Path

Open in order: "System Config > Alarm > E-mail Alarm".

Interface Description

E-mail Alarm interface is as follows:

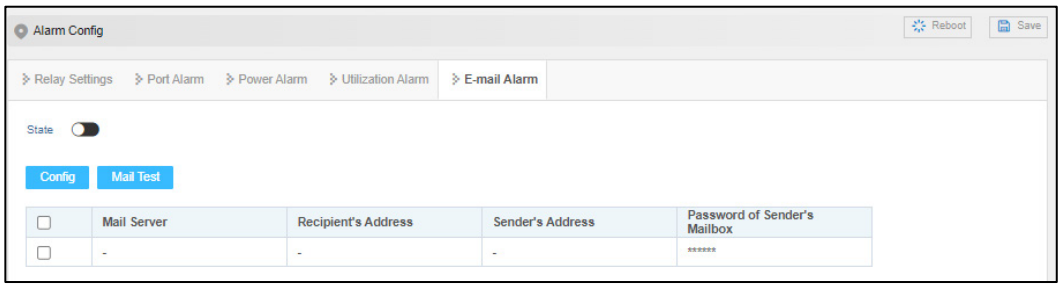

Copyright © 3onedata Co., Ltd.

Main element configuration description of Mail Alarm interface:

Interface Element	Description
State	Enable/disable E-mail alarm.
Mail Server	Server address of used E-mail should be filled according to the account of used E-mail address. The host IP address or used host name that provides E-mail delivery service for the device.
Receipient's Address	E-mail address used by abnormal event receiver.
Sender's Address	E-mail address of sender, account name used for logging in to the E-mail server.
Password of Sender's Mailbox	E-mail password of sender, corresponding password used for logging in to the E-mail account.

Notice

While using E-mail alarm, user must ensure that the switch is connected to network normally and the gateway of switch is same to the one of LAN.

9.4 Config File Management

9.4.1 Config File Upgrade

Function Description

Upload and download configuration files

Operation Path

Open in order: "System Config > Config File Config > Config File Upgrade".

Interface Description

Configuration file upgrade interface is as follows:

Copyright © 3onedata Co., Ltd.



The main element configuration description of Config File Upgrade interface:

Interface Element	Description
Download the File	Download the configuration information files of current switch. Tips: Downloaded configuration files can be uploaded to other homogeneous devices, achieving repeated usage after one-time configuration.
Upload the File	The format of the configuration file is ".conf". Drag the profile into the upgrade box, or click "Click Upload" to select the profile.

Warning

In the process of uploading configuration files or upgrading software, please don't click or configure other WEB page of the switch, not even reboot the switch; otherwise, it will lead to failure of configuration files uploading or software upgrading, or even cause system breakdown of the switch.

9.4.2 Restore Factory Settings

Function Description

Restore the device firmware to the factory configuration.


Operation Path

Open in order: "System Config > Config File Config > Restore Factory Settings".

Interface Description

The Restore Factory Settings interface is as follows.

Copyright © 3onedata Co., Ltd.

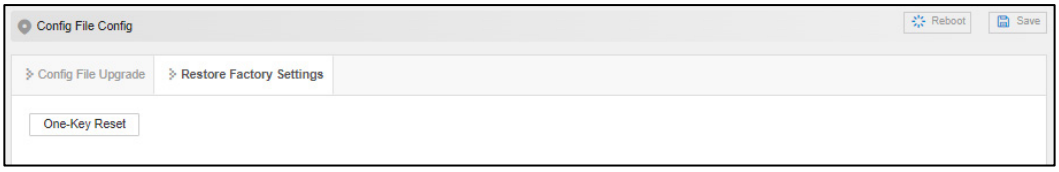

The main element configuration description of configuration file management interface:

Interface Element	Description
One-Key Reset	Restore factory defaults of the switch. Note: Restore factory defaults will cause all devices to be in the factory status, default IP address is "192.168.1.254".

9.5 Upgrade

Function Description

Update and upgrade the device program via web.

Operation Path

Open in order: "System Config > Software Upgrade".

Interface Description

The software upgrade interface is as follows:



The main elements configuration description of software upgrade interface:

Interface Element	Description
Upgrade	Drag the upgrade file into the upgrade box or click "Click Upload" to select the upgraded file in the format of ".bin".

Copyright © 3onedata Co., Ltd.

9.6 Log Information

9.6.1 Log Information

Function Description

On the page of “Log information”, user can check the log information of the device. Log information mainly records user operation, system failure, system safety and other information, including user log, security log and diagnostic log.


- User log: records user operations and system operation information.
- Security log: records information including account management, protocol, anti-attack and status.
- Diagnostic log: records information that assists in problem identification.

Operation Path

Open in order: "System Config > Log Info > Log Info".

Interface Description

The Log Information interface is as follows:

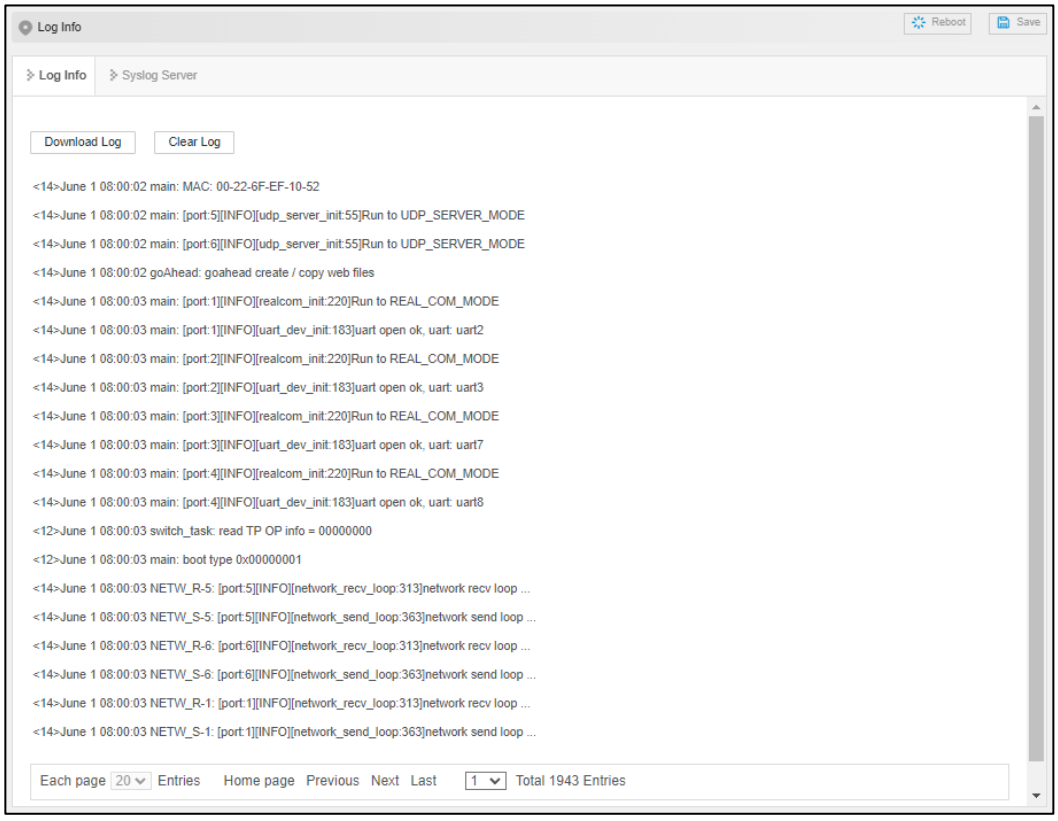

Copyright © 3onedata Co., Ltd.

Main elements configuration description of log information interface:

Interface Element	Description
Download Log	Click the "Download Log" button to download the current log information to the local.
Clear Log	Click the “Clear Log” button to clear the current log information record.

9.6.2 Syslog Server

Function Description

Configure the Syslog server IP address, and the system log information can be sent to the configured syslog server.

Operation Path

Open in order: "System Config > Log Info > Syslog Server".

Interface Description

The Syslog server interface is as follows:



Syslog server interface main elements configuration instructions:

Interface Element	Description
Syslog Server	IP address of syslog server

Copyright © 3onedata Co., Ltd.

10 FAQ

10.1 Sign in Problems

1. **Why the web page display abnormally when browsing the configuration via WEB?**

   Before accessing the WEB, please eliminate IE cache buffer and cookies. Otherwise, the web page will display abnormally.

2. **What should I do if I forget my login password?**

   IF you forget the login password, you can initialize the password by restoring factory settings. The specific method is to search by BlueEyes_Ⅱ software and use restore factory setting function, then the password will be initialized. The initial user name and password are "admin".

3. **Is configuring via WEB browser same to configuring via BlueEyes_Ⅱ software?**

   Both configurations are the same, without conflict.

10.2 Configuration Problem

1. **How to configure the device restore default setting via DIP switch?**

   Turn the DIP switch 2 to ON position, and restore default setting after power on again.

Copyright © 3onedata Co., Ltd.

2. **Why the bandwidth can't be increased after configuring Trunking (port aggregation) function?**

   Check whether the port attributes set to Trunking are consistent, such as rate, duplex mode, VLAN and other attributes.

3. **How to deal with the problem that part of switch ports are impassable?**

   When some ports on the switch are impassable, it may be network cable, network adapter and switch port faults. User can locate the faults via following tests:

   - Keep connected computer and switch ports unchanged, change other network cables;
   - Keep connected network cable and switch port unchanged, change other computers;
   - Keep connected network cable and computer unchanged, change other switch port;
   - If the switch port faults are confirmed, please contact supplier for maintenance.

4. **How about the order of port self-adaption state detection?**

   The port self-adaption state detection is conducted according to following order: 1000Mbps full duplex, 100Mbps full duplex, 100Mbps half-duplex, 10Mbps full duplex, 10Mbps half-duplex, detect in order from high to low, connect automatically in supported highest speed.

10.3 Alarm Problem

1. **When the device alarms, except BlueEyes_II software nether alarm information display area will display alarm information, is there any other way to notify technical staffs?**

   When the device alarms, monitoring host computer buzzer will continue to emit alarm sounds.

10.4 Indicator Problem

1. **Why is the power supply indicator off?**

Copyright © 3onedata Co., Ltd.

Possible reasons include:

- Not connected to the power socket; troubleshooting, connected to the power socket.
- Power supply or indicators faults; troubleshooting, change the power supply or device test.
- Power supply voltage can't meet the device requirements; troubleshooting, configure the power supply voltage according to the device manual.

2. **Link/Act indicator isn't bright, what's the reason?**

Possible reasons include:

- The network cable portion of Ethernet copper port is disconnected or bad contact; troubleshooting, connect the network cable again.
- Ethernet terminal device or network card works abnormally; troubleshooting, eliminate the terminal device fault.
- Not connected to the power socket; troubleshooting, connected to the power socket.
- Interface rate doesn't match the pattern; troubleshooting, examine whether the device transmission speed matches the duplex mode.

3. **Ethernet copper port and fiber port indicator are connected normally, but can't transmit data, what's the reason?**

When the system is power on or network configuration changes, the device and switch configuration in the network will need some time. Troubleshooting, after the device and switch configuration are completed, Ethernet data can be transmitted; if it's impassable, power off the system, and power on again.

4. **Why does the communication crashes after a period of time, namely, it cannot communicate, and it returns to normal after restarting?**

Reasons may include:

- Surrounding environment disturbs the product; troubleshooting, product grounding adopts shielding line or shields the interference source.
- Site wiring is not normative; Troubleshooting, optical fiber, network cable, optical cable cannot be arranged with power line and high-voltage line.

3onedata proprietary and confidential
Copyright © 3onedata Co., Ltd.

- Network cable is disturbed by static electricity or surge; Troubleshooting, change the shielded cable or install a lightning protector.
- High and low temperature influence; troubleshooting, check the device temperature usage range.

3onedata proprietary and confidential
Copyright © 3onedata Co., Ltd.

11 Maintenance and Service

Since the date of product delivery, our company provides 5-year product warranty. According to our company's product specification, during the warranty period, if the product exists any failure or functional operation fails, our company will repair or replace the product for users free of charge. However, the commitments above do not cover damage caused by improper usage, accident, natural disaster, incorrect operation or improper installation.

In order to ensure that consumers benefit from our company's managed switch products, consumers can get help and solutions in the following ways:

- Internet Service;
- Service Hotline;
- Product repair or replacement;

11.1 Internet Service

More useful information and tips are available via our company website. Website: http://www.3onedata.com

11.2 Service Hotline

Users of our company's products could call technical support office for help. Our company has professional technical engineers to answer your questions and help you solve the product or usage problems ASAP. Free service hotline: +86-4008804496


Copyright © 3onedata Co., Ltd.

11.3 Product Repair or Replacement

As for the product repair, replacement or return, customers should firstly confirm with the company's technical staff, and then contact the salesmen to solve the problem. According to the company's handling procedure, customers should negotiate with our company's technical staff and salesmen to complete the product maintenance, replacement or return.

3onedata proprietary and confidential
Copyright © 3onedata Co., Ltd.

3onedata

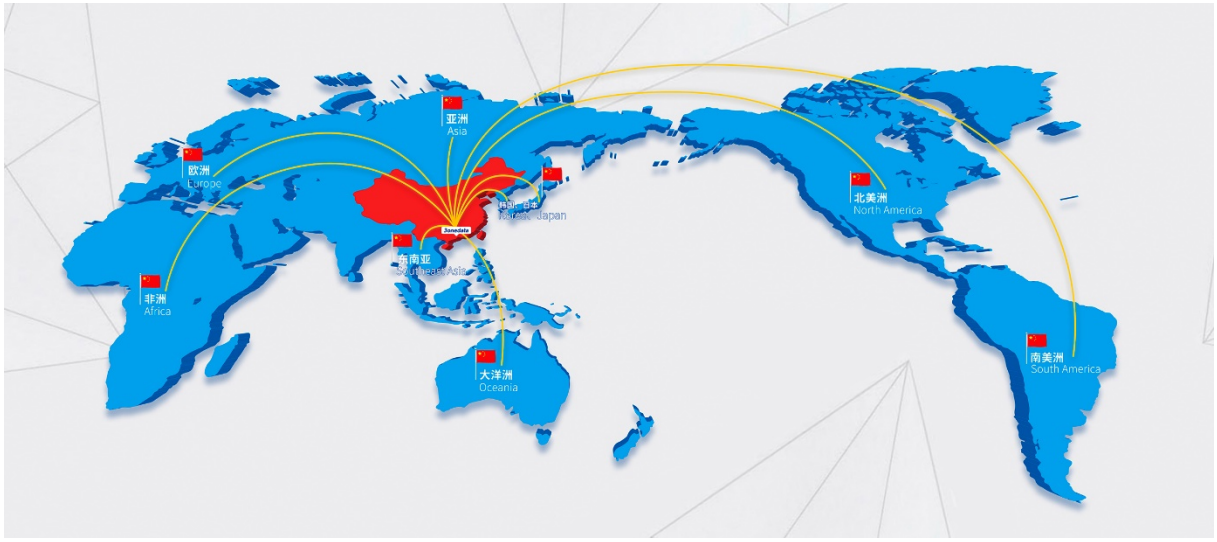

3onedata Co., Ltd.

Headquarter address:	3/B, Zone 1, Baiwangxin High Technology Industrial Park, Song Bai Road, Nanshan District, Shenzhen, 518108, China
Technology support:	tech-support@3onedata.com
Service hotline:	4008804496
Official Website:	http://www.3onedata.com